

WX-C570R

SERVICE MANUAL

AEP Model
UK Model



Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol $\square\square$ are trademarks of Dolby Laboratories Licensing Corporation.

CD Section	Model Name Using Similar Mechanism	CDX-3180
	CD Drive Mechanism Type	MG-363X-121
	Optical Pick-up Name	KSS-521A
TC Section	Model Name Using Similar Mechanism	XR-2800
	Tape Transport Mechanism Type	MG-25E-136

SPECIFICATIONS

CD player section

Signal-to-noise ratio 96 dB
Frequency response 10 - 20,000 Hz
Wow and flutter Below measurable limit

Cassette player section

Tape track 4-track 2-channel stereo
Wow and flutter 0.08 % (WRMS)
Frequency response 30 - 18,000 Hz
Signal-to-noise ratio

Cassette type	Dolby B NR	Dolby NR off
TYPE II, IV	67 dB	58 dB
TYPE I	64 dB	55 dB

Tuner section

FM

Tuning range 87.5 - 108.0 MHz
Antenna terminal External antenna connector
Intermediate frequency 10.7 MHz
Usable sensitivity 9 dBf
Selectivity 75 dB at 400 kHz
Signal-to-noise ratio 65 dB (stereo),
68 dB (mono)
Harmonic distortion at 1 kHz
0.7% (stereo),
0.4% (mono)
Separation 35 dB at 1 kHz
Frequency response 30 - 15,000 Hz

MW/LW

Tuning range MW : 531 - 1,602 kHz
LW : 153 - 281 kHz
Antenna terminal External antenna connector
Intermediate frequency 10.71 MHz/450 kHz
Sensitivity MW : 30 μ V
LW : 50 μ V

Power amplifier section

Outputs Speaker outputs
(sure seal connectors)
Speaker impedance 4 - 8 ohms
Maximum power output 35 W \times 4 (at 4 ohms)

- Continued on next page -

CHANGER CONTROL AUDIO MASTER



SONY®

General

Outputs	Line outputs (2) Power antenna relay control lead Power amplifier control lead Telephone ATT control lead
Tone controls	Bass ± 10 dB at 100 Hz Treble ± 10 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 × 100 × 173 mm (w/h/d)
Mounting dimension	Approx. 178 × 100 × 155 mm (w/h/d)
Mass	Approx. 2.2 kg
Supplied accessories	Parts for installation and connections (1 set) Decoy cover (1) Labels for optional rotary commander (2)

Design and specifications are subject to change without notice.

SERVICE NOTE

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

NOTES ON PICK-UP FLEXIBLE BOARD

The pick-up flexible board in this set is secured to the optical pick-up with an adhesive tape. Once the tape is removed, an adhering force becomes weak, and it cannot be reused.

Therefore, if the optical pick-up is replaced, replace also the pick-up flexible board with a new one.


SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

TABLE OF CONTENTS

<p>1. GENERAL</p> <ul style="list-style-type: none"> Location of Controls 4 Getting Started 5 Setting the Clock 5 CD Player 5 Cassette Player 6 Radio 7 RDS 8 Other Functions 11 CD/MD Changer 12 Connections 15 <p>2. DISASSEMBLY</p> <ul style="list-style-type: none"> 2-1. Front Panel Assy 17 2-2. Key Board 17 2-3. CD Mechanism Block 18 2-4. Heat Sink 18 2-5. CD Board 19 2-6. Tape Mechanism Block 19 2-7. Main Board 20 2-8. Chassis (T) Sub Assy 20 2-9. Lever Assy 21 2-10. Servo Board 21 2-11. Roller Assy 22 2-12. Chassis (OP) (O/S) Assy 22 2-13. Optical Pick-up Block 23 <p>3. ASSEMBLY OF MECHANISM DECK</p> <ul style="list-style-type: none"> Housing 24 Arm (Suction) 24 Lever (LDG-A)/(LDG-B) 25 Gear (Loading FT) 25 Guide (C), Guide 26 Mounting Position of Main Motor Assy (M904) 26 	<p>4. MECHANICAL ADJUSTMENTS 27</p> <p>5. ELECTRICAL ADJUSTMENTS</p> <ul style="list-style-type: none"> Tape Section 27 Tuner Section 28 CD Section 32 <p>6. DIAGRAMS</p> <ul style="list-style-type: none"> 6-1. Block Diagram –CD Section– 33 6-2. Block Diagram –Tape Section– 35 6-3. Block Diagram –Main Section– 37 6-4. IC Pin Descriptions 39 6-5. Circuit Boards Location 44 6-6. Printed Wiring Boards –CD Mechanism Section– 45 6-7. Schematic Diagram –CD Mechanism Section– 47 6-8. Schematic Diagram –CD Section– 50 6-9. Printed Wiring Board –CD Section– 53 6-10. Schematic Diagram –Control Section– 55 6-11. Printed Wiring Board –Control Section– 57 6-12. Printed Wiring Board –Main Section– 61 6-13. Schematic Diagram –Main Section– 65 <p>7. EXPLODED VIEWS</p> <ul style="list-style-type: none"> 7-1. Cover Section 73 7-2. Front Panel Section 74 7-3. Chassis Section 75 7-4. CD Mechanism Section (1) 76 7-5. CD Mechanism Section (2) 77 7-6. CD Mechanism Section (3) 78 7-7. Tape Mechanism Section 79 <p>8. ELECTRICAL PARTS LIST 80</p>
---	---

Location of controls

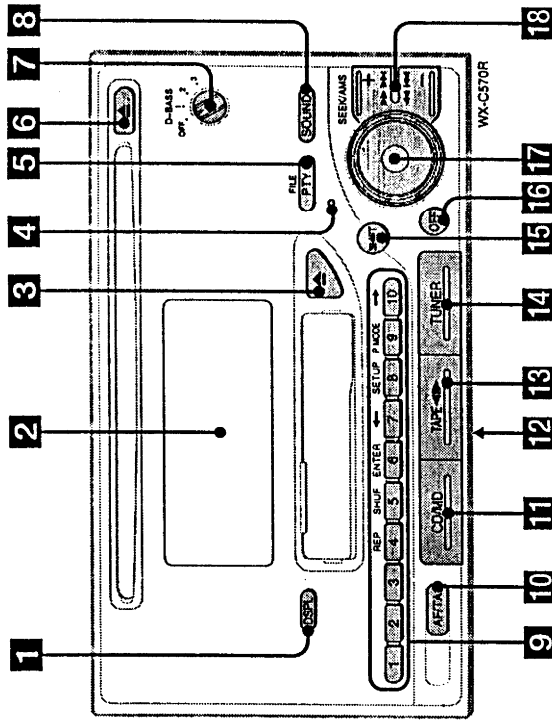

EN

Refer to the pages for details.

- 1** DSP (display mode change) button 8, 10, 13, 14, 21, 22, 24
- 2** Display window
- 3** Δ (eject for tape) button 9
- 4** Reset button 6
- 5** PTY/FILE button
RDS programme 17
Disc Memo 23, 24
- 6** Δ (eject for CD) button 7
- 7** D-BASS dial 21
- 8** SOUND button 20
During radio reception:
Number buttons 12, 15, 16
During CD/MD playback:
Direct disc selection buttons 22
- 10** AF/TA button 14, 15, 16
- 11** CD/MD (disc play*CD/MD changer select) button 7, 21, 24
- 12** POWER SELECT switch (located on the bottom of the unit)
See "POWER SELECT Switch" in the Installation/Connections manual.

- 13** TAPE/◀▶ (playback/transport direction change) button 9, 10
- 14** TUNER button 11, 12
- 15** SHIFT button
P MODE 8, 11, 12, 13, 15, 16, 22, 24, 25
REP 9, 10, 22
SET UP 6, 18, 20
SHUF 9, 23
- 16** OFF button 7, 9
- 17** Dial (volume/bass/treble/left-right/front-rear control) 6, 20, 23
- 18** SEEK/AMS (seek/Automatic Music Sensor/manual search) button 8, 10, 12, 14, 17, 22, 24

EN


SECTION 1 GENERAL

This section extracted from instruction manual.

Getting Started

Resetting the unit

Before operating the unit for the first time or after replacing the car battery, you must reset the unit. Press the reset button with a pointed object, such as a ball-point pen.

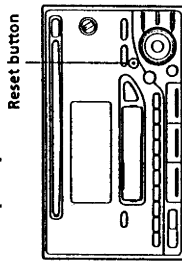


Notes

- Pressing the reset button will erase the clock and some memorized functions.
- When you connect the power supply cord to the unit or reset the unit, wait for about 10 seconds before you insert a disc. If you insert a disc within these 10 seconds, the unit will not be reset, and you will have to press the reset button again.

Using the decoy cover

To deter theft of this unit, use the decoy black ashtray cover when not using your car.

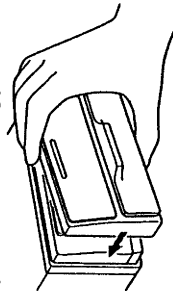

Note


If the unit does not extend 6 mm from the dash panel, you may not be able to use the decoy cover.

Setting the clock


The clock uses a 24-hour digital indication.

Example: Set the clock to 10:08

- Press **SHIFT**, then press **8** (SET UP).



- Press **10** (→).




The hour digit flashes.


- Set the hour.



to go backward
to go forward



- Press **10** (→).




The minute digits flash.


- Set the minute.



to go backward
to go forward



- Press **SHIFT**.



The clock starts.

- Press **SHIFT**.


After the mode setting is complete, the display goes back to normal playback mode.

Note
If the POWER SELECT switch on the bottom of the unit is set to the **CD** position, turn the power on first, then set the clock.

CD Player


Listening to a CD

Simply insert the CD. Playback starts automatically. Labelled side up

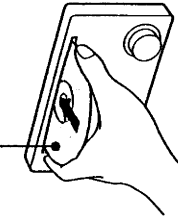

If a CD is already inserted, press **CD/MD** repeatedly until "CD" appears.

Elapsed playing time



Track number

To Press


Stop playback **⏏** or **OFF**

Eject the CD **⏏**

Notes

- To play back an 8cm CD, use the optional Sony compact disc single adapter (CSA-8).
- If you cannot insert a CD when the POWER SELECT switch is set to **CD** position, try turning on the power to the radio or cassette first.
- If you leave the disc in the insertion slot for more than 15 seconds after pressing **⏏**, the disc will reinsert automatically to protect the disc.

Changing the displayed items
Each time you press **(USPL)**, the item changes as follows:

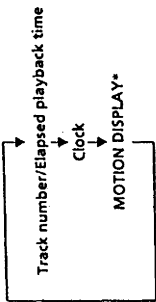

* All the items above are scrolled in the display one by one in order.

Locating a specific track

— Automatic Music Sensor (AMS)

During playback, press either side of **(SEEK/AMS)** momentarily.



To locate succeeding tracks

To locate preceding tracks

Locating a specific point in a track

— Manual Search

During playback, press and hold either side of **(SEEK/AMS)**. Release the button when you have found the desired point.



To search forward

To search backward

Note
If "L L L L" or "r r r r" appears in the display, that means you have reached the beginning or the end of the disc and you cannot go any further.

Playing a CD in various modes

You can play CDs in various modes:


- **INTRO** (Intro Scan) lets you play the first 10 seconds of all the tracks.
- **REP** (Repeat Play) repeats the current track.
- **SHUF** (Shuffle Play) plays all the tracks in random order.

Searching for the desired track


— Intro scan

1 During playback, press **(SHIFT)**.


Every time you press **(SHIFT)**, only the items you can select light up.



2 Press **(P MODE)** repeatedly until "INTRO" appears.



3 Press **(D →)** to select "INTRO-ON".



Intro Scan starts.

4 Press **(SHIFT)**.


To go back to normal playback mode, select "INTRO-OFF" in step 3 above.

Playing tracks repeatedly

— Repeat Play

1 During playback, press **(SHIFT)**.

2 Press **(4)** (REP) repeatedly until "REP-1" appears.



Repeat Play starts.

3 Press **(SHIFT)**.


To go back to normal playback mode, select "REP-OFF" in step 2 above.

Playing tracks in random order

— Shuffle Play

1 During playback, press **(SHIFT)**.

2 Press **(5)** (SHUF) repeatedly until "SHUF-1" appears.



Shuffle Play starts.


3 Press **(SHIFT)**.

To go back to normal playback mode, select "SHUF-OFF" in step 2 above.


Cassette Player

Listening to a tape


Insert a cassette.
Playback will start automatically.

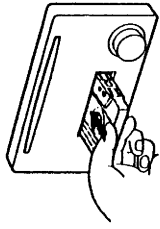

If a cassette is already inserted, press **(TAPE)** (◀▶) until "FWD" or "REV" appears to start playback.



The side facing up is played.




The side facing down is played.

Tip
To change the tape transport direction, press **(TAPE)** (◀▶) again during tape playback.

To	Press
Stop playback	(OFF)
Eject the cassette	(▶)

Fast-winding the tape

During playback, press and hold either side of **SEEK/AMS**. Release the button when you have found the desired point.



To start playback during fast-forwarding or rewinding, press **TAPE** (◀▶).

Locating the beginning of a track

— Automatic Music Sensor (AMS)

You can skip up to nine tracks at one time.

During playback, press either side of **SEEK/AMS** momentarily.



To locate the succeeding tracks


To locate the preceding tracks

Note

- The AMS function may not work when:
 - the blanks between tracks are shorter than four seconds.
 - there is noise between tracks.
 - there are long sections of low volume or quiet sections.

Changing the displayed items

Each time you press **DISP** during tape playback, the display changes as follows:



*1 While the ATA function is activated.


*2 All the items above are scrolled in the display one by one in order.

Playing tracks repeatedly

— Repeat play

You can repeat play the current track.

- During playback press **SHIFT**. Every time you press **SHIFT**, only the items you can select light up.



- Press **REP** repeatedly until "REP-ON" appears. Repeat play starts.

- Press **SHIFT**.

To go back to the normal playback mode, select "REP-OFF" in step 2 above.

Playing a tape in various modes


You can play the tape in various modes:

- INTRO** (Intro Scan) lets you play the first 10 seconds of all the tracks.
- NR** (Dolby NR) lets you select the Dolby® NR B system.
- METAL** plays CrO₂ or metal tape.
- BLSKP** (Blank Skip) skips blanks longer than eight seconds.
- ATA** (Automatic Tuner Activation) turns on the tuner automatically while fast-winding the tape.
- Dolby noise reduction** manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double-D symbol DD are trademarks of Dolby Laboratories Licensing Corporation.


- Press **SHIFT**, then press **DISP** (P MODE) repeatedly until the desired play mode appears.

Each time you press **DISP** (P MODE), the item changes as follows:

INTRO → NR → METAL → BLSKP → ATA



- Press **DISP** (→) to select the desired play mode setting (for example: ON or OFF).



Playback starts.

- Press **SHIFT**.

To go back to the normal playback mode, select "OFF" in step 2 above.

Radio

Memorizing stations automatically


— Best Tuning Memory (BTM)

The unit selects the stations with the strongest signals and memorizes them in the order of their frequencies. You can store up to 10 stations on each band (FM1, FM2, MW and LW).

Caution

When tuning in stations while driving, use Best Tuning Memory to prevent accidents.

- Press **TUNER** repeatedly to select the band. Each time you press **TUNER**, the band changes as follows:



- Press **SHIFT**, then press **DISP** (P MODE) repeatedly until "B.T.M" appears.

- Press **DISP** (→).

The unit stores stations in the order of their frequencies on the number buttons. A beep sound and the setting is stored.

- Press **SHIFT**.

Notes

- The unit does not store stations with weak signals. If only a few stations are received, some number buttons will retain their former setting.
- When a number is indicated in the display, the unit starts storing stations from the one currently displayed.

Memorizing only the desired stations

You can store up to 10 stations on each band in the order of your choice.

- 1 Press **(TUNER)** repeatedly to select the band (FM1, FM2, MW or LW).
- 2 Press either side of **(SEEK/AMS)** to tune in the station you want to store on the number button.
- 3 Keep the desired number button **(1)** to **(10)** pressed for two seconds until "MEM" appears. The number button indication appears in the display.

Note
If you try to store another station on the same number button, the previously stored station will be erased.

Receiving the memorized stations

- 1 Press **(TUNER)** repeatedly to select the band (FM1, FM2, MW or LW).
- 2 Press the number button **(1)** to **(10)** momentarily where the desired station is stored.

If you cannot tune in a preset station

Press either side of **(SEEK/AMS)** momentarily to search for the station (automatic tuning). Scanning stops when the unit receives a station. Press either side of **(SEEK/AMS)** repeatedly until the desired station is received.

Note
If the automatic tuning stops too frequently, press **(SHIFT)**, then press **(P MODE)** repeatedly until "LOCAL" (local seek mode) is displayed. Then press **(1)** to **(10)** to select "LOCAL-ON". Press **(SHIFT)**. Only the stations with relatively strong signals will be tuned in.

Tip
If you know the frequency of the station you want to listen to, press and hold either side of **(SEEK/AMS)** for two seconds until the desired frequency appears (manual tuning).

If FM stereo reception is poor — Monaural Mode


- 1 Press **(SHIFT)**, then press **(P MODE)** repeatedly until "MONO" appears.
- 2 Press **(1)** to **(10)** repeatedly until "MONO-ON" appears. The sound improves, but becomes monaural ("ST" disappears).

- 3 Press **(SHIFT)**.

To go back to normal mode, select "MONO-OFF" in step 2 above.

Changing the displayed items

Each time you press **(DSP)**, the item changes as follows:



- *1 When you tune in an FM station that transmits RDS data, the station name appears.
- *2 All the items above are scrolled in the display one by one in order.

RDS

Overview of the RDS function

Radio Data System (RDS) is a broadcasting service that allows FM stations to send additional digital information along with the regular radio programme signal. Your car stereo offers you a variety of services. Here are just a few: re-tuning the same programme automatically, listening to traffic announcements and locating a station by programme type.


Notes

- Depending on the country or region, not all of the RDS functions are available.
- RDS may not work properly if the signal strength is weak or if the station you are tuned to is not transmitting RDS data.

Displaying the station name


The name of the current station lights up in the display.

Select an FM station (page 11). When you tune in an FM station that transmits RDS data, the station name appears in the display.



Changing the displayed items

Each time you press **(DSPL)**, the item changes as follows:



- All the items above are scrolled in the display one by one in order.


Note

"NO NAME" appears if the received station does not transmit RDS data.

Re-tuning the same programme automatically

— Alternative Frequencies (AF)

The Alternative Frequencies (AF) function automatically selects and re-tunes the station with the strongest signal in a network. By using this function, you can continuously listen to the same programme during a long-distance drive without having to re-tune the station manually.

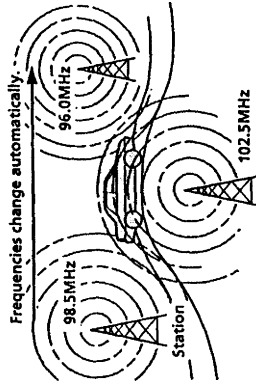


- 1 Select an FM station (page 11).
- 2 Press **(AF/TA)** repeatedly until "AF-ON" appears.
The unit starts searching for an alternative station with a stronger signal in the same network.

Note

When there is no alternative station in the area and you do not need to search for an alternative station, turn the AF function off by pressing **(AF/TA)** repeatedly until "AF-TA-OFF" appears.

Changing the displayed items

Each time you press **(AF/TA)**, the item changes as follows:



- Select this to turn on both the AF and TA functions.

Notes

- "NO AF" and the station name flash alternately, if the unit cannot find an alternative station in the network.
- If the station name starts flashing after selecting a station with the AF function on, this indicates that no alternative frequency is available. Press **(SEEK/AMS)** while the station name is flashing (within eight seconds). The unit starts searching for another frequency with the same PI (Programme Identification) data ("PI SEEK" appears and no sound is heard). If the unit cannot find another frequency, "NO PI" appears, and the unit returns to the originally selected frequency.

Listening to a regional programme

The "REG-ON" (regional on) function lets you stay tuned to a regional programme without being switched to another regional station. (Note that you must turn the AF function on.) The unit is factory preset to "REG-ON," but if you want to turn off the function, do the following.

- 1 Press **(SHIFT)**, then press **(P MODE)** repeatedly until "REG" appears.
- 2 Press **(ID) (->)** repeatedly until "REG-OFF" appears.
- 3 Press **(SHIFT)**.

Note that selecting "REG-OFF" might cause the unit to switch to another regional station within the same network.

To go back to regional on, select "REG-ON" in step 2 above.

Note

This function does not work in the United Kingdom and in some other areas.

Local Link function (United Kingdom only)

The Local Link function lets you select other local stations in the area, even though they are not stored on your number buttons.

- 1 Press a number button that has a local station stored on it.
- 2 Within five seconds, press the number button of the local station again.
- 3 Repeat this procedure until the desired local station is received.

Listening to traffic announcements

The Traffic Announcement (TA) and Traffic Programme (TP) data let you automatically tune in an FM station is broadcasting traffic announcements even though you are listening to other programme sources.

- Press **(AF/TA)** repeatedly until "TA-ON" or "AF,TA-ON" appears.
The unit starts searching for traffic information stations. "TP" appears in the display when the unit finds a station broadcasting traffic announcements. When the traffic announcement starts, "TA" flashes. The flashing stops when the traffic announcement is over.

Tip

If the traffic announcement starts while you are listening to another programme source, the unit automatically switches to the announcement and goes back to the original source when the announcement is over.

Notes

- "NO TP" flashes for five seconds if the received station does not broadcast traffic announcements. Then, the unit starts searching for a station that broadcasts traffic announcements.
- When "EON" appears with "TP" in the display, the current station makes use of broadcast traffic announcement of other stations in the same network.

To cancel the current traffic announcement

Press **(AFTA)** momentarily. To cancel all traffic announcements, turn off the function by pressing **(AFTA)** until "AF.TA-OFF" appears.

Tip

You can also cancel the traffic announcements by pressing **(TUNE)** on the master unit or **(SOURCE)** on the optional rotary commander RM-X4S.

Presetting the volume of traffic announcements

You can preset the volume level of the traffic announcements beforehand so you won't miss the announcement. When a traffic announcement starts, the volume will be automatically adjusted to the preset level.

- 1 Select the desired volume level.
- 2 Press **(AFTA)** for two seconds. "TA" appears and the setting is stored.

Receiving emergency announcements

If an emergency announcement comes in while you are listening to the radio, the programme will be automatically switched to the announcement. If you are listening to a source other than the radio, the emergency announcements will be heard if you set AF or TA on. The unit will then automatically switch to these announcements no matter what you are listening to at the time.

Presetting the RDS stations with the AF and TA data

When you preset RDS stations, the unit stores each station's data as well as its frequency, so you don't have to turn on the AF or TA function every time you tune in the preset station. You can select a different setting (AF, TA, or both) for individual preset stations, or the same setting for all preset stations.

Presetting the same setting for all preset stations

- 1 Select an FM band (page 11).
- 2 Press **(AFTA)** repeatedly to select either "AF-ON", "TA-ON" or "AF.TA-ON" (for both AF and TA functions). Note that selecting "AF.TA-OFF" stores not only RDS stations, but also non-RDS stations.
- 3 Press **(SHIFT)**, then press **(P MODE)** repeatedly until "B.T.M" appears.
- 4 Press **(D) (->)**.
- 5 Press **(SHIFT)**.

Presetting different settings for each preset station

- 1 Select an FM band, and tune in the desired station (page 12).
- 2 Press **(AFTA)** repeatedly to select either "AF-ON", "TA-ON" or "AF.TA-ON" (for both AF and TA functions).
- 3 Press the desired number button until "MEM" appears. Repeat from step 1 to preset other stations.

Tip

If you want to change the AF and/or TA setting after you tuned in the preset station, you can do so by turning the AF or TA function on or off.

Locating a station by programme type


You can locate the station you want by selecting one of the programme types shown below.

Programme types	Display
News	NEWS
Current Affairs	AFFAIRS
Information	INFO
Sports	SPORT
Education	EDUCATE
Drama	DRAMA
Culture	CULTURE
Science	SCIENCE
Varied	VARIED
Popular Music	POP M
Rock Music	ROCK M
Middle of the Road Music	M.O.R.M
Light Classical	LIGHT M
Classical	CLASSICS
Other Music Type	OTHER M
Weather	WEATHER
Finance	FINANCE
Children's programmes	CHILDREN
Social Affairs	SOCIAL A
Religion	RELIGION
Phone In	PHONE IN
Travel	TRAVEL
Leisure	LEISURE
Jazz Music	JAZZ
Country Music	COUNTRY
National Music	NATION M
Oldies Music	OLDIES
Folk Music	FOLK M
Documentary	DOCUMENT
Not specified	NONE

Note


You cannot use this function in some countries where no PTY (Programme Type selection) data is available.

- 1 Press **(PTY/FILE)** during FM reception until "PTY" appears.



The current programme type name appears if the station is transmitting the PTY data. "----" appears if the received station is not an RDS station, or if the RDS data has not been received.

- 2 Press **(PTY/FILE)** repeatedly until the desired programme type appears. The programme types appear in the order shown in the above table. Note that you cannot select "NONE" (Not specified) for searching.




- 3 Press either side of **(SEEK/RMS)**. The unit starts searching for a station broadcasting the selected programme type. When the unit finds the programme, the programme type appears again for five seconds. "NO" and the programme type appear alternately for five seconds if the unit cannot find the programme type. It then returns to the previous station.


Setting the clock automatically

The CT (Clock Time) data from the RDS transmission sets the clock automatically.

- 1 Press **(SHIFT)**, then press **(B)** (SET UP) repeatedly until "CT" appears.



- 2 Press **(D)** (→) repeatedly until "CT-ON" appears. The clock is set.



- 3 Press **(SHIFT)** to return to the normal display.

To cancel the CT function

Select "CT-Off" in step 2 above.

Notes

- The CT function may not work even though an RDS station is being received.
- There might be a difference between the time set by the CT function and the actual time.


Other Functions

You can connect an optional rotary commander (RM-X15) with this unit.

Using the rotary commander

The rotary commander works by pressing buttons and/or rotating controls. You can control an optional CD or MD changer with the rotary commander.

By pressing buttons (the SOURCE and MODE buttons)

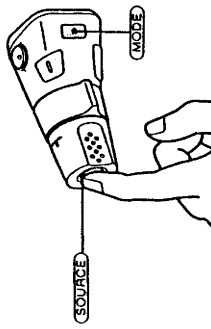

Each time you press **(SOURCE)**, the source changes as follows:

TAPE → TUNER → CD/MD


Pressing **(MODE)** changes the operation in the following ways:

- the tape transport direction
- Tuner: FM1 → FM2 → MW → LW
- CD changer: CD1 → CD2 → ...
- MD changer: MD1 → MD2 → ...

Tip

When the POWER SELECT switch is set to position **(B)**, you can turn on this unit by pressing **(SOURCE)** on the rotary commander.

By rotating the control (the SEEK/AMS control)

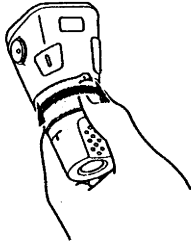

Rotate the control momentarily and release it to:

- Locate the beginnings of tracks on the tape. Rotate and hold the control, then release into fast-wind the tape.
- Locate a specific track on a disc. Rotate and hold the control until you locate the specific point in a track, then release it to start playback.
- Tune in stations automatically. Rotate and hold the control to tune in a specific station.

By pushing in and rotating the control (the PRESET/DISC control)




Push in and rotate the control to:


- Receive the stations memorised on the number buttons.
- Change the disc.

Other operations

Rotate the VOL control to adjust the volume.

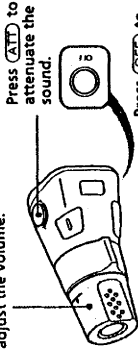

Press **(SOUND)** to adjust the volume and sound menu.




Press **(FILE)** to:

- Display the memorised names.
- Display the programme type.

Changing the operative direction


The operative direction of controls is factory-set as in the illustration below.

To increase

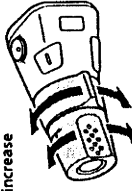

To decrease

If you need to mount the rotary commander on the right side of the steering column, you can reverse the operative direction.

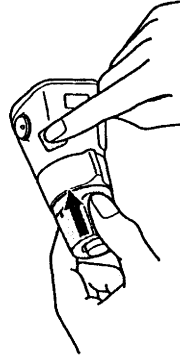

Press **(SOUND)** for two seconds while pushing the VOL control.

Tip

You can control the operative direction of controls with the unit (page 20).

Adjusting the sound characteristics

You can adjust the bass, treble, balance and fader.
Each source can store the bass and treble levels respectively.

- 1 Select the item you want to adjust by pressing **(SOUND)** repeatedly.
VOL (volume) → BAS (bass) → TRE (treble) → BAL (left-right) → FAD (front-rear)
- 2 Adjust the selected item by rotating the dial.
Adjust within three seconds after selecting the item. (After three seconds, the dial functions work as the volume control.)

Changing the sound and display settings

You can set:

- CLOCK (page 6).
- CT (Clock Time) (page 18).
- DIM to change the brightness of the display.
- Select "AUTO" to dim the display only when you turn the lights on.
- BEEP to turn on or off the beeps.
- RM (Rotary Remote) to change the operative direction of the controls of the rotary remote.
- Select "NORM" to use the rotary remote in the factory-set position.
- Select "REV" when you mount the rotary remote on the right side of the steering column.

- 1 Press **(SHIFT)**.
- 2 Press **(SET UP)** repeatedly until the desired item appears.

Each time you press **(SET UP)**, the item changes as follows:

CLOCK → CT → DIM → BEEP → RM

Note
The displayed item will differ depending on the source.


- 3 Press **(←)** to select the desired setting (for example: ON or OFF).
- 4 Press **(SHIFT)**.
After the mode setting is complete, the display goes back to normal playback mode.

Boosting the bass sound — D-bass

You can enjoy clear and powerful bass sound. The D-bass function boosts the low frequency signal with a sharper curve than conventional bass boost.

You can hear the bass line more clearly even if the vocal sound is the same volume. You can emphasize and adjust the bass sound easily with the D-bass control. This effect is similar to the one you get when you use an optional subwoofer system.
Moreover, the Digital D-bass* function creates even sharper and more powerful bass sound than Analog D-bass.

* Digital D-bass is available during CD playback.

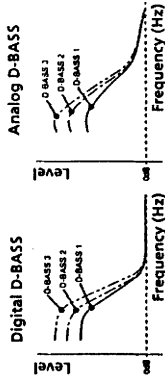

Adjusting the bass curve

Turn the D-BASS dial to adjust the bass level (1, 2 or 3).
"D-BASS" appears in the display.
During CD playback, "DIGITAL D-BASS" appears in the display.

To cancel, turn the dial to the OFF position.

Note
If the bass sound becomes distorted, adjust the D-bass dial or volume control.

With Optional Equipment CD/MD changer

This unit can control a maximum of three external CD/MD changers in this configuration.


Playing a CD or MD

Press **(CD/MD)** until the desired changer appears.
CD/MD playback starts.

When a CD/MD changer is connected, all the tracks play from the beginning.

Changing the displayed items

Each time you press **(DISP)** during CD or MD playback, the item changes as follows:

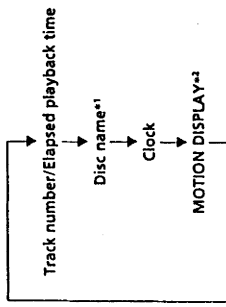

* If you have not labeled the disc or there is no disc name, prerecorded on the MD, "NO NAME" appears in the display.

** All the items above are scrolled in the display one by one in order.

Displaying the recording date of the current MD

Press **(OPEN)** for two seconds during MD playback.
The recording date of the track is displayed for about three seconds.

Locating a specific track

— Automatic Music Sensor (AMS)

During playback, press either side of **(SEEK/AMS)** once for each track you want to skip.



Locating a specific point in a track

— Manual Search

During playback, press and hold either side of **(SEEK/AMS)**. Release the button when you have found the desired point.



Locating a disc by disc number

— Direct Disc Selection

Press the number button that corresponds with the desired disc number.
The desired disc in the current changer begins playback.

Scanning the tracks

— Intro Scan

You can play the first 10 seconds of all the tracks on the current disc.

1 During playback, press **(SHUF)**, then press **(P MODE)** repeatedly until "INTRO" appears.

2 Press **(D) (←)** to select "INTRO-ON". Intro Scan starts.

3 Press **(SHUF)**.

To go back to normal playback mode, select "INTRO-OFF" in step 2 above.

Playing tracks repeatedly

— Repeat Play

You can select:

- REP-1 to repeat a track.
- REP-2 to repeat a disc.

1 During playback, press **(SHUF)**.

2 Press **(4) (REP)** repeatedly until the desired setting appears.

→ REP-1 → REP-2 → REP-OFF

Repeat Play starts.

3 Press **(SHUF)**.

To go back to normal playback mode, select "REP-OFF" in step 2 above.

Playing tracks in random order

— Shuffle Play

You can select:

- SHUF-1 to play the tracks on the current disc in random order.
- SHUF-ALL to play the tracks in the current changer in random order.

1 During playback, press **(SHUF)**.

2 Press **(5) (SHUF)** repeatedly until the desired setting appears.

→ SHUF-1 → SHUF-ALL → SHUF-OFF

Shuffle Play starts.

3 Press **(SHUF)**.


To go back to normal playback mode, select "SHUF-OFF" in step 2 above.

Labeling a CD — Disc Memo

(CD changer with the custom file function)

You can label each disc with a personalized name. You can enter up to eight characters for a disc. If you label a CD, you can select the specific tracks for playback (page 24).


1 Play the CD and press **(PTY/FILE)** for two seconds.



2 Enter the characters.

1 Rotate the dial clockwise to select the desired characters.

(A → B → C → ... Z → 0 → 1 → 2 → ... 9 → + → - → * → / → \ → > → < → . → _)




If you rotate the dial counterclockwise, the characters appear in the reverse order.

If you want to put a blank space between characters, select " " (under-bar).

2 Press **(D) (←)** after locating the desired character.

The flashing cursor moves to the next space.



If you press **(7) (←)**, the flashing cursor moves to the left.


3 Repeat steps 1 and 2 to enter the entire name.

3 To return to normal CD playback mode, press **(PTY/FILE)** for two seconds.


Tip
To erase/correct a name enter " _ " (under-bar) for each character.

Displaying the disc memo name

Press **OSPL** during CD playback.



Each time you press **OSPL** during CD playback, the item changes as follows:

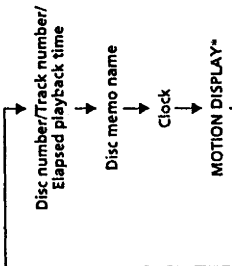

* All the items above are scrolled in the display one by one in order.

Erasing the disc memo

- 1 Press **CD/MD** repeatedly to select the CD changer.
- 2 Press **(TYPE/FILE)** for two seconds.
- 3 Press **OSPL** for two seconds.
- 4 Rotate the dial to select the name you want to erase.
- 5 Press **(ENTER)** for two seconds. The name is erased. Repeat steps 4 and 5 if you want to erase other names.
- 6 Press **(TYPE/FILE)** for two seconds. The unit returns to normal CD playback mode.

Selecting specific tracks

for playback — Bank

(CD changer with the custom file function) If you label the disc, you can set the unit to skip tracks and play only the tracks you want.


- 1 Start playing the disc and press **(SHIFT)**. Then press **(P MODE)** for two seconds.

Bank edit mode



Note If you have not labeled the disc, the bank edit mode does not appear and the program edit mode appears. To go back to normal playback mode, press **(SHIFT)**.

- 2 Press either side of **(SEEK/MS)** to select the track number you want to skip and press **(ENTER)**.



The indication changes from "PLAY" to "SKIP." If you want to return to "PLAY," press **(ENTER)** again.

- 3 Repeat step 2 to set the "PLAY" or "SKIP" mode on all the tracks.
- 4 Press **(P MODE)** for two seconds. The unit returns to normal CD playback mode.
- 5 Press **(SHIFT)**.
 - Notes
 - You can set the "PLAY" and "SKIP" mode on up to 24 tracks.
 - You cannot set the "SKIP" mode on all the tracks.


Playing the specific tracks only

You can select:

- BANK-ON to play the tracks with the "PLAY" setting.
- BANK-INV (Inverse) to play the tracks with the "SKIP" setting.

- 1 During playback, press **(SHIFT)**, then press **(P MODE)** repeatedly until "BANK" appears.
- 2 Press **(←)** to repeatedly until the desired setting appears.

→ BANK-ON → BANK-INV → BANK-OFF



Playback starts from the track following the current one.

- 3 Press **(SHIFT)**.

To go back to normal playing mode, select "BANK-OFF" in step 2 above.

Connections

Caution

- This unit is designed for negative earth 12 V DC operation only.
- Connect the power connecting cord ④ to the unit and speakers before connecting it to the auxiliary power connector.
- Run all earth wires to a common earth point.
- Connect the yellow cord to a free car circuit rated higher than the unit's fuse rating. If you connect this unit in series with other stereo components, the car circuit they are connected to must be rated higher than the sum of the individual component's fuse rating. If there are no car circuits rated as high as the unit's fuse rating, connect the unit directly to the battery. If no car circuits are available for connecting this unit, connect the unit to a car circuit rated higher than the unit's fuse rating in such a way that if the unit blows its fuse, no other circuits will be cut off.

If your car has no accessory position on the ignition key switch — POWER SELECT switch

The illumination on the front panel is factory set to be turned on even while the unit is not in use. However, this setting may cause some car battery wear if your car has no accessory position on the ignition key switch. To avoid this battery wear, set the POWER SELECT switch located on the bottom of the unit to the ② position, then press the reset button. The illumination is reset to stay off while the unit is not in use.

Nota

The caution alarm for the front panel is not activated even when the POWER SELECT switch is set to the ② position.

Reset button

When the installation and connections are complete, be sure to press the reset button with a ballpoint pen etc.

Notes of connection example

Nota on the control function

Pin 5 of the unit's power connector supplies + 12 V DC when you turn on the tuner or when you activate the ATA (Automatic Tuner Activation), AF (Alternative Frequency), or the TA (Traffic Announcement) Functions.

Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

Notes on speaker connection

- Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be damaged.
- Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with those of the left speaker.
- Do not attempt to connect the speakers in parallel.
- Do not connect any active speakers (with built-in amplifiers) to the speaker terminals of the unit. Doing so may damage the active speakers. Therefore, be sure to connect passive speakers to these terminals.

Warning

If you have a power aerial without a relay box, connecting this unit with the supplied power connecting cord ④ may damage the aerial.

Conexiones

Precauciones

- Esta unidad ha sido diseñada para alimentarse solamente con 12 V CC, negativo a masa.
- Conecte el cable de conexión de alimentación ④ a la unidad y a los altavoces antes de hacerlo al conector de alimentación auxiliar.
- Conecte todos los conductores de puesta a masa a un punto común.
- Conecte el cable amarillo a un circuito libre del automóvil que tenga una capacidad superior a la del fusible de la unidad. Si conecta esta unidad en serie con otros componentes estereofónicos, el circuito del automóvil al que se encuentran conectados debe tener una capacidad superior a la de la suma de las capacidades de los fusibles de cada componente. Si ningún circuito del automóvil tiene una capacidad tan alta como la del fusible de la unidad, conecte ésta directamente a la batería. Si el automóvil no dispone de ningún circuito para conectar esta unidad, conéctela a un circuito del automóvil con capacidad superior a la del fusible de la unidad, de forma que si se funde el fusible de ésta, no se interrumpa ningún otro circuito.


Si el automóvil no dispone de posición para accesorios en la llave de encendido

— Selector POWER SELECT

La iluminación del panel frontal ha sido ajustada en fábrica para que esté activada aunque la unidad no se encuentre en funcionamiento. Sin embargo, este ajuste puede provocar cierta descarga de la batería del automóvil si este no dispone de posición para accesorios en la llave de encendido. Para evitar esto, ponga el selector POWER SELECT, situado en la base de la unidad, en la posición ② y, después, presione el botón de reposición. La iluminación estará desactivada cuando la unidad no se encuentre en funcionamiento.

Nota

La alarma de precaución del panel frontal no se activará cuando el selector POWER SELECT se encuentre en la posición ②.



Botón de reposición

Cuando finalice la instalación y las conexiones, cerciórese de presionar el botón de reposición con un bolígrafo, etc.



Notas de ejemplo de conexiones

Nota sobre la función de control

El terminal 5 del conector de alimentación de la unidad suministra + 12 V CC al activar el sintonizador o las funciones ATA (Activación automática del sintonizador), AF (Frecuencias alternativas) o TA (Anuncios de tráfico).

Conexión para protección de la memoria

Si conecta el conductor de entrada de alimentación amarillo, el circuito de la memoria recibirá siempre alimentación, incluso aunque sitúe la llave de encendido en la posición OFF.

Notas sobre la conexión de los altavoces

- Antes de conectar los altavoces, desconecte la alimentación de la unidad.
- Utilice altavoces con una impedancia de 4 a 8 ohmios, y con la potencia máxima admisible adecuada, ya que de lo contrario podría dañarlos.
- No conecte los terminales del sistema de altavoces al chasis del automóvil, ni los del altavoz izquierdo a los del derecho.
- No intente conectar los altavoces en paralelo.
- No conecte altavoces activos (con amplificadores incorporados) a los terminales de altavoces de la unidad. Si lo hiciese, podría dañar tales altavoces. Por lo tanto, cerciórese de conectar altavoces pasivos a estos terminales.

Advertencia

Si dispone de una antena motorizada sin dispositivo de relé, la conexión de esta unidad con el cable de conexión de alimentación ④ suministrado puede dañar la antena.

Anslutning

Säkerhetsföreskrifter

- Denna bilstereo är endast avsedd för anslutning till ett negativt jordat, 12 V bilbatteri.
- Anslut strömkabeln ④ till enheten och högtalarna innan du ansluter den till den yttre strömanslutningen.
- Dra samtliga jordledningar till en och samma jordingspunkt.
- Anslut den gula kabeln till en ledig bilkrets som har en säkring med ett högre ampere än enheten. Om du seriekopplar denna enhet med andra stereokomponenter, måste den bilkrets de är kopplade till ha en säkring med en högre ampere än summan av de enskilda komponenternas ampere. Om det inte finns någon bilkrets som har en säkring med ett lika högt ampere som enheten, ska du ansluta enheten direkt till batteriet. Om det inte finns några bilkretsar att ansluta denna enhet till ska du ansluta enheten till en enhet som har en säkring med ett högre ampere än enheten för att förhindra att inga andra kretsar klipps av om säkringen smälter.

Montera bilstereon i en bil vars tändlås inte har något strömläge — Omkopplaren POWER SELECT

Innan bilstereon levererades från fabriken ställdes belysningen i teckenfönstret in så att den lyser också när bilstereon inte används. Detta kan emellertid orsaka urladdning av batteriet när du använder bilstereon i en bil, vars tändlås saknar läget ACC (strömläge). Skjut omkopplaren POWER SELECT på bilstereons undersida till läge ②, och tryck sedan på återställningsknappen för att undvika att bilbatteriet laddas ur. Nu lyser inte längre belysningen i teckenfönstret när bilstereon inte används.

Observera

Varningssignalen, som varnar om du inte har tagit loss frontpanelen, ljuder inte när omkopplaren POWER SELECT står i läge ②.

Nollställningsknappen

Kom ihåg att använda en penna eller något annat spetsigt föremål för att trycka på nollställningsknappen när anslutningen och monteringen är klara.

Att observera angående anslutningsexemplen

Att observera angående kontrollfunktionen Pol 5 i enhetens strömanslutning ger + 12 V likström när du slår på radion eller aktiverar någon av funktionerna ATA (Automatic Tuner Activation), AF (Alternative Frequency) eller TA (Traffic Announcement).

Anslutning för minneslöd

När du ansluter den gula, ingående strömkabeln försörjs minneskretsen med ström hela tiden, även när tändlåset slås ifrån.

Att observera angående högtalarnas anslutning

- Slå av bilstereon innan du ansluter högtalarna.
- Anslut endast högtalare, vars impedans varierar från 4 till 8 ohm och som har tillräcklig effektkapacitet för att skydda högtalarna mot skador.
- Anslut inte något av högtalaruttagen till bilens chassi. Anslut inte heller uttagen på höger högtalare till uttagen på vänster högtalare.
- Anslut inte högtalarna parallellt.
- Anslut inte högtalare (med inbyggda effektförstärkare) till bilstereons högtalaruttag, eftersom de kan skada de aktiva högtalarna. Var noga med att bara ansluta passiva högtalare till dessa uttag.

Varning

Om du har en motorantenn utan reläbox kan antennen skadas om du ansluter enheten med den medföljande strömkabeln ④.

Connexions

Advertência

- Este aparelho foi projectado para funcionar somente com corrente contínua de 12 V com negativo à massa.
- Ligue o cabo de alimentação de corrente ④ ao aparelho e aos alifalantes antes de o ligar ao conector de corrente auxiliar.
- Ligue todos os fios de terra num ponto de massa comum.
- Ligue o cabo amarelo a um circuito livre do automóvel com uma capacidade nominal superior à do fusível do aparelho. Se ligar este aparelho em série com outros componentes estereó, o circuito do automóvel a que estão ligados deve ter uma capacidade nominal superior à soma da capacidade dos fusíveis de cada componente. Se nenhum circuito do automóvel tiver uma capacidade tão alta como a do fusível do aparelho, ligue o aparelho directamente à bateria. Se o automóvel não tiver nenhum circuito disponível para ligação do aparelho, ligue-o a um circuito com uma capacidade superior à do fusível do aparelho para que se o fusível do aparelho se fundir, nenhum dos outros circuitos seja cortado.

Se o seu automóvel não estiver equipado com uma chave de ignição com posição acessórios

— Interruptor POWER SELECT

A iluminação do painel frontal é regulada na fábrica para se manter acesa, mesmo quando o aparelho não estiver ligado. No entanto, esta regulação pode provocar a descarga da bateria se o aparelho for utilizado em automóveis sem chave de ignição com posição acessórios. Para evitar a descarga da bateria, regule o interruptor POWER SELECT, situado na base do aparelho, para a posição ②. Em seguida, carregue no botão de reinicialização. A iluminação é regulada para ficar apagada enquanto o aparelho estiver desligado.

Nota

O alarme de advertência do painel frontal não é activado quando o interruptor POWER SELECT estiver regulado para a posição ②.

Botão de reinicialização

Quando terminar a instalação e as ligações, não se esqueça de carregar no botão de reinicialização com a ponta de uma caneta, etc.

Notas sobre o exemplo de ligação

Nota sobre a função do controlo

O pino 5 do conector de alimentação do aparelho fornece + 12 V CC quando se liga o sintonizador ou se activam as funções ATA (Activação automática do sintonizador), AF (Frequência alternativa) ou TA (Informações sobre o trânsito).

Ligação para alimentação continua da memória

Quando ligar o fio amarelo de entrada de alimentação, os circuitos de memória ficarão com alimentação continua, mesmo se a chave de ignição estiver desligada.

Notas sobre a ligação dos alifalantes

- Antes de ligar os alifalantes, desligue o aparelho.
- Utilize alifalantes com impedância de 4 a 8 ohm, e com capacidade admissível de potência adequada. Caso contrário, os alifalantes poderão sofrer avarias.
- Não ligue os terminais do sistema de alifalantes ao chassi do automóvel, e não ligue os terminais do alifalante direito aos terminais do alifalante esquerdo.
- Não tente ligar os alifalantes em paralelo.
- Não ligue nenhum sistema de alifalantes activos (com amplificadores incorporados) aos terminais dos alifalantes do aparelho. Caso o faça, poderá avariar o sistema de alifalantes activos. Portanto, não se esqueça de ligar alifalantes passivos a estes terminais.

Atenção

Se a antena eléctrica não tiver uma caixa de relé, o facto de ligar esta aparelho com a cabo de alimentação ④ fornecido, pode provocar danos na antena.

Connection example/ Ejemplo de conexiones/ Anslutningarna enligt exemplet/ Exemplo de ligações

WARNING

Auxiliary power connectors may vary depending on the car. Be sure to check the power connection diagram sheet supplied with the unit. Improper connections may damage your car. If the supplied power connecting cord cannot be used with your car, consult your nearest Sony dealer.

ADVERTENCIA

Los conectores de alimentación auxiliar pueden variar en función del automóvil. Asegúrese de consultar el diagrama de conexión de alimentación suministrado con la unidad. Las conexiones incorrectas pueden dañar el automóvil. Si no es posible utilizar el cable de conexión de alimentación suministrado con el automóvil, póngase en contacto con el proveedor Sony más próximo.


VARNING

Typen av yttre strömanslutning varierar från bil till bil. Kontrollera strömanslutningsschemat som medföljer enheten så att du ansluter på rätt sätt. Felaktigt anslutning kan skada bilen. Kontakta närmaste Sony-återförsäljare om den medföljande strömkabeln inte passar till din bil.

ATENÇÃO

Os conectores de corrente auxiliares podem variar de carro para carro. Não se esqueça de verificar o diagrama de ligação de corrente fornecido com o aparelho. As ligações mal executadas podem danificar o seu carro. Se não puder utilizar o cabo de alimentação fornecido com o seu carro, contacte o agente Sony da sua zona.



to a car's auxiliary power connector
a un conector de alimentación auxiliar del automóvil
till bilens yttre strömanslutning
a um conector de alimentação auxiliar do automóvel

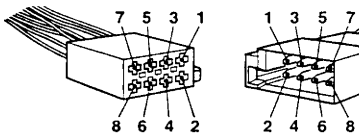


Yellow Amarillo Gul Amarelo	continuous power supply suministro de alimentación continua kontinuierlig strömförsörjning alimentação de corrente contínua	Red Rojo Röd Vermelho	switched power supply suministro de alimentación conmutado switchad strömförsörjning alimentação de corrente comutada
Blue Azul Blå Azul	power aerial control antena eléctrica elektrisk antenn antena eléctrica	Black Negro Svart Preto	earth toma de tierra jord Terra
Orange/ White Naranja/ blanco Orange/ vit Cor de laranja/ branco	switched illumination power supply fuente de alimentación de iluminación conmutada Switchad strömförsörjning till belysning fonte de alimentação comutada para iluminação	Positions 1, 2 and 3 do not have pins. Las posiciones 1, 2 y 3 no disponen de terminales. Positionerna 1, 2 och 3 saknar stift. As posições 1, 2 e 3 não têm pins.	

To connect to AMP REMOTE IN of the optional power amplifier.

This connection is only for amplifiers. Connecting any other system may damage the unit. Para conectar a AMP REMOTE IN del amplificador de potencia opcional. Esta conexión es sólo para amplificadores. La conexión de cualquier otro sistema puede dañar la unidad. Ansluta till AMP REMOTE IN på den valfria effektförstärkaren. Denna anslutning gäller endast för högtalare. Om du ansluter något annat system kan enheten skadas. Para ligação a AMP REMOTE IN do amplificador de potência opcional. Esta ligação destina-se apenas aos amplificadores. A ligação de qualquer outro sistema pode provocar avarias no aparelho.

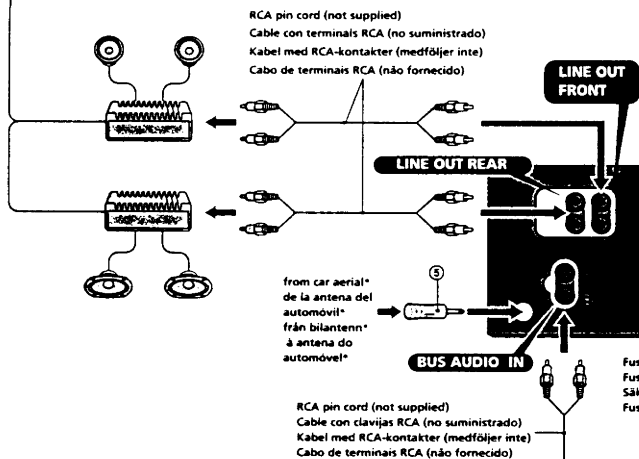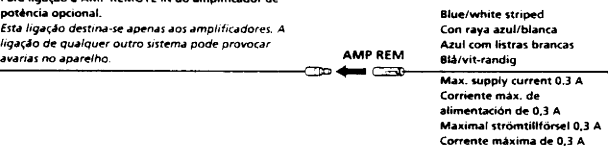


to a car's speaker connector
a un conector de altavoces del automóvil
till bilens högtalanslutning
a um conector de altifalante do automóvel

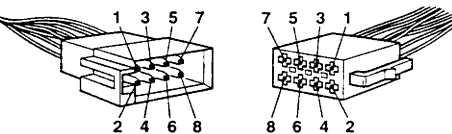

Purple Purpura Morkkila Violeta	Speaker, Rear, Right Altavoz, trasero, derecho Högtalare, bakre, höger Altifalante, Parte de trás, Direito	White Blanco Vit Branco	Speaker, Front, Left Altavoz, delantero, izquierdo Högtalare, främre, vänster Altifalante, Parte da frente, Esquerdo
Black Negro Svart Preto	Speaker, Rear, Right Altavoz, trasero, derecho Högtalare, bakre, höger Altifalante, Parte de trás, Direito	Green Verde Grön Verde	Speaker, Front, Left Altavoz, delantero, izquierdo Högtalare, främre, vänster Altifalante, Parte da frente, Esquerdo
Grey Gris Grå Cinza	Speaker, Front, Right Altavoz, delantero, derecho Högtalare, främre, höger Altifalante, Parte da frente, Direito	Blue Azul Blå Azul	Speaker, Rear, Left Altavoz, trasero, izquierdo Högtalare, bakre, vänster Altifalante, Parte de trás, Esquerdo

Negative polarity positions 2, 4, 6, and 8 have striped cords. Las posiciones de polaridad negativa 2, 4, 6 y 8 tienen cables con raya. De negativa polpositionerna 2, 4, 6 och 8 har randiga kablar. As posições 2, 4, 6 e 8 (polaridade negativa) têm cabos as riscas.




- * Note for the aerial connecting
If your car aerial is an ISO (International Organization for Standardization) type, use the supplied adapter ③ to connect it. First connect the car aerial to the supplied adapter, then connect it to the aerial jack of the master unit.
- * Nota sobre la conexión de la antena
Si la antena del automóvil es del tipo ISO (International Organization for Standardization), emplee el adaptador suministrado ③ para conectarla. En primer lugar, conecte la antena del automóvil al adaptador suministrado y, a continuación, a la toma de antena de la unidad principal.
- * Angående antennanslutning
Om motorantennen är av ISO-typ (International Organization for Standardization), använd du medföljande adapter ③ för att ansluta den. Anslut först motorantennen till medföljande adapter och därefter till antennuttaget på huvudenheten.
- * Nota referente à ligação da antena
Se a antena do automóvel for uma antena de tipo ISO (International Organization for Standardization), utilize o adaptador fornecido ③ para fazer a ligação respectiva. Ligue primeiro a antena do automóvel ao adaptador fornecido e depois à ficha tipo jack de antena do sistema principal.


SECTION 2 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.


2-1. FRONT PANEL ASSY

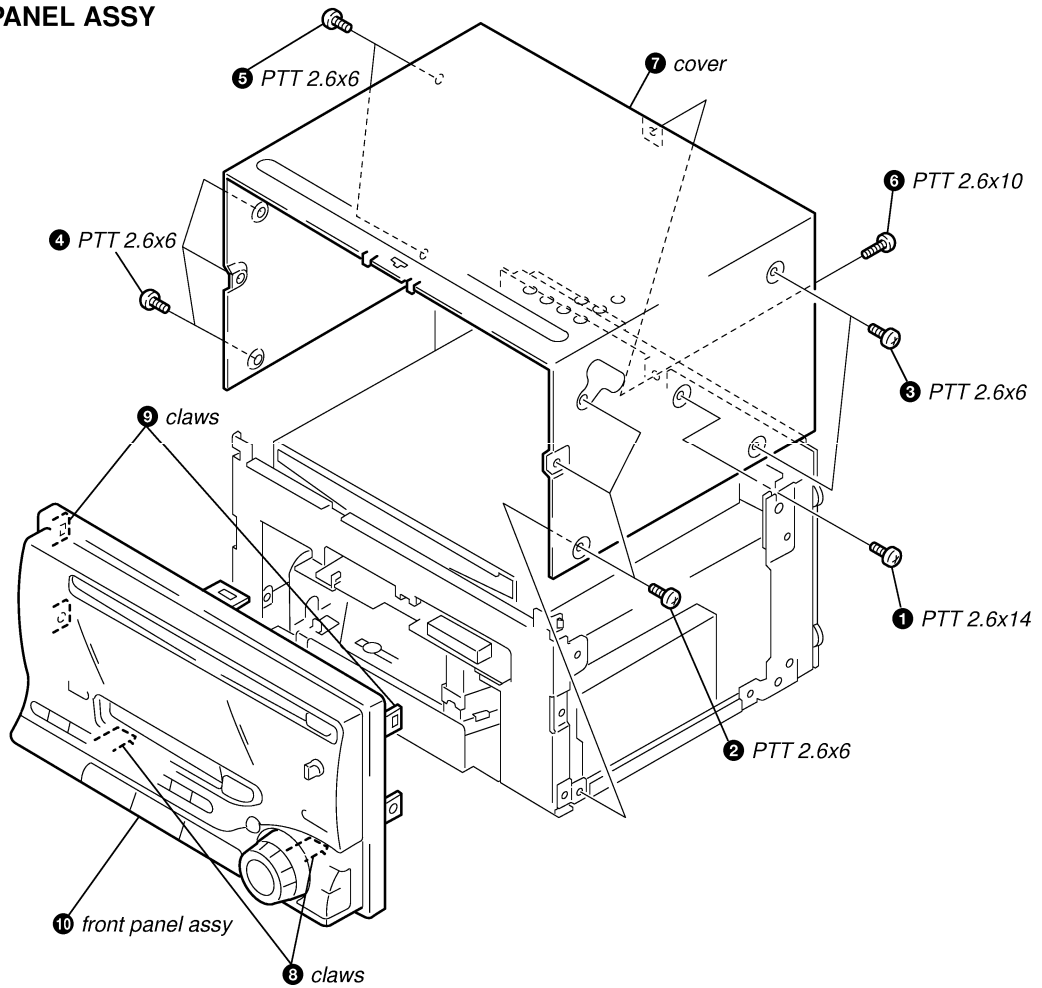


2-2. KEY BOARD

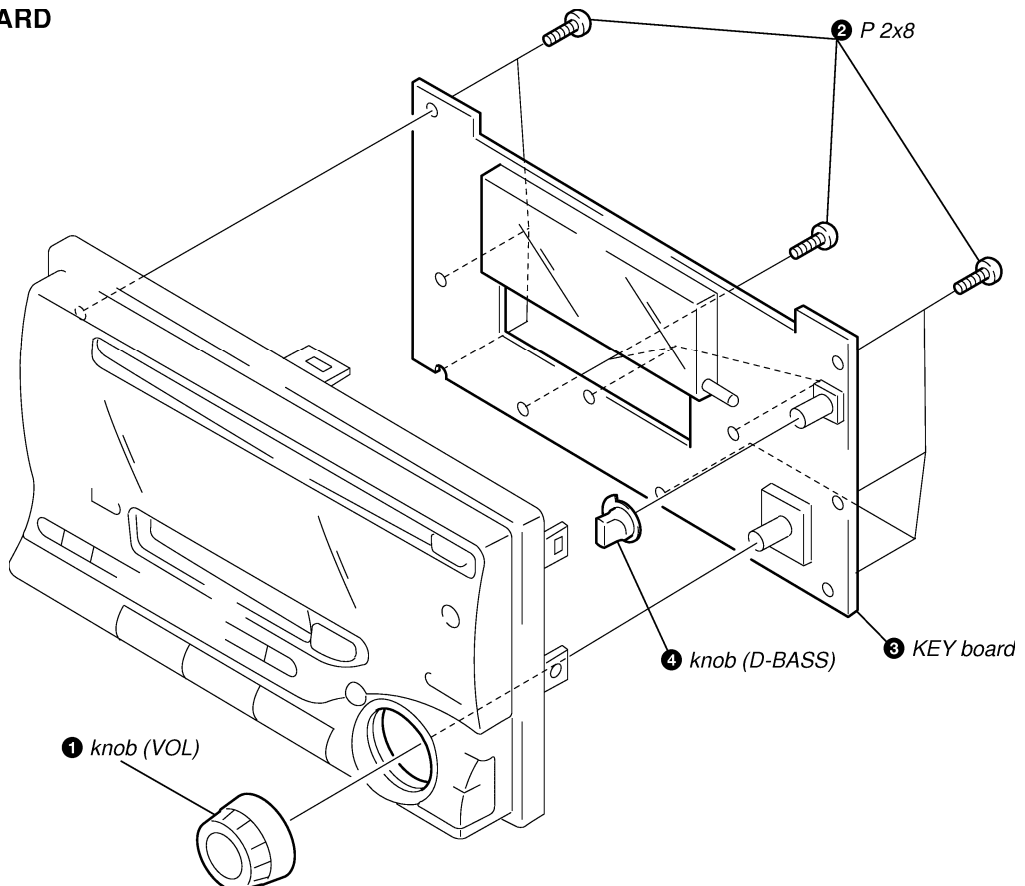


2-3. CD MECHANISM BLOCK

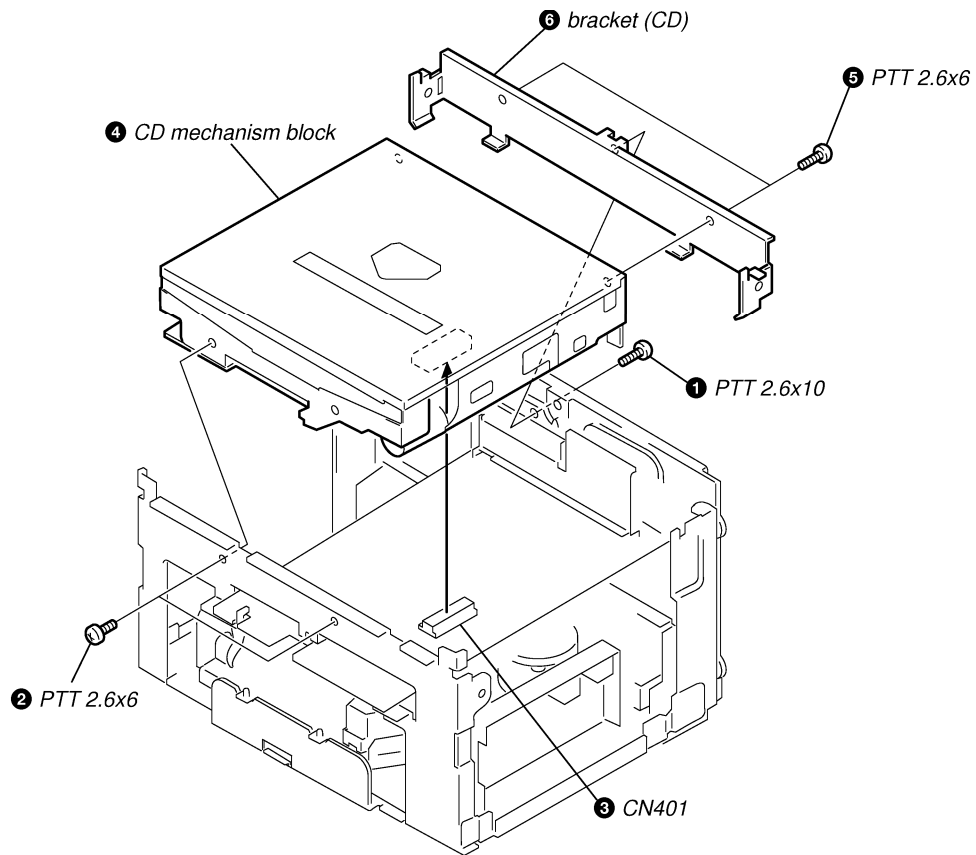


2-4. HEAT SINK

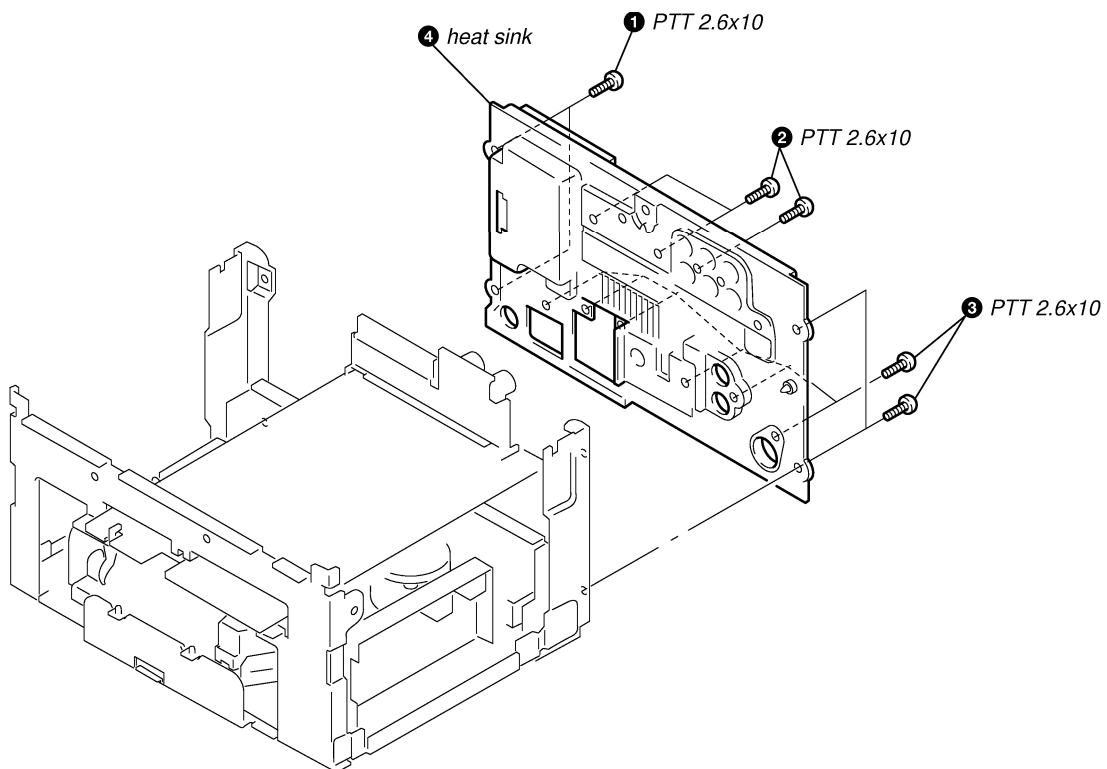


2-5. CD BOARD

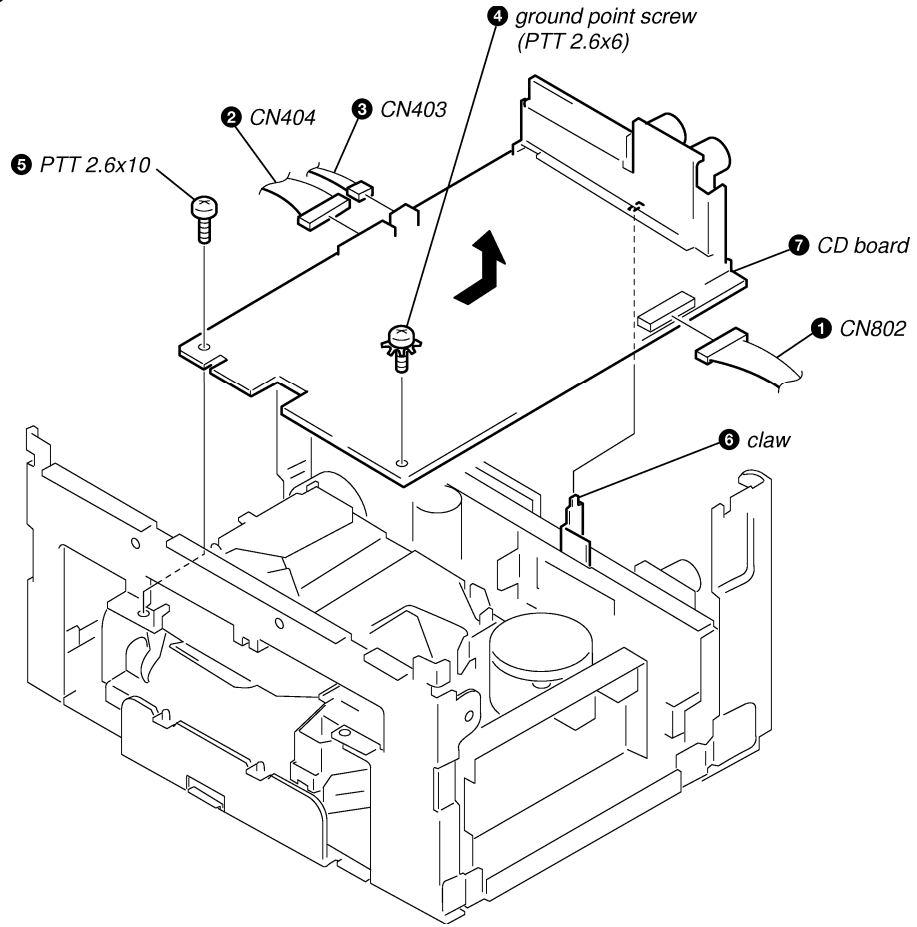


2-6. TAPE MECHANISM BLOCK

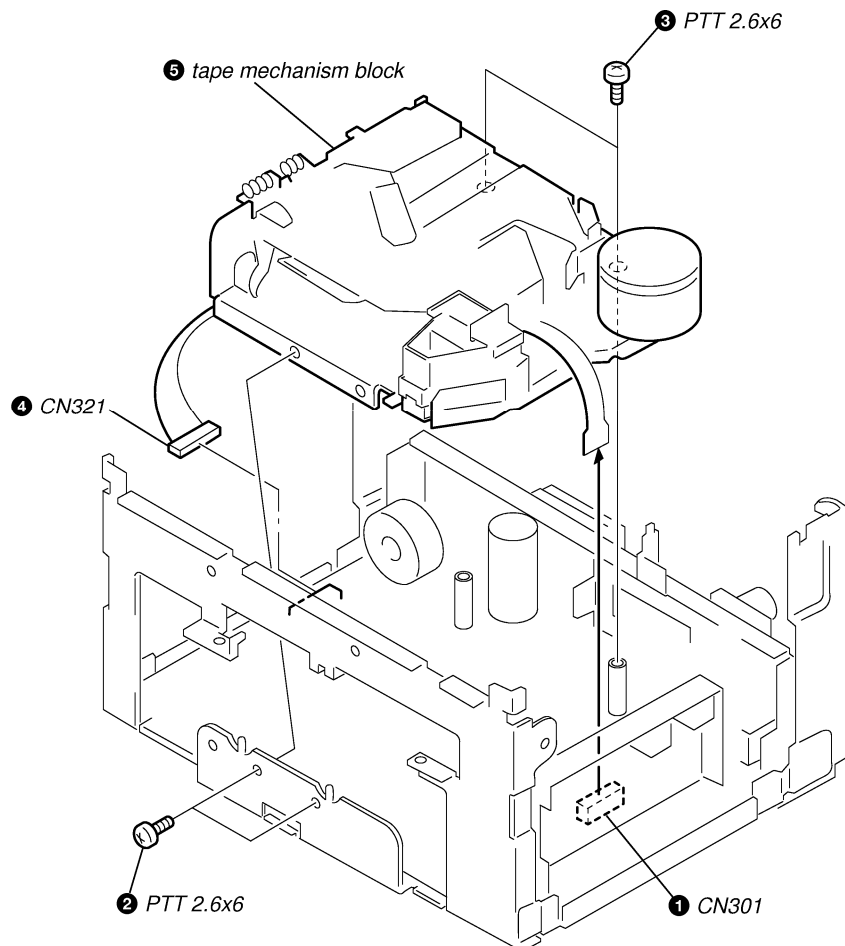


2-7. MAIN BOARD

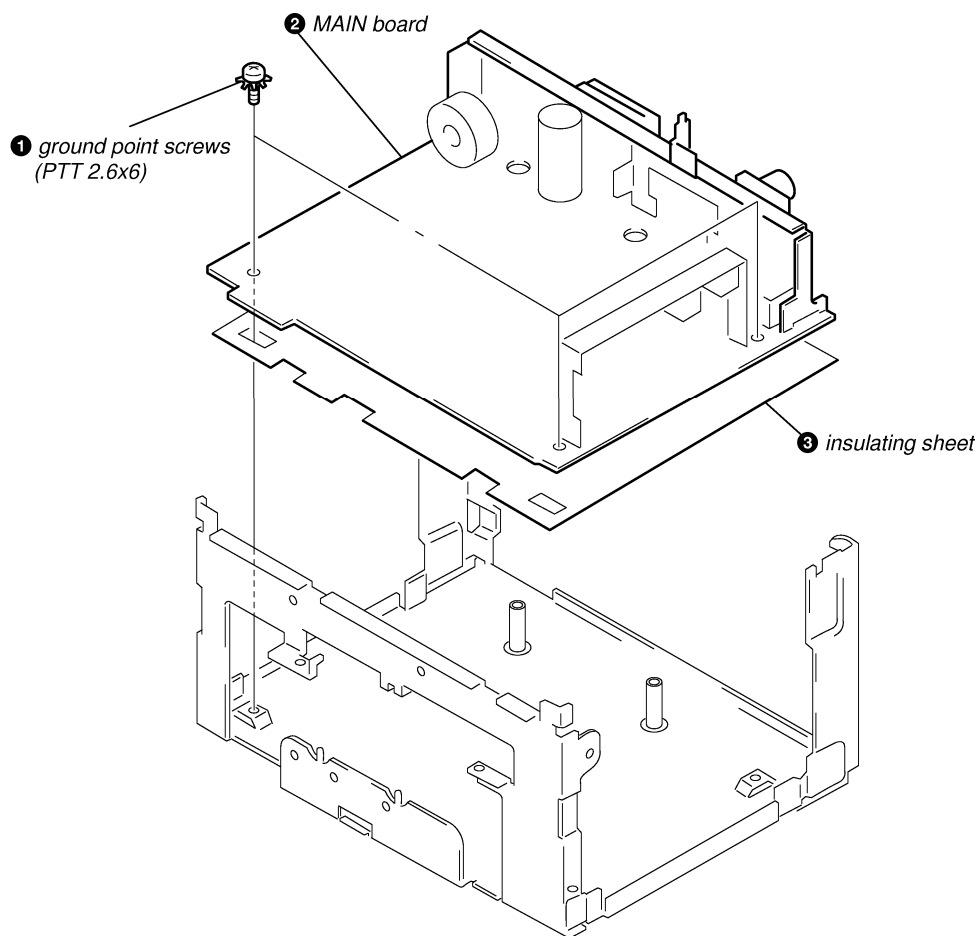


2-8. CHASSIS (T) SUB ASSY

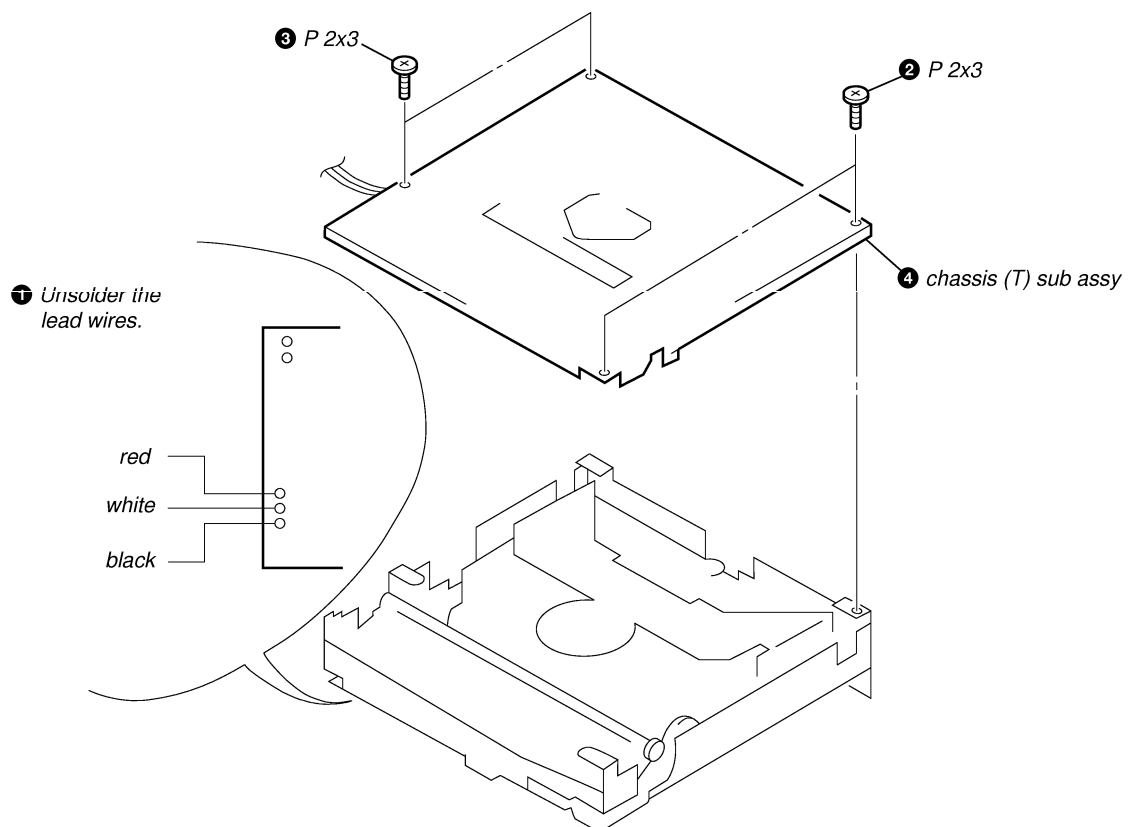

2-9. LEVER ASSY

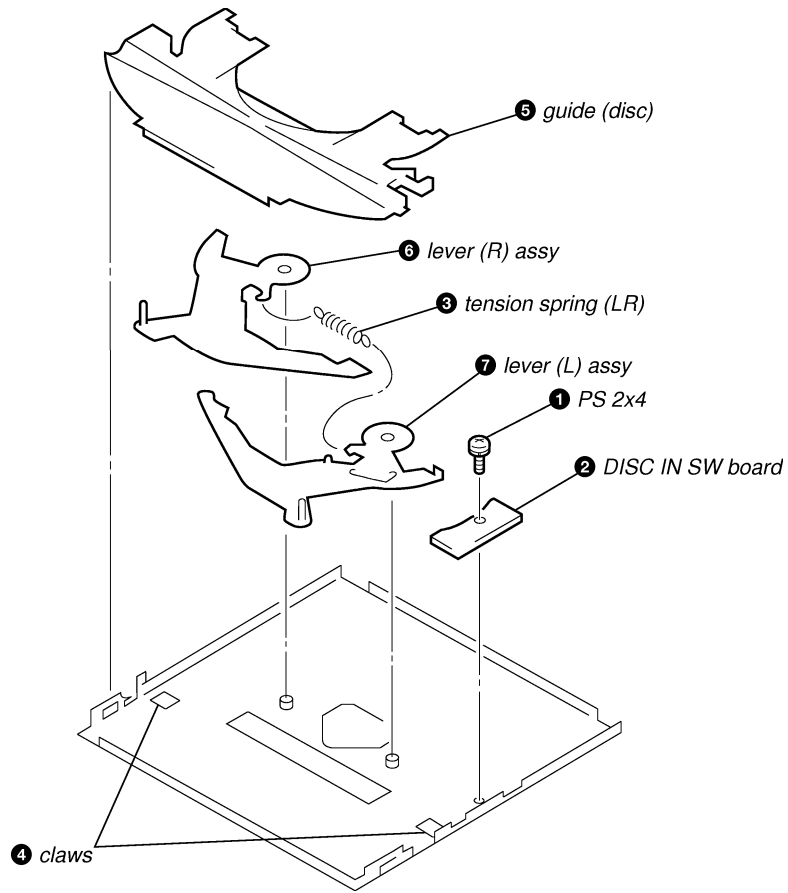


2-10. SERVO BOARD

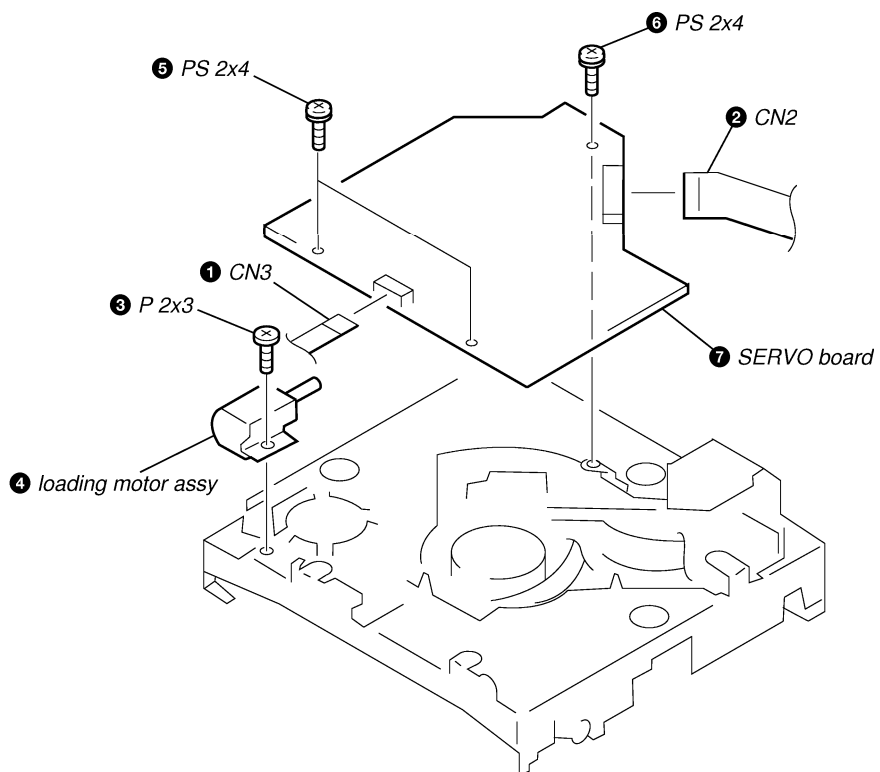


2-11. ROLLER ASSY


- When installing, take note of the positions arm (roller) and washers. (Fig. 1)

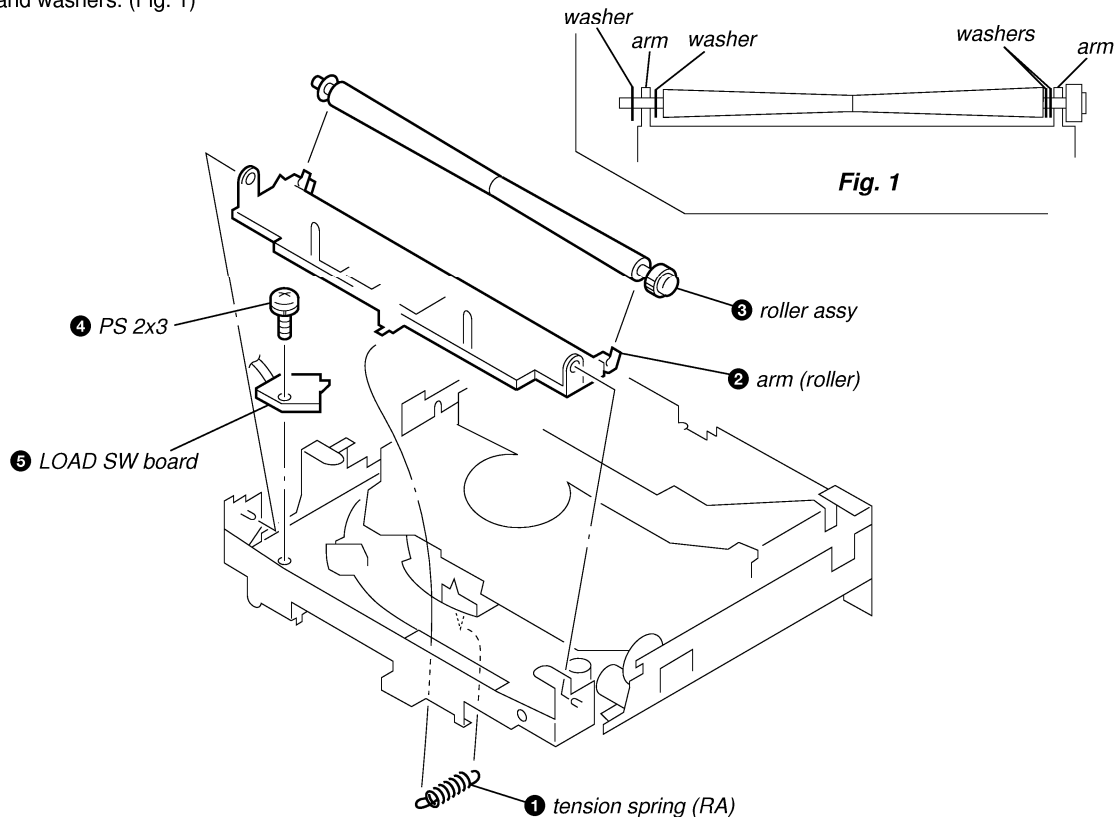

2-12. CHASSIS (OP) (O/S) ASSY

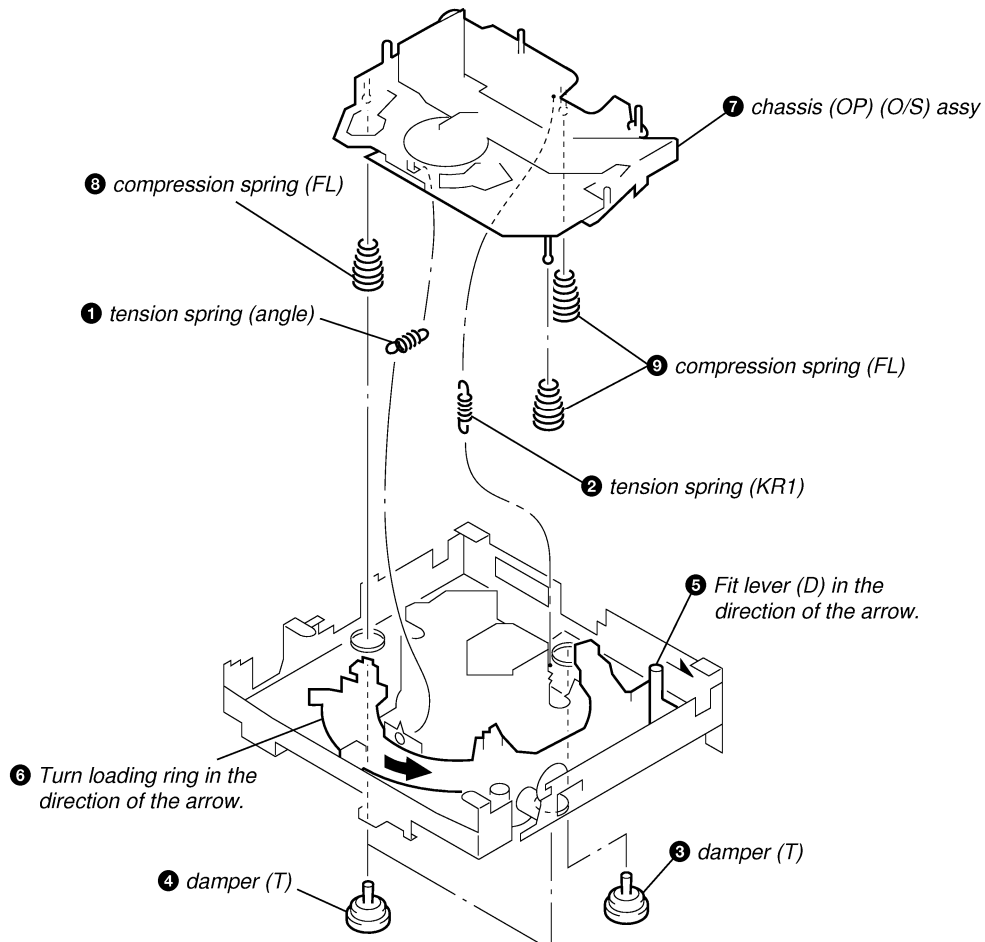


2-13. OPTICAL PICK-UP BLOCK

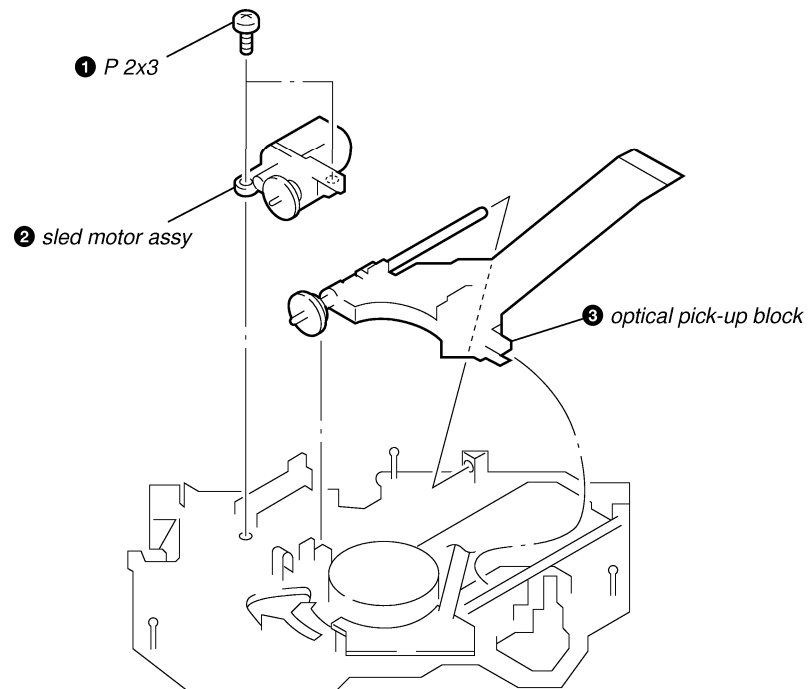


SECTION 3 ASSEMBLY OF MECHANISM DECK

Note : Follow the assembly procedure in the numerical order given.


HOUSING

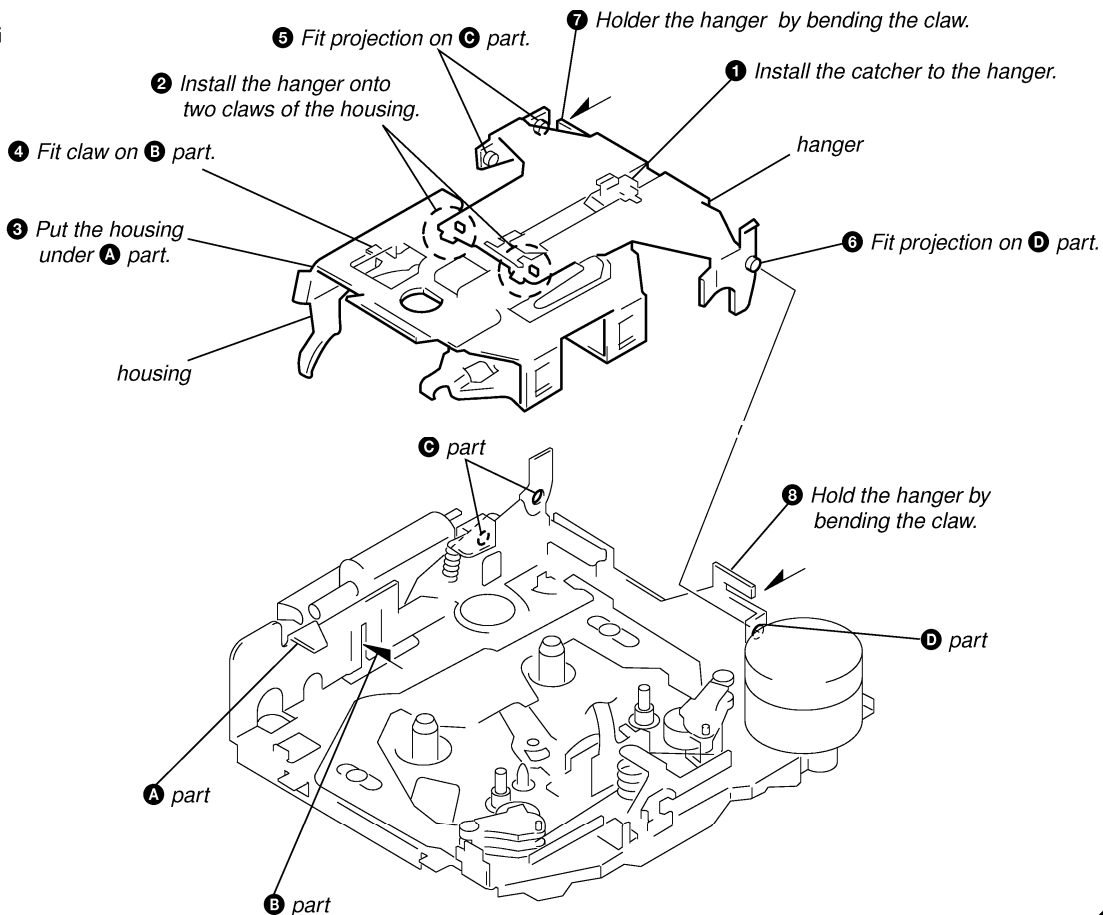


ARM (SUCTION)

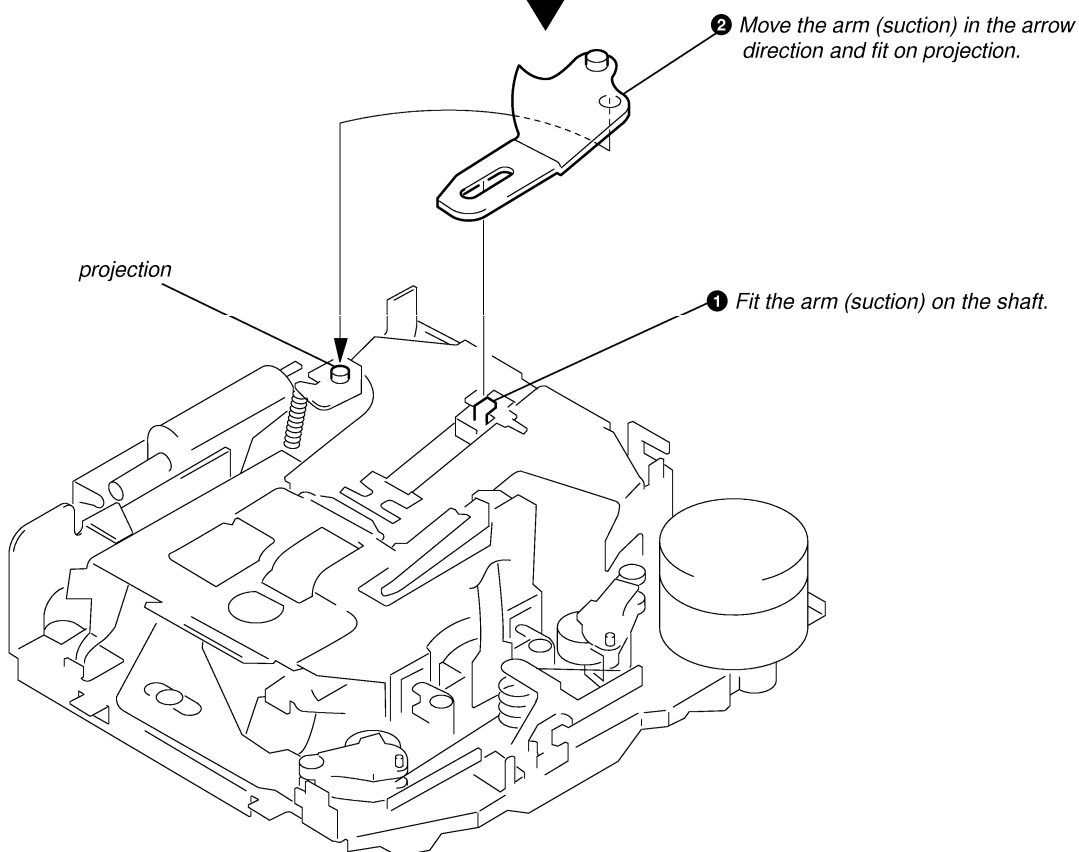


LEVER (LDG-A) / (LDG-B)

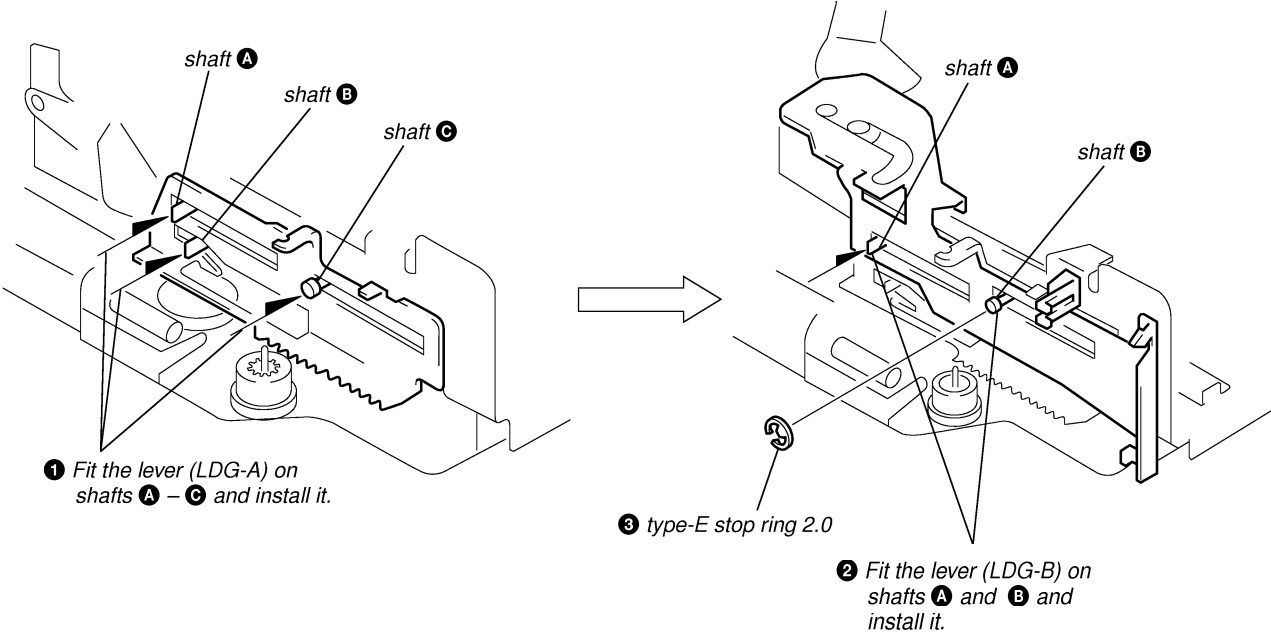


GEAR (LOADING FT)

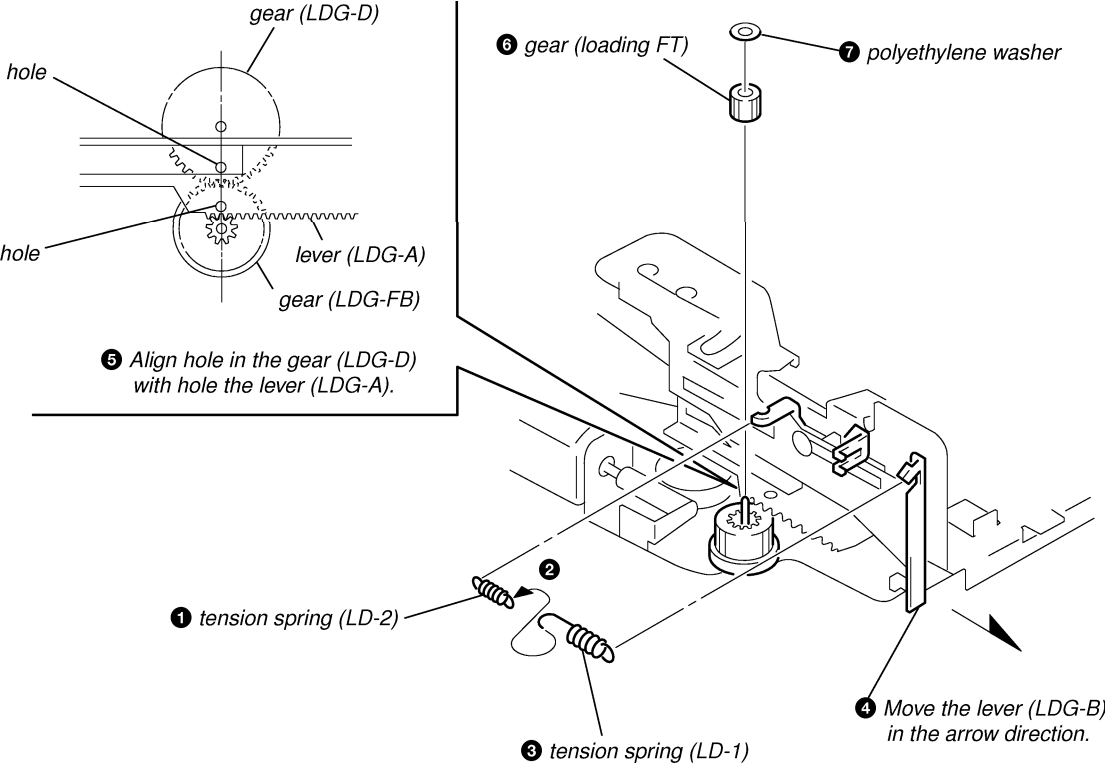

GUIDE (C), GUIDE

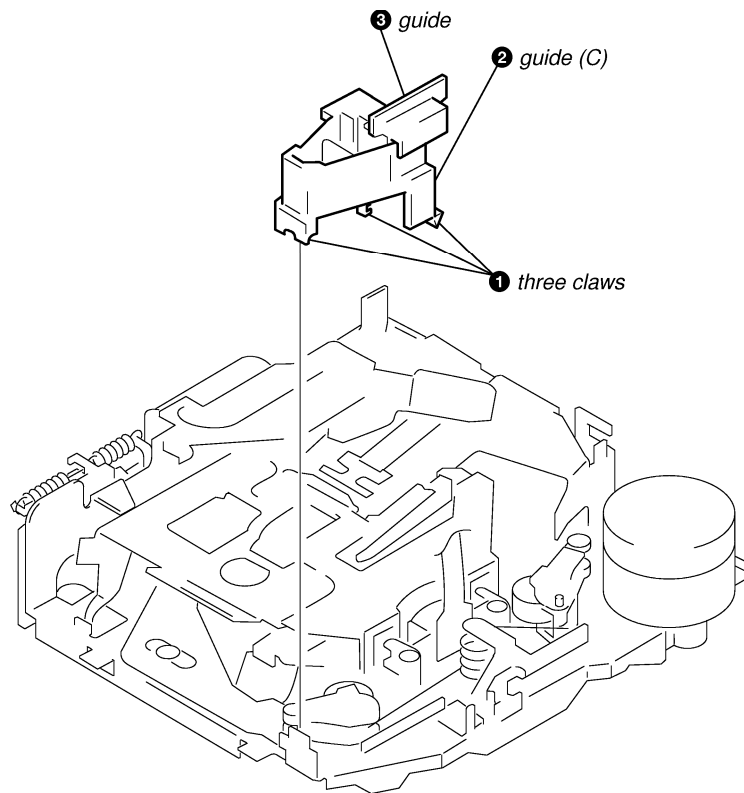

MOUNTING POSITION OF MAIN MOTOR ASSY (M904)

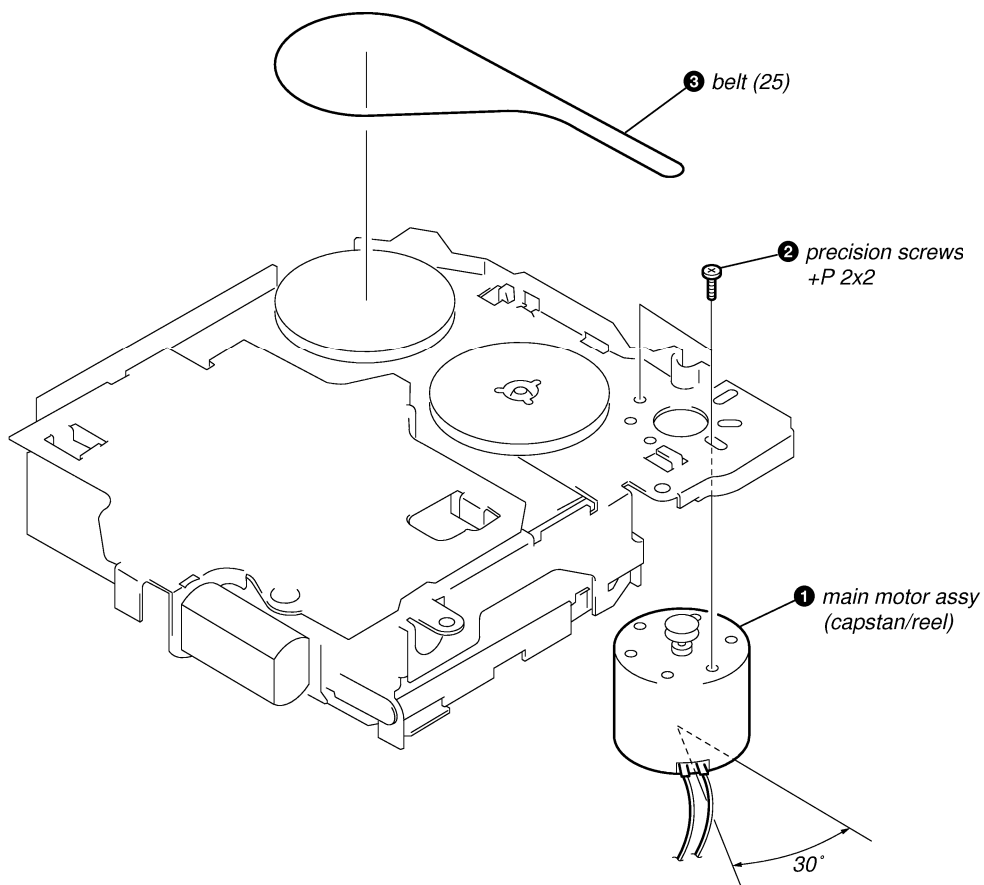

SECTION 4 MECHANICAL ADJUSTMENTS

PRECAUTION

1. Wipe the following components with an absorbent cotton cloth moistened with alcohol before adjustment :

PB head	Pinch roller
Idler	Rubber belt
Capstan	
2. Demagnetize the PB head using a head demagnetizer.
3. Be careful not to use a magnetized screwdriver.
4. After the adjustment is completed, lock the adjustment parts using screws.
5. Unless otherwise specified, make adjustments at the specified voltage (14.4V).

Torque Measurement

Mode	Torque Meter	Meter Reading
FWD	CQ-102C	35 – 65 g • cm (0.49 – 0.90 oz • inch)
FWD Back Tension		0.5 – 5.0 g • cm (0.01 – 0.07 oz • inch)
REV	CQ-102RC	35 – 65 g • cm (0.49 – 0.90 oz • inch)
REV Back Tension		0.5 – 5.0 g • cm (0.01 – 0.07 oz • inch)
FF, REW	CQ-201B	60 – 200 g • cm (0.83 – 2.78 oz • inch)

Tape Tension Measurement

Mode	Tension Meter	Meter Reading
FWD	CQ-403A	more than 60 g (more than 2.12 oz)
REV	CQ-403R	

SECTION 5 ELECTRICAL ADJUSTMENTS

See the adjustment location from on page 31 for the adjustment.


TAPE SECTION

0 dB = 0.775 V

Tape Speed Adjustment

Procedure :

1. Put the set into the FWD PB mode.

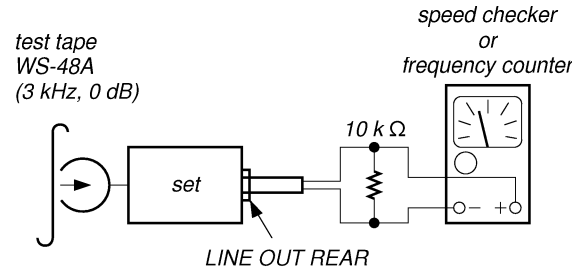

Specification : Constant speed


Speed checker	Frequency counter
– 1.5 to + 2.5 %	2,955 to 3,075 Hz

Adjustment Location : See page 31.

DOLBY Level Adjustment

Setting :

- SHIFT button : ON (light up REP, SET UP and P MODE)
- Preset [9] (P MODE) button : ON (light up P MODE and →)
- Preset [10] (→) button : NR off

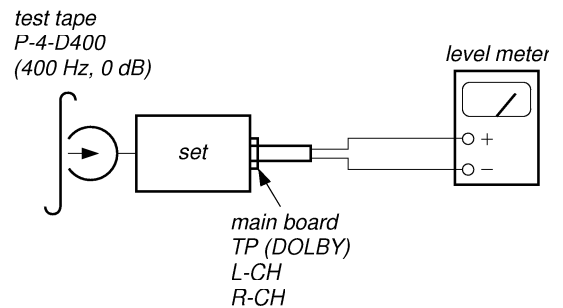

Procedure :

1. Put the set into the FWD PB mode.
2. Adjust RV101 (L-CH) and RV201 (R-CH) on main board so that level meter reading is -6 ± 0.5 dB (0.37 to 0.41 V).

Adjustment Location : See page 31.

TUNER SECTION

0 dB = 1 μ V

Cautions during repair

When the tuner unit is defective, replace it by a new one because its internal block is difficult to repair.

TEST MODE

This set have the test mode function. In the test mode, FM Auto Scan/Stop Level and MW Auto Scan/Stop Level adjustments can be performed easier than it in ordinary procedure.

<Set the Test Mode>

1. Set the "POWER SELECT" switch (S501) is "OFF" position.
2. Turn ON the regulated power supply. (All LEDs on the set lights up, and the clock is displayed.)
3. Push the preset **[4]** button.
4. Push the preset **[5]** button.
5. Press the preset **[1]** button for more than two seconds.
6. Then the display indicates all lights, the test mode is set.

<Release the Test Mode>

1. Push the **[OFF]** button.

Note on Adjustment


The adjustments of tuner section, should be performed according to the following sequence.

1. FM Auto Scan/Stop Level Adjustment
2. FM Stereo Separation Adjustment
3. FM RDS S-Meter Adjustment
4. MW Auto Scan/Stop Level Adjustment

FM Auto Scan/Stop Level Adjustment

Setting :


- D-BASS switch : OFF
TUNER button : FM

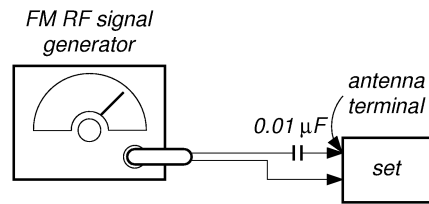


Carrier frequency : 98.00 MHz
Output level : 22 dB (12.6 μ V)
Mode : mono
Modulation : 1 kHz, 22.5 kHz deviation (30%)

Procedure :

1. Set to the test mode.
2. Push the **[TUNER]** button and set to FM.
Display

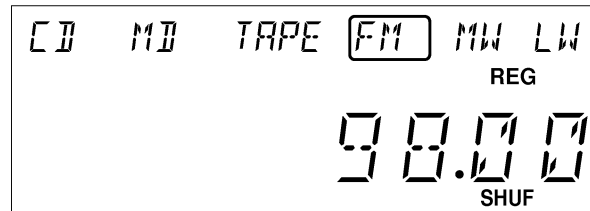


3. Push the preset **[3]** button.
Display

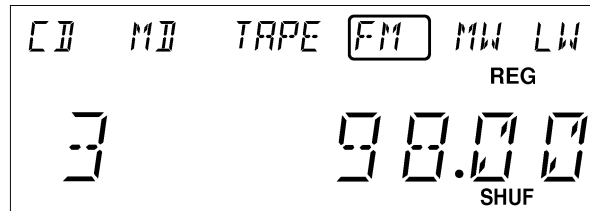

4. Adjust with the volume RV2 on TU1 so that the "FM" indication turns to "FM \bar{a} " indication on the display window. But, in case of already indicated "FM \bar{a} ", turn the RV2 so that put out light "3" indication and adjustment.

Display

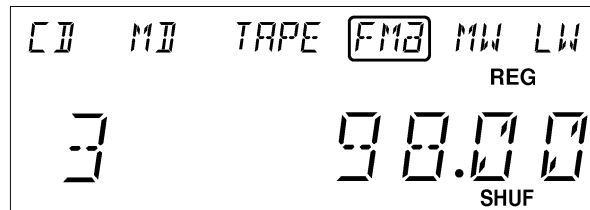


Adjustment Location : See page 31.

FM Stereo Separation Adjustment

Setting :

- D-BASS switch : OFF
- TUNER button : FM

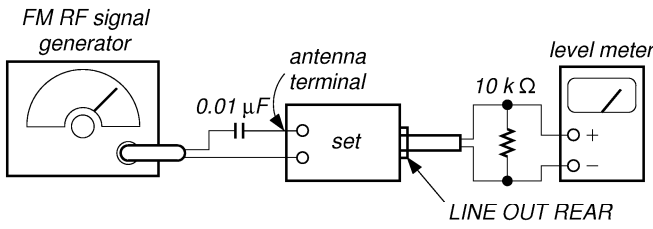

Carrier frequency : 98.00 MHz
 Output level : 70 dB (3.2 mV)
 Mode : stereo
 Modulation : main : 1 kHz, 20 kHz deviation (26.5%)
 sub : 1 kHz, 20 kHz deviation (26.5%)
 19 kHz pilot : 7.5 kHz deviation (10%)

Procedure :

FM stereo signal generator output channel	Level meter connection	Level meter reading (dB)
L-CH	L-CH	Ⓐ
R-CH	L-CH	Ⓑ Adjust RV4 on TU1 for maximum reading.
R-CH	R-CH	Ⓒ
L-CH	R-CH	Ⓓ Adjust RV4 on TU1 for maximum reading.

L-CH stereo separation : Ⓐ – Ⓑ
 R-CH stereo separation : Ⓒ – Ⓓ
 The separations of both channels should be equal.


Specification : Separation more than 30 dB

Adjustment Location : See page 31.

FM RDS S-Meter Adjustment

Setting :

- D-BASS switch : OFF
- TUNER button : FM

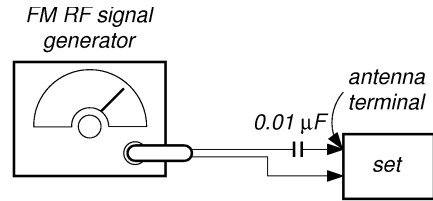


Carrier frequency : 98.00 MHz
 Output level : 35 dB (56.2 μV)
 Mode : mono
 Modulation : no modulation

Procedure :


1. Set to the test mode. (See page 28.)
2. Push the **TUNER** button and set to FM.

Display

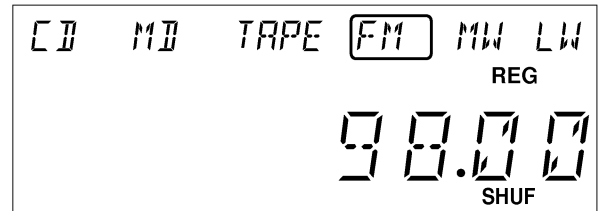


3. Push the preset **3** button.

Display

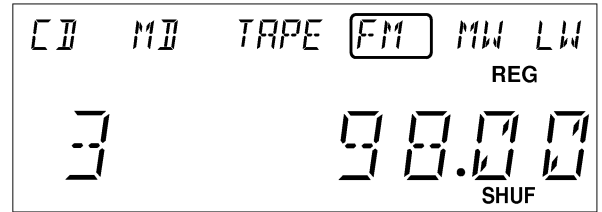

4. Push the preset **10** button.
5. Adjust RV31 so that the display indication is "16.0".

Display

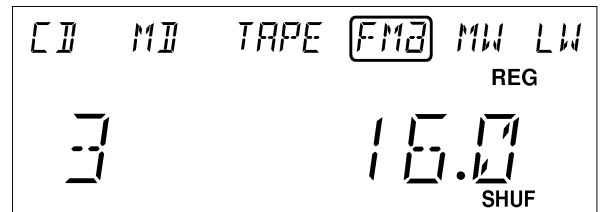

Specification : Display indication : 15.8 to 16.2.


Adjustment Location : See page 31.

MW Auto Scan/Stop Level Adjustment

Note : This adjustment should be performed after the FM Auto Scan / Stop Level Adjustment is done.

Setting :


D-BASS switch : OFF
TUNER button (twice) : MW

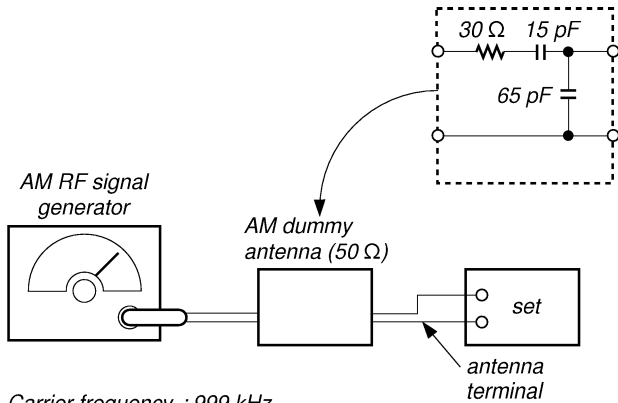

Carrier frequency : 999 kHz
30% amplitude
modulation by
1 kHz signal
output level : 33 dB (44.7 μV)

Procedure :

1. Set to the test mode. (See page 28.)
2. Push twice the **[TUNER]** button and set to MW.
Display

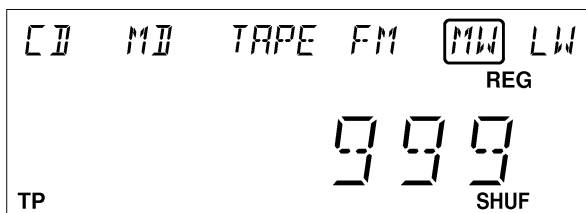


3. Push the preset **[3]** button.
Display



4. Adjust with the volume RV1 on TU1 so that the "MW" indication turns to "⌘ MW" indication on the display window. But, in case of already indicated "⌘ MW", turn the RV1 so that put out light "⌘" indication and adjustment.


Display

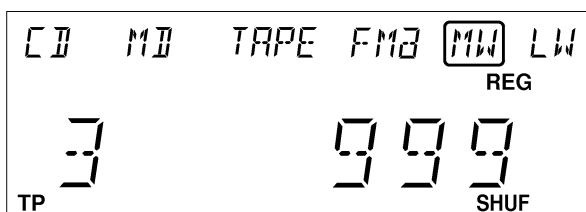


Adjustment Location : See page 31.

Adjustment Location :

– set upper view –

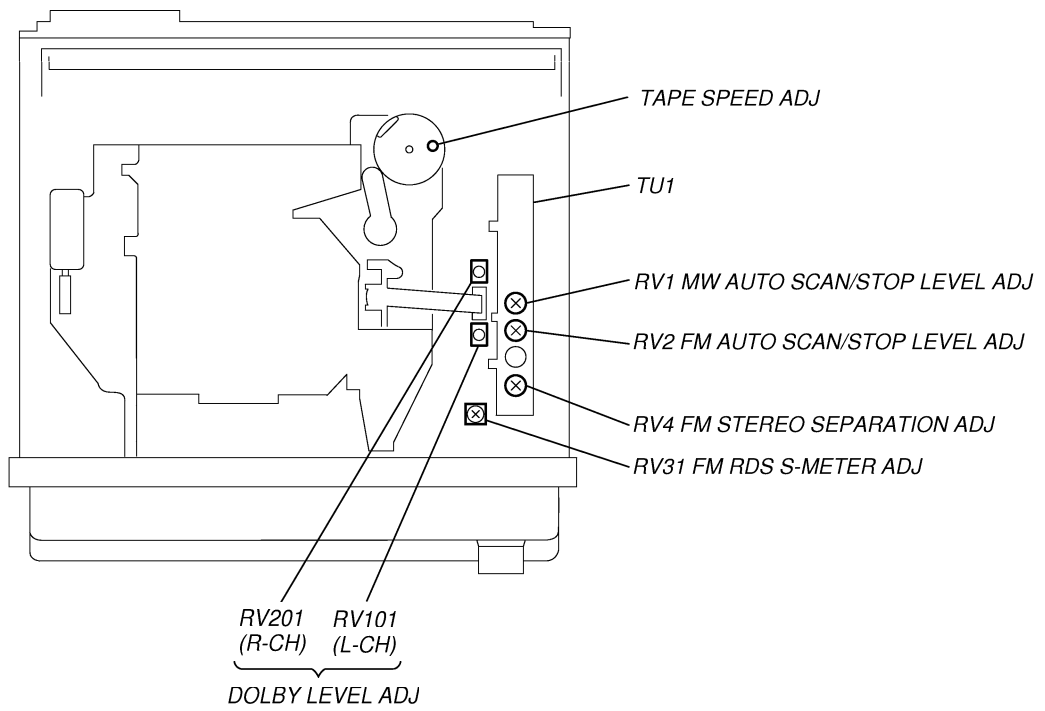

– set lower view –

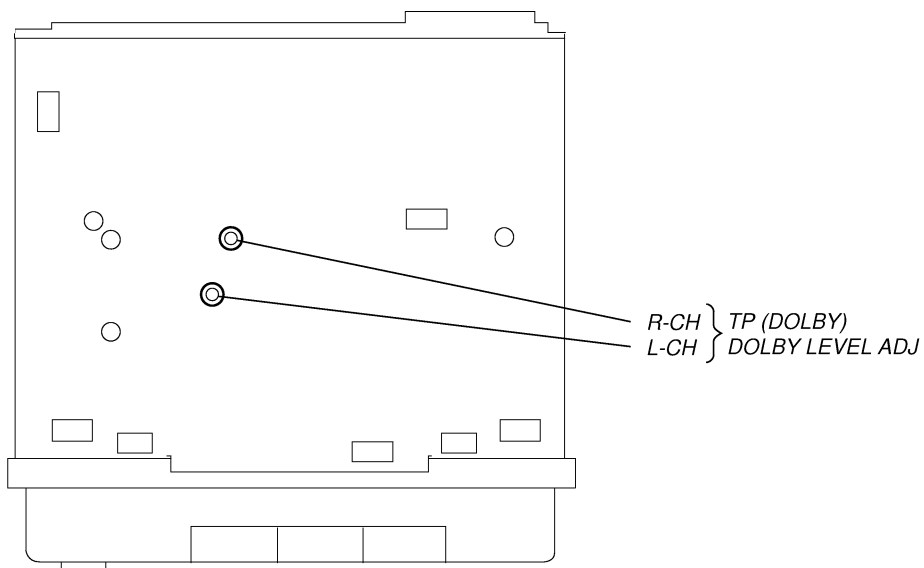


CD SECTION

Note :

1. CD Block basically constructed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use the oscilloscope with more than 10 MΩ impedance.
4. Clean an objective lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.

Focus Bias Adjustment


Setting : This adjustment is performed with the set placed horizontally.

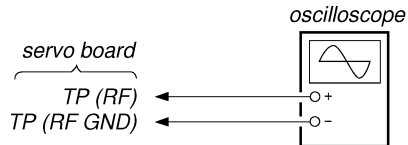

Procedure :

1. Connect an oscilloscope between TP (RF) and TP (RF GND) on the servo board.
2. Connect the power supply.
3. Push the **RESET** button (SW701) on the key board.
4. Insert the disc (YEDS-18) and playback.
5. Adjust RV1 so that the oscilloscope waveform is clear and check RF signal level is correct or not.

Note : Clear RF signal waveform means that the sharp “◇” can be clearly distinguished at the center of the waveform.

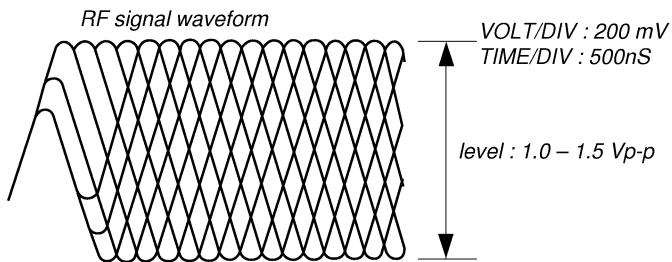

- When observing the eye pattern, set the oscilloscope to AC range and raise the vertical sensitivity so that it may be easily seen.

Adjustment Location : servo board

Focus Gain Adjustment (Coarse adjustment)

This adjustment is not required unless the following parts are replaced:


- Optical pick-up
- RV4

Procedure :

1. Set RV4 to the standard position. (mechanical center)
 2. Check whether operation noise (while noise type) caused by the 2-axis device (lens section of the optical pick-up) is abnormally loud. If the operation noise is too loud, turn RV4 slightly counter-clockwise.
- If the gain is too low : Focus does not function and no music is selected.
 - If the gain is too high : Noise caused by scratches and dust is heard and the operation becomes unstable.


Adjustment Location : servo board

Adjustment Location : servo board (component side)

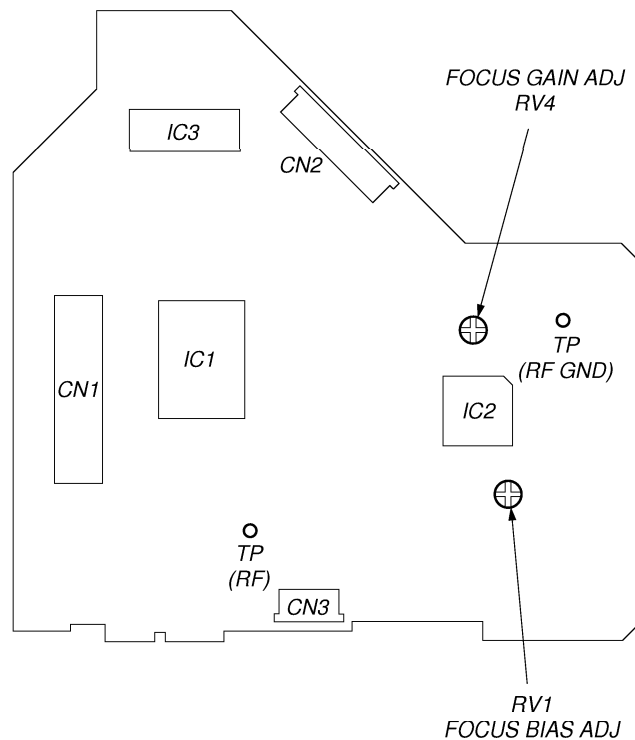


SECTION 6
DIAGRAMS

6-1. BLOCK DIAGRAM — CD SECTION —

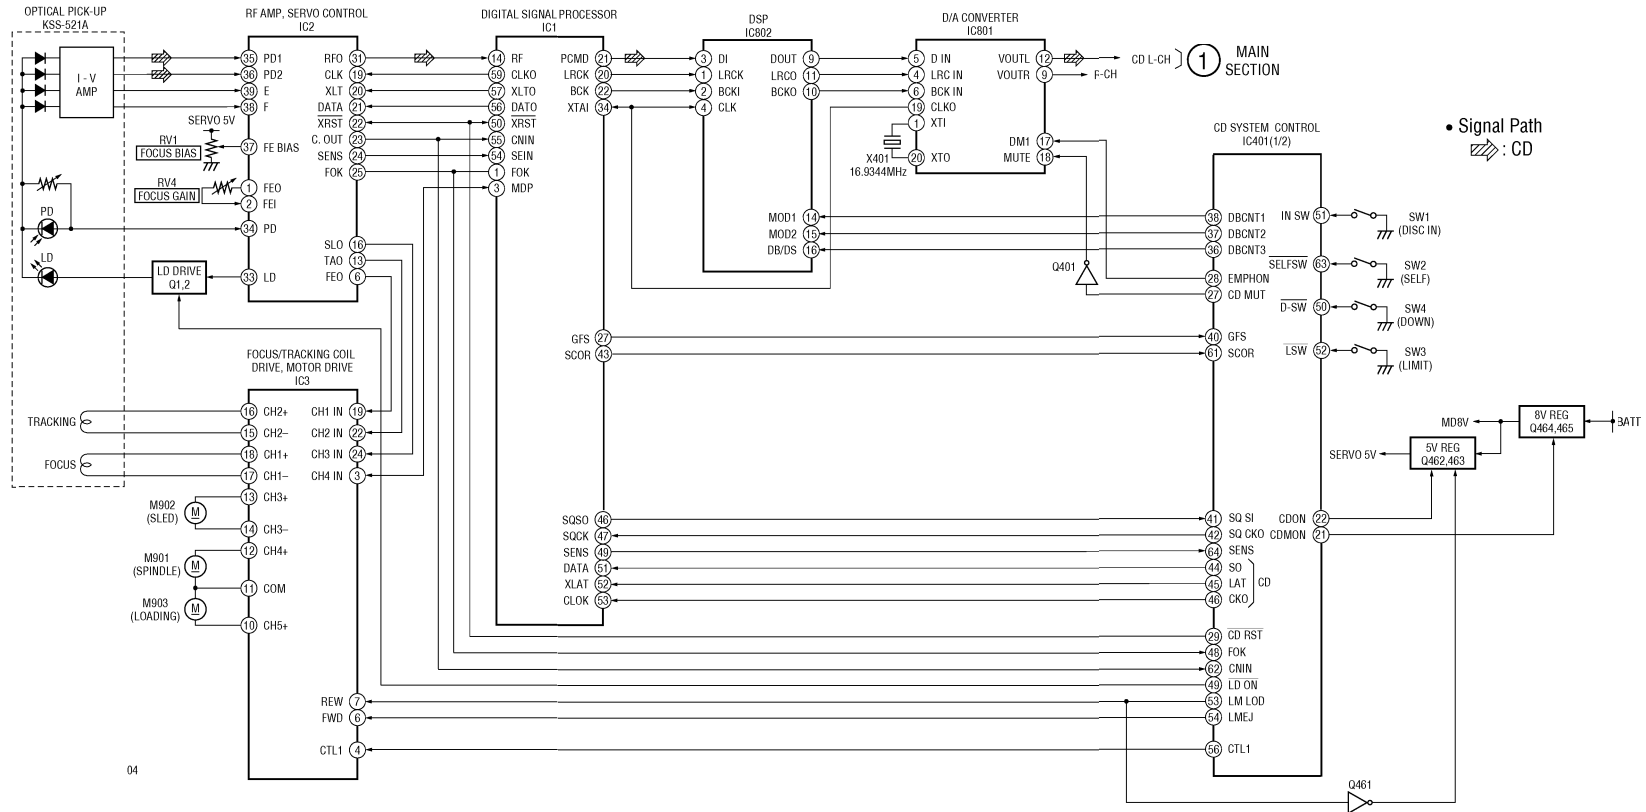


6-2. BLOCK DIAGRAM — TAPE SECTION —

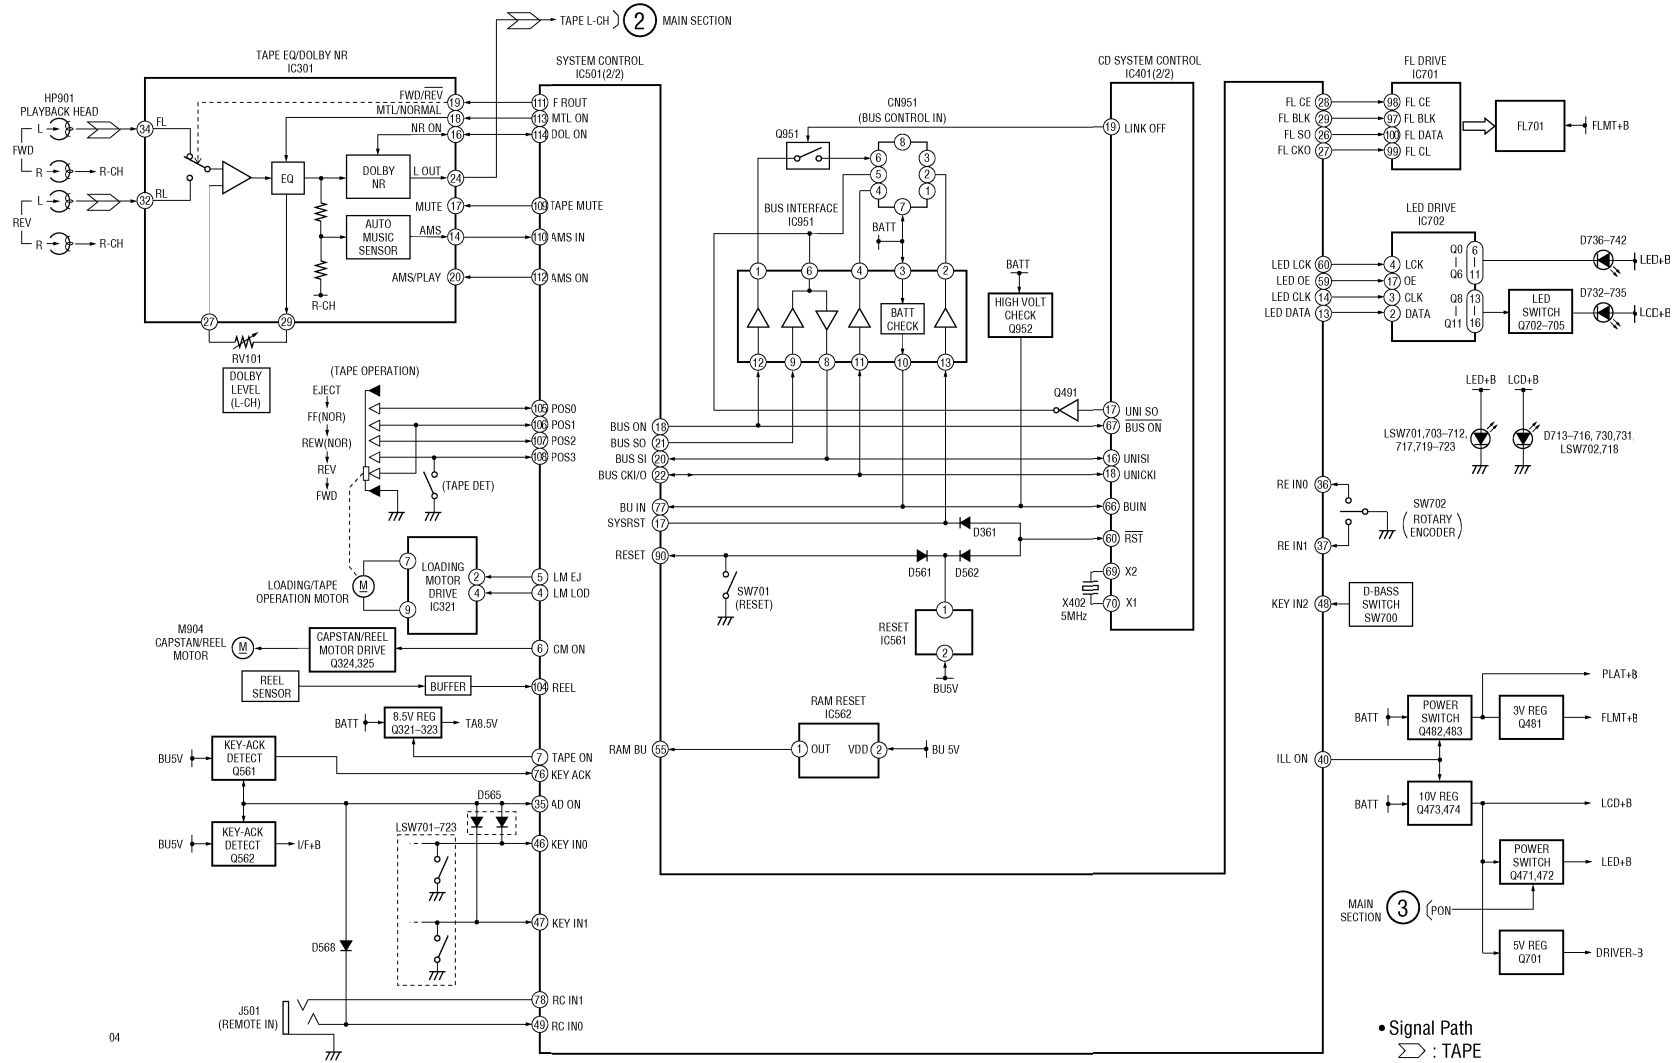

04

6-3. BLOCK DIAGRAM — MAIN SECTION —

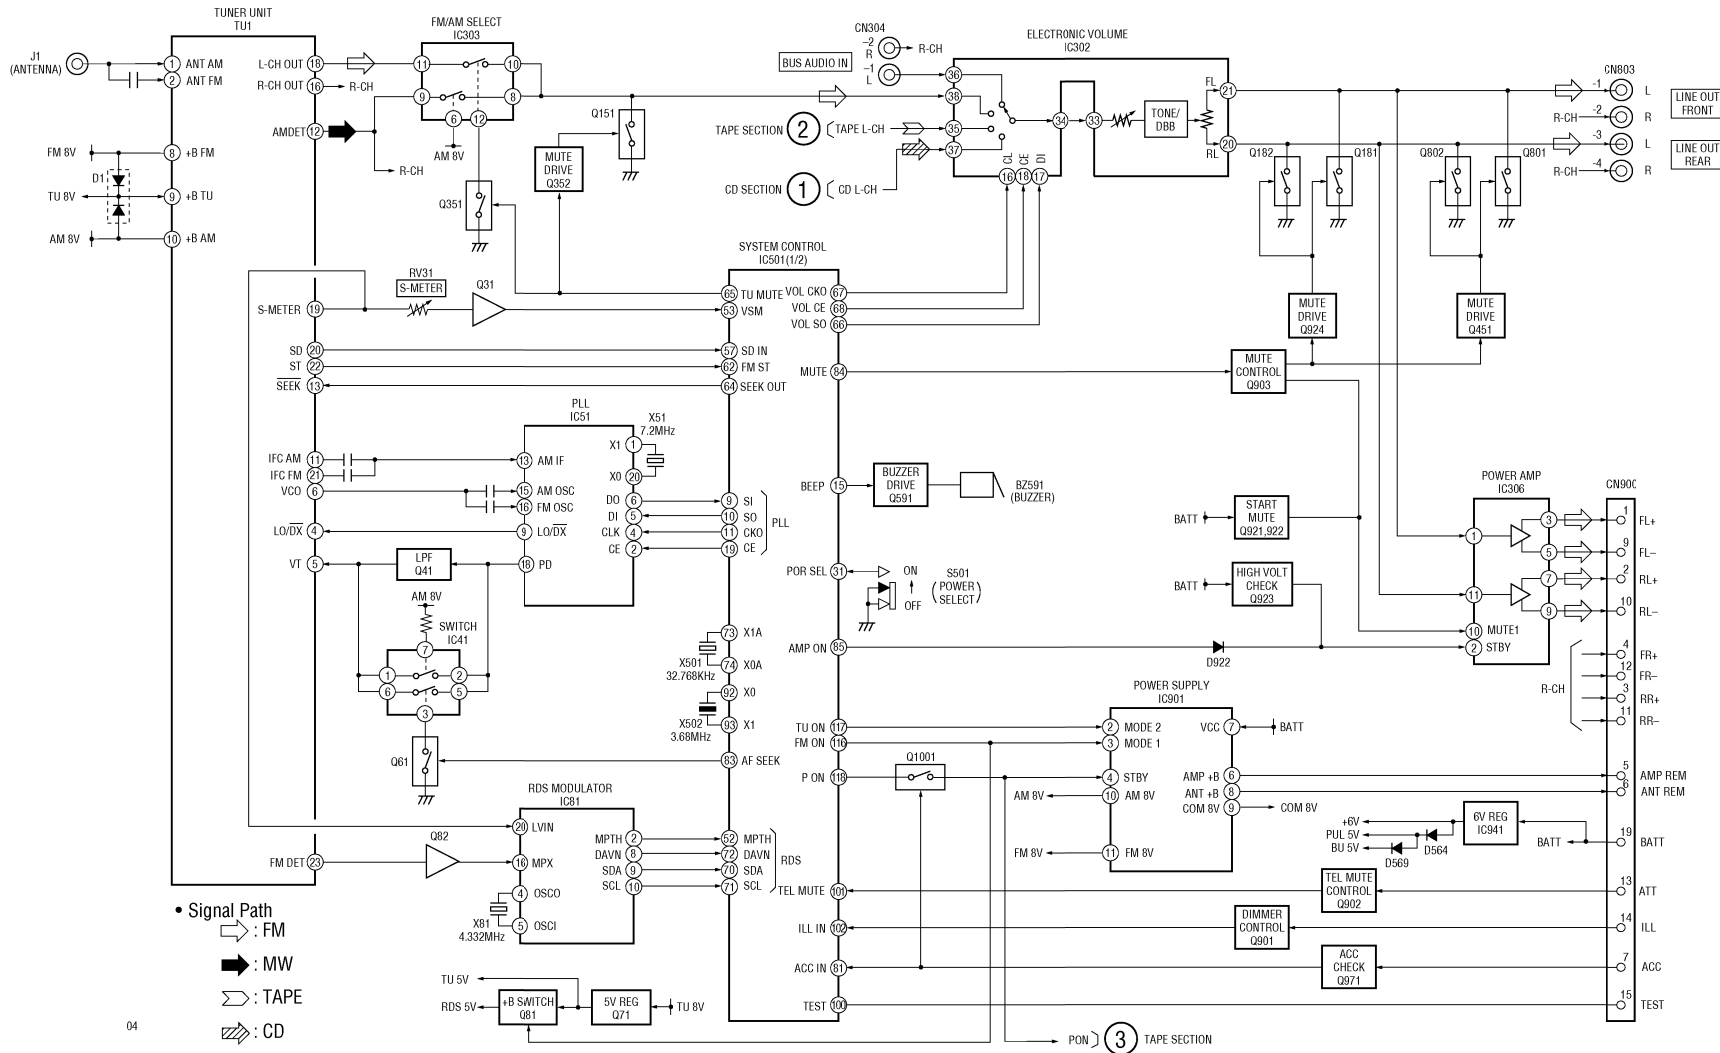

04

6-4. IC PIN DESCRIPTIONS

• IC401 μ PD78054GC-484-3B9 (CD SYSTEM CONTROL)

Pin No.	Pin Name	I/O	Pin Description
1 – 3	NCO	I	Not used.
4	AVSS	—	GND for A/D conversion.
5, 6	NCO	O	Not used.
7	AVREF	—	Reference voltage power supply for D/A conversion. (+5 V)
8 – 15	NCO	O	Not used.
16	UNISI	I	Serial data input (for SONY BUS)
17	UNISO	O	Serial data output (for SONY BUS)
18	UNICKI	I	Serial clock input (for SONY BUS)
19	LINKOFF	O	Link off output
20	NCO	O	Not used.
21	CDMON	O	CD mechanism power control output
22	CD-ON	O	CD power control output
23 – 26	NCO	O	Not used.
27	CDMUT	O	CD mute control output
28	EMPHON	O	Emphasis control output
29	$\overline{\text{CDRST}}$	O	CD signal process IC reset output
30 – 32	NCO	I	Not used.
33	VSS	—	Microcomputer GND
34	TBTGSEL	I	CD traverse/tracking gain automatic adjustment select input
35	NCO	I	Not used.
36 – 38	DBCNT3 – 1	O	D-BASS (Digital Bass Boost) IC control output 3 – 1
39	DB RST	O	D-BASS (Digital Bass Boost) IC reset output
40	GFS	I	GFS signal detection input
41	SQ SI	I	SUB Q data input
42	SQ CKO	O	SUB Q clock output
43	NCO	I	Not used.
44	CD SO	O	CD signal process serial data output
45	CD LAT	O	CD signal process latch output
46	CD CKO	O	CD signal process serial clock output
47	NCO	I	Not used.
48	F OK	I	Focus signal detection input
49	$\overline{\text{LDON}}$	O	Laser ON/OFF control output
50	$\overline{\text{DSW}}$	I	DOWN switch detection input
51	IN SW	I	Disc insert detection input
52	$\overline{\text{LSW}}$	I	Sled limit switch detection input
53	LML0D	O	Loading motor control output (Loading direction)
54	LMEJ	O	Loading motor control output (Eject direction)
55	NCO	I	Not used.
56	CTL1	O	Driver IC control output 1
57 – 59	NCO	O	Not used.
60	RST	—	Reset input
61	SCOR	I	SCOR signal detection input
62	CNIN	I	Track jump number count input
63	SELFSW	I	Disc self store detection input
64	SENS	I	SENS signal detection input
65	NCO	O	Not used.
66	BUIN	I	Backup power detection input
67	$\overline{\text{BUSON}}$	I	BUS ON control input
68	VDD	—	Microcomputer power supply
69	X2	—	Main oscillator output (5 MHz)
70	X1	—	Main oscillator input (5 MHz)

Pin No.	Pin Name	I/O	Pin Description
71	GND	—	GND
72	(OPEN)	—	Not used.
73	GND	—	GND
74	AVDD	—	Power supply for A/D conversion.
75	AVREF	—	Reference voltage power supply for A/D conversion.
76, 77	NCO	I	Not used.
78	NIL	I	Not used. (Pull up 5 V.)
79, 80	NCO	I	Not used.


• IC501 MB90574PFV-G-118-BND (SYSTEM CONTROL)

Pin No.	Pin Name	I/O	Pin Description
1	—	—	Not used.
2	BUS CKO	—	Not used.
3	—	—	Not used.
4	LM-LOD	O	Tape loading motor control output (Loading direction)
5	LM-EJ	O	Tape loading motor control output (Eject direction)
6	CM-ON	O	Tape capstan motor control output
7	TAPE ON	O	Tape power control output
8	VCC	—	Power supply pin (+5 V)
9	PLL SI	I	PLL data input
10	PLL SO	O	PLL data output
11	PLL CKO	O	PLL clock output
12	FLA DI	—	Not used.
13	LED DATA	O	LED driver control serial data output
14	LED CLK	O	LED driver control serial clock output
15	BEEP	O	BEEP output
16	—	—	Not used.
17	SYRST	O	System reset output
18	BUS ON	O	Bus ON control output
19	PLL CE	O	PLL chip enable output
20	BUS SI	O	Serial data input (for SONY BUS)
21	BUS SO	O	Serial data output (for SONY BUS)
22	BUS CKI/O	I/O	Serial clock input/output (for SONY BUS)
23	FLASH W	I	Flash write in mode detection input
24	SIRCS	I	Remote commander input (Not used in this set.)
25	—	—	Not used.
26	FL SO	O	FL serial data output
27	FL CKO	O	FL serial clock output
28	FL CE	O	FL serial chip enable output
29	FL BLK	O	FL blank control output
30 – 32	—	—	Not used.
33	VSS	—	GND
34	C	—	Power stabilization capacitor pin
35	AD ON	O	Power control output of A/D conversion.
36, 37	RE IN0, 1	I	Rotary encoder input 0, 1
38	DVCC	—	D/A converter VREF input
39	DVSS	—	GND of D/A converter.
40	ILL ON	O	Illumination power control output
41	TAPE ING	—	Not used.
42	AVCC	—	Analog power supply pin (+5 V)
43	AVRH	—	A/D converter VREF+ input
44	AVRL	—	A/D converter VREF- input
45	AVSS	—	Analog GND
46, 47	KEY IN0, 1	I	Key input 0, 1
48	KEY IN2	I	D-BASS switch input
49	RC IN0	I	Rotary commander input 0
50	DSTSEL0	I	Destination select input 0 (Fixed at “L” in this set.)
51	DSTSEL1	I	Destination select input 1 (Fixed at “L” in this set.)
52	RDS MTPH	I	Tuner multi-pass input
53	VSM	I	S-Meter voltage detection input
54	VCC	—	Power supply pin (+5 V)
55	RAM BU	I	RAM reset detection input
56	POW SEL	I	Power select initial setting input


Pin No.	Pin Name	I/O	Pin Description
57	SD IN	I	Signal detector input
58	WIDE	O	WIDE/NARROW select output (Not used in this set.)
59	LED OE	O	LED driver control over write output
60	LED LCK	O	LED driver control serial latch output
61	AM ST	I	AM stereo input (Not used in this set.)
62	FM ST	I/O	Used in conjunction with stereo input/monaural output (FM mode)
63	VSS	—	GND
64	SEEK OUT	O	SEEK OUT output
65	TU MUTE	O	Tuner mute output
66	VOL SO	O	Electric volume serial data output
67	VOL CKO	O	Electric volume serial clock output
68	VOL CE	O	Electric volume serial chip enable output
69	—	—	Not used.
70	RDS SDA	I	RDS serial clock input
71	RDS SCL	I	RDS serial data input
72	RDS DAVN	I	RDS IC data taking in detection input
73	X1A	—	Low speed oscillation input (32.768 kHz)
74	X0A	—	Low speed oscillation input (32.768 kHz)
75	—	—	Not used.
76	KEY ACK	I	Key input acknowledge
77	BU IN	I	Back-up power detection input
78	RC IN1	I	Rotary commander input
79, 80	—	—	Not used.
81	ACC IN	I	Accessory power detection input
82	—	—	Not used.
83	AF SEEK	O	AF SEEK output
84	MUTE	O	System mute control output
85	AMP ON	O	Power amplifier power control output
86	HSTX	—	Connect to power supply pin.
87	MD2	—	Connect to GND.
88, 89	MD0, 1	—	Connect to power supply pin.
90	RESET	I	Microcomputer reset input
91	VSS	—	GND
92	X0	—	High speed oscillation input (3.68 MHz)
93	X1	—	High speed oscillation input (3.68 MHz)
94	VCC	—	Power supply pin (+5 V)
95 – 99	—	—	Not used.
100	TEST	I	Test mode setting detection input
101	TEL MUTE	I	Telephone mute detection input
102	ILL IN	I	Illumination line detection input
103	—	—	Not used.
104	REEL	I	Tape reel table rotation detection input
105	POS0	I	Tape position detection input 0
106	POS1	I	Tape position detection input 1
107	POS2	I	Tape position detection input 2
108	POS3	I	Tape position detection input 3
109	TAPE MUTE	O	Tape mute output
110	AM IN	I	AM stereo detection input
111	F ROUT	O	Tape forward/reverse detection output
112	AMS ON	O	Tape AMS control output
113	MTL ON	I	Auto METAL detection input
114	DOL ON	O	Tape DOLBY control output

Pin No.	Pin Name	I/O	Pin Description
115	DOL B/C	O	Tape DOLBY B/C select control output (Not used in this set.)
116	FM ON	O	FM ON output
117	TU ON	O	Tuner ON output
118	P-ON	O	System power control output
119	VSS	—	GND
120	—	—	Not used.

6-5. CIRCUIT BOARDS LOCATION

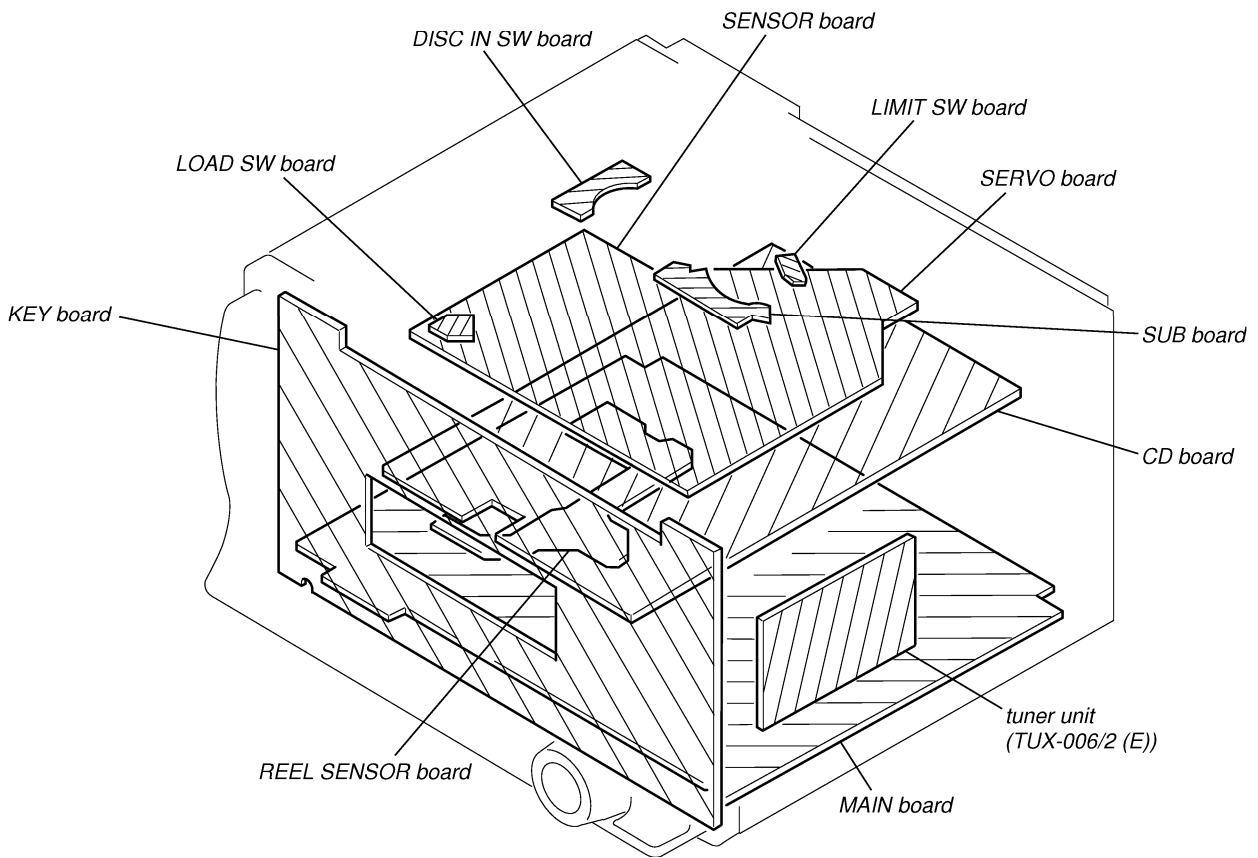

6-6. PRINTED WIRING BOARDS — CD MECHANISM SECTION —

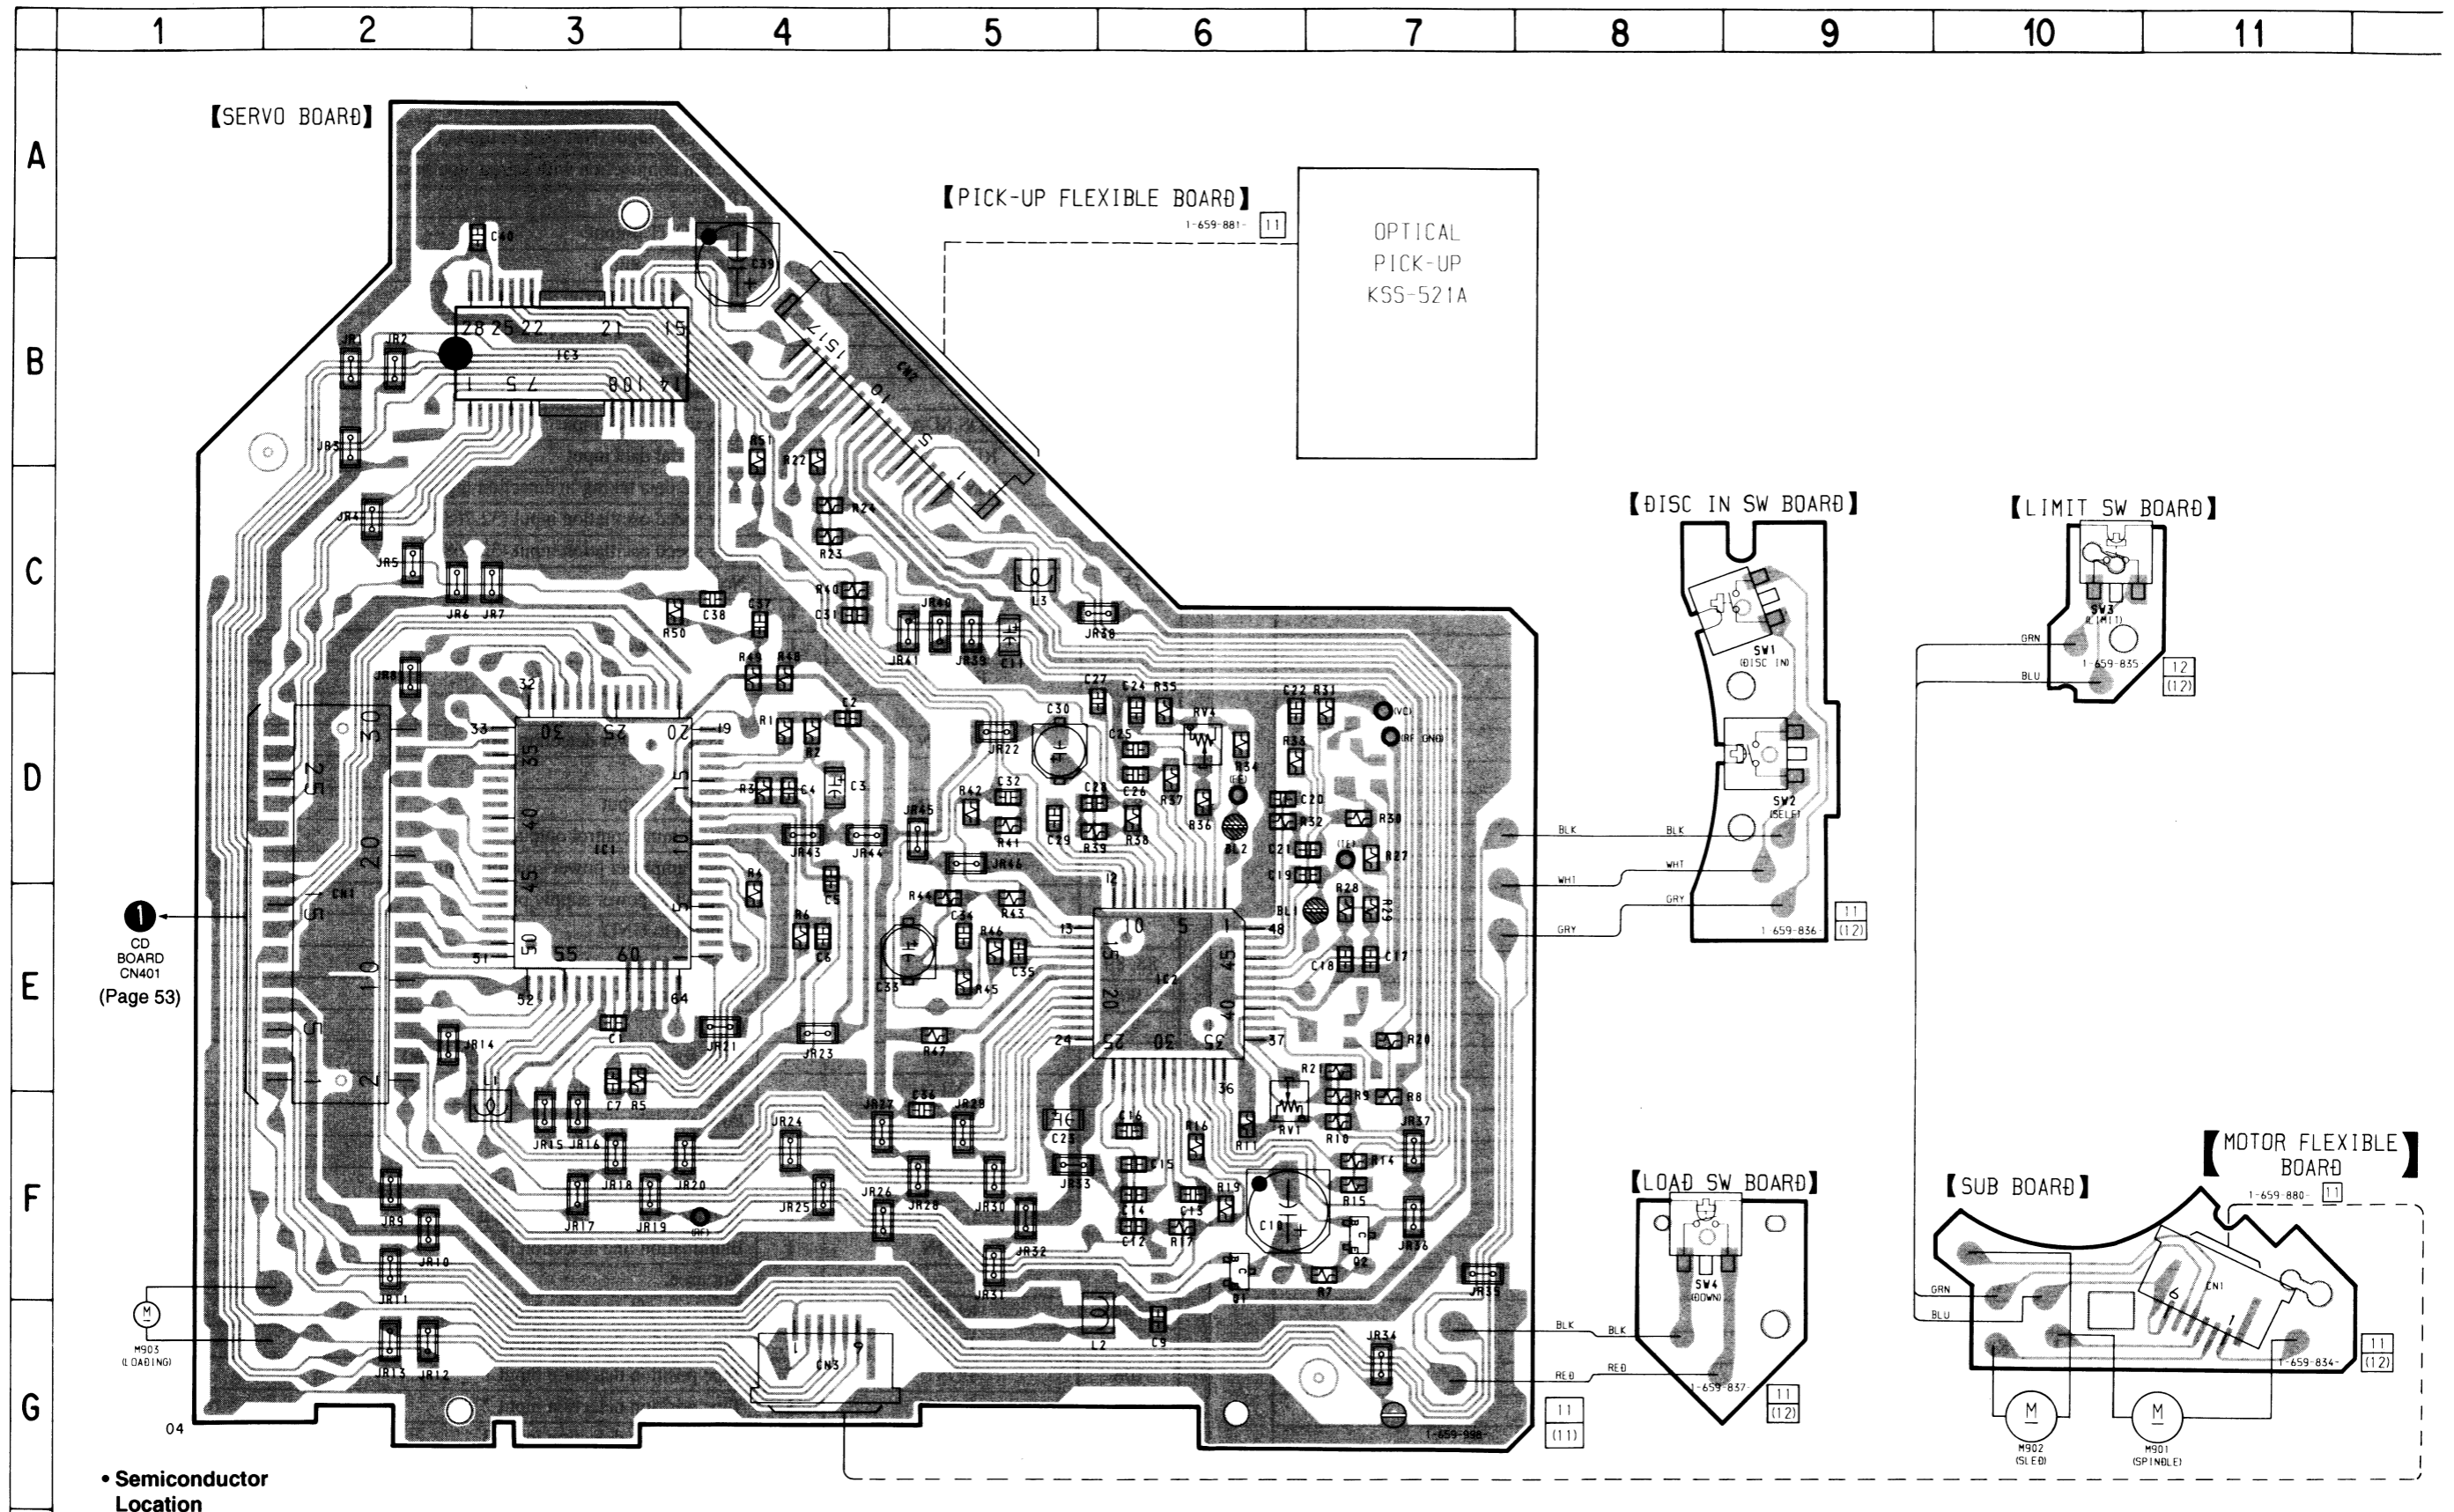


1
CD BOARD
CN401
(Page 53)

• Semiconductor Location

Ref. No.	Location
IC1	D-3
IC2	E-6
IC3	B-3
Q1	F-6
Q2	F-7

Note:
 • — : parts extracted from the conductor side.
 • ▨ : Pattern from the side which enables seeing.

6-7. SCHEMATIC DIAGRAM — CD MECHANISM SECTION — • Refer to page 69 for IC Block Diagrams.

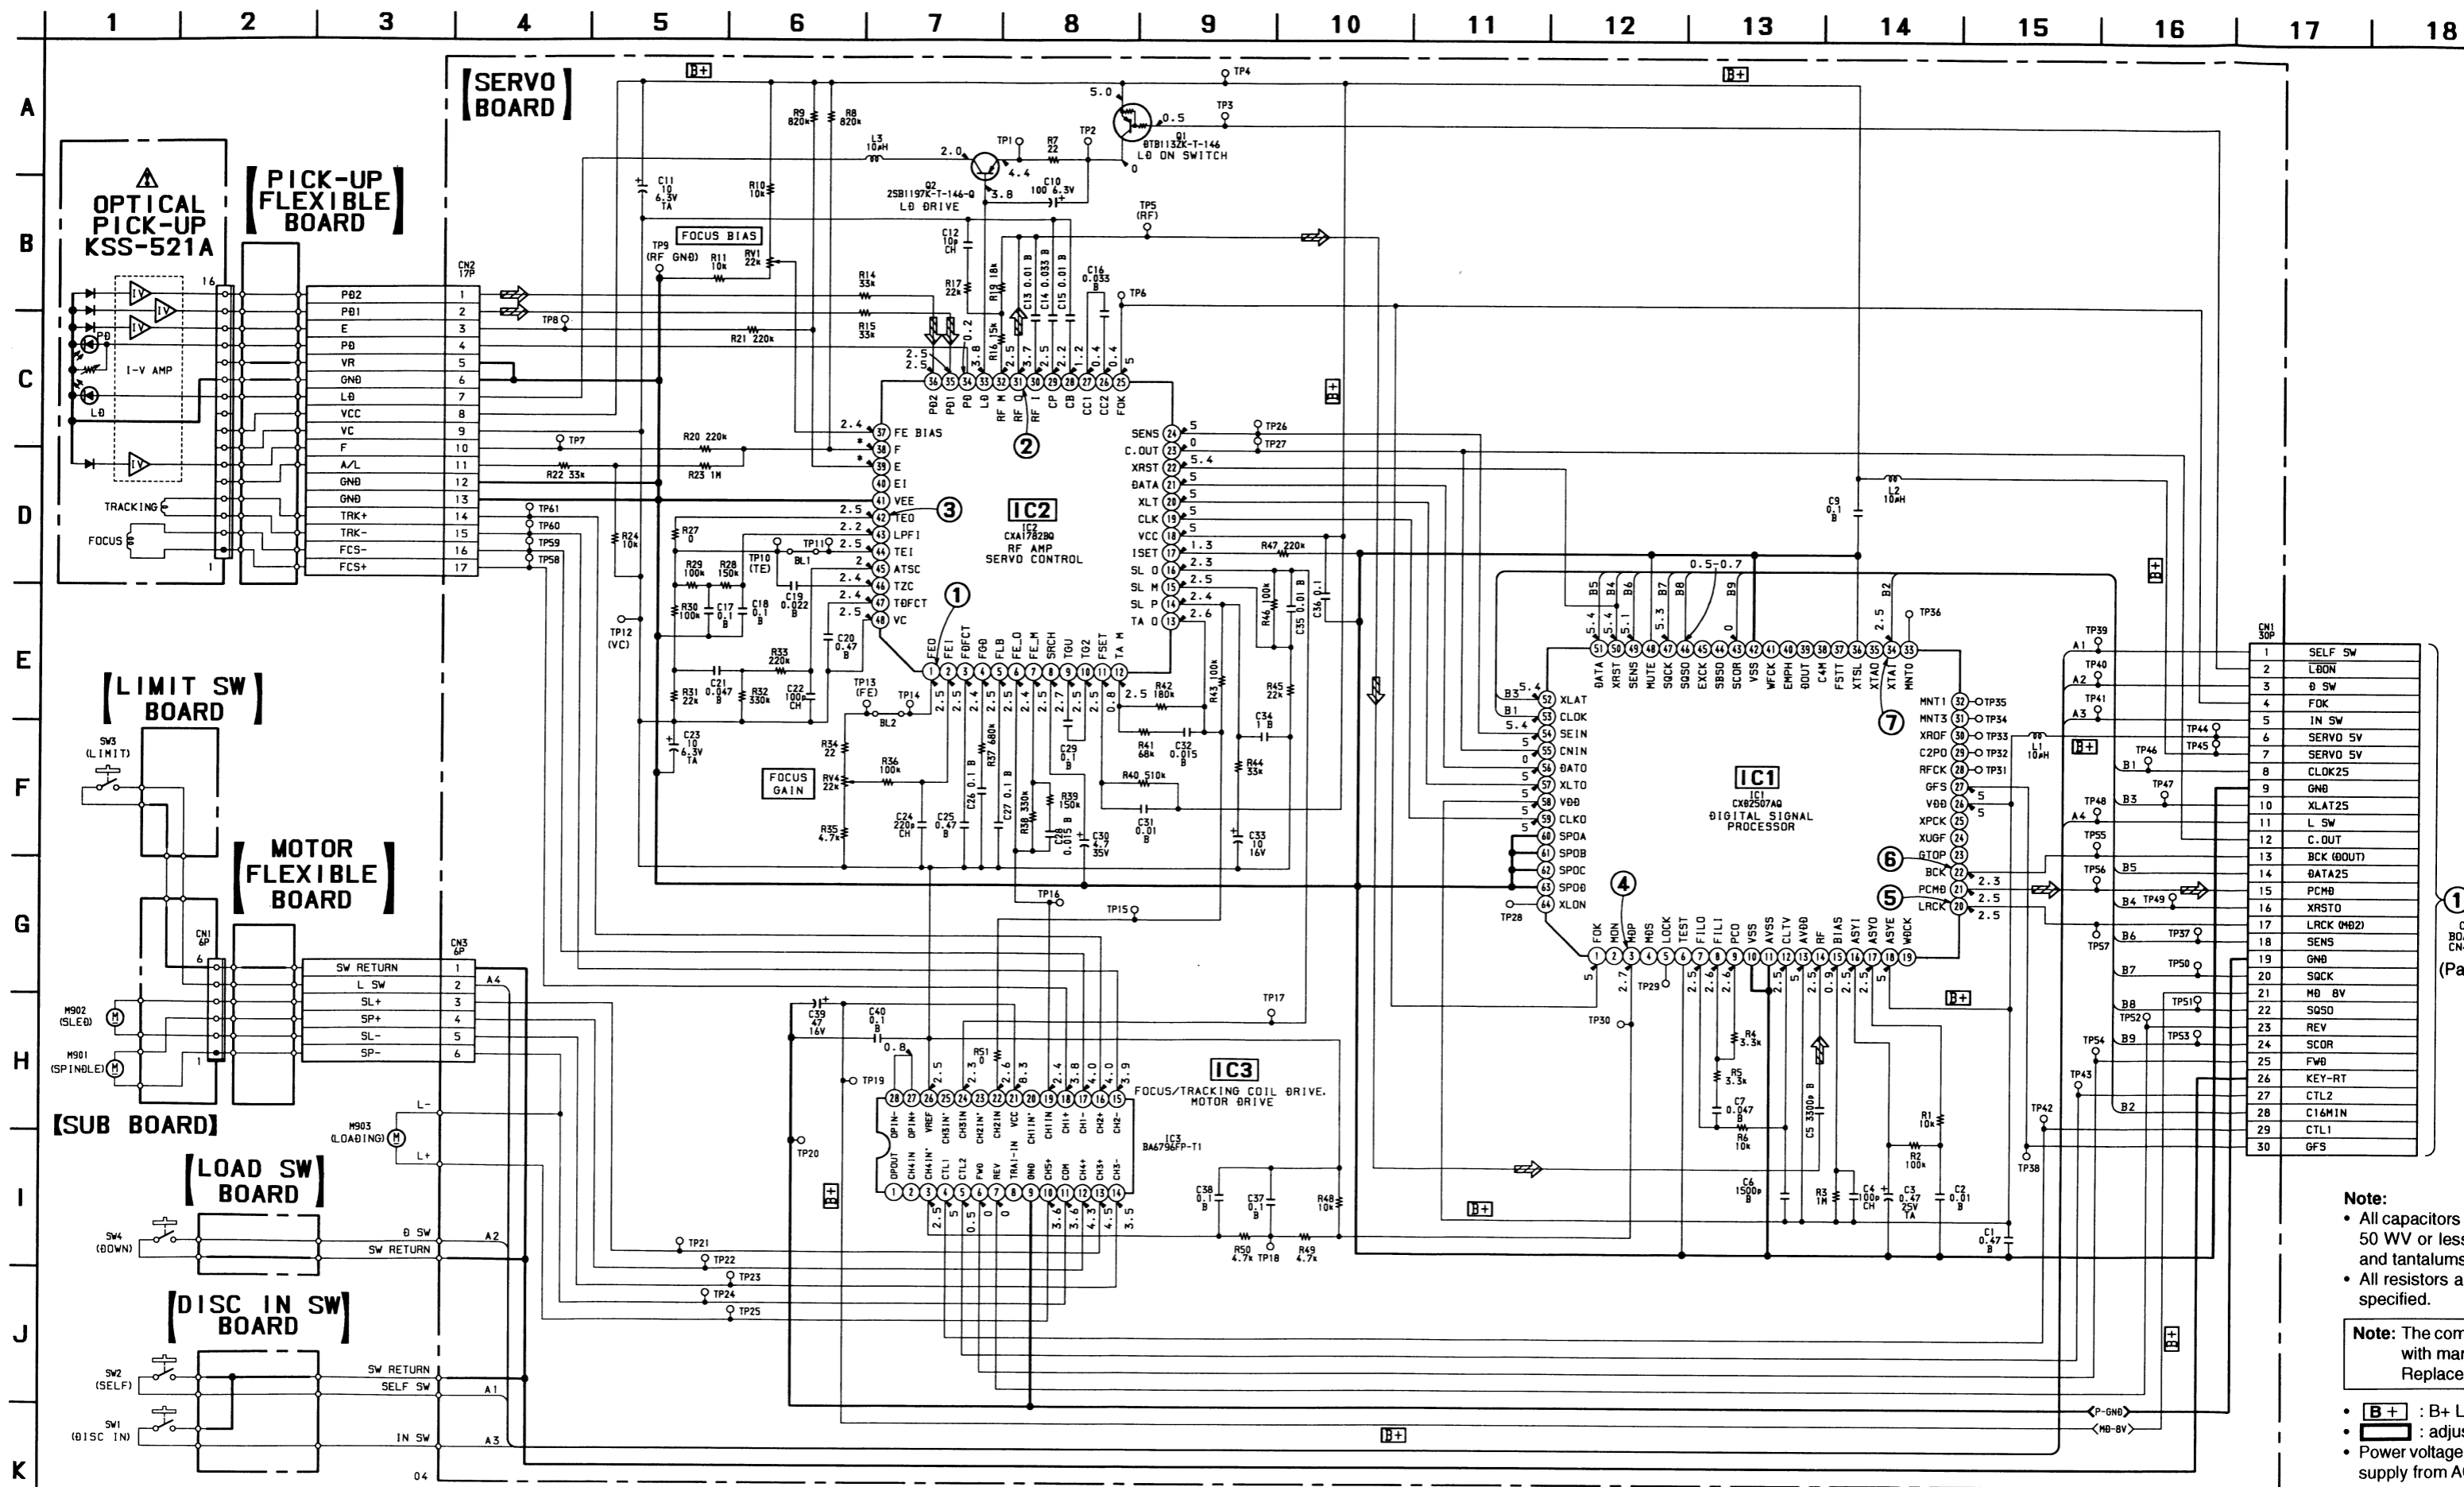


1	SELF SW
2	L8ON
3	B SW
4	FOK
5	IN SW
6	SERVO 5V
7	SERVO 5V
8	CLOCK25
9	GND
10	LAT25
11	L SW
12	C. OUT
13	BCK (BOUT)
14	BATA25
15	PCMB
16	XRSTO
17	LRCK (MB2)
18	SENS
19	GND
20	SOCK
21	MB 8V
22	SO50
23	REV
24	SCOR
25	FWB
26	KEY-RT
27	CTL2
28	C16MIN
29	CTL1
30	GFS

Note:
 • All capacitors 50 WV or less and tantalums
 • All resistors as specified.


Note: The com with mar Replace

• [B+] : B+ L
 • [] : adjust
 • Power voltage supply from A

or IC Block Diagrams.

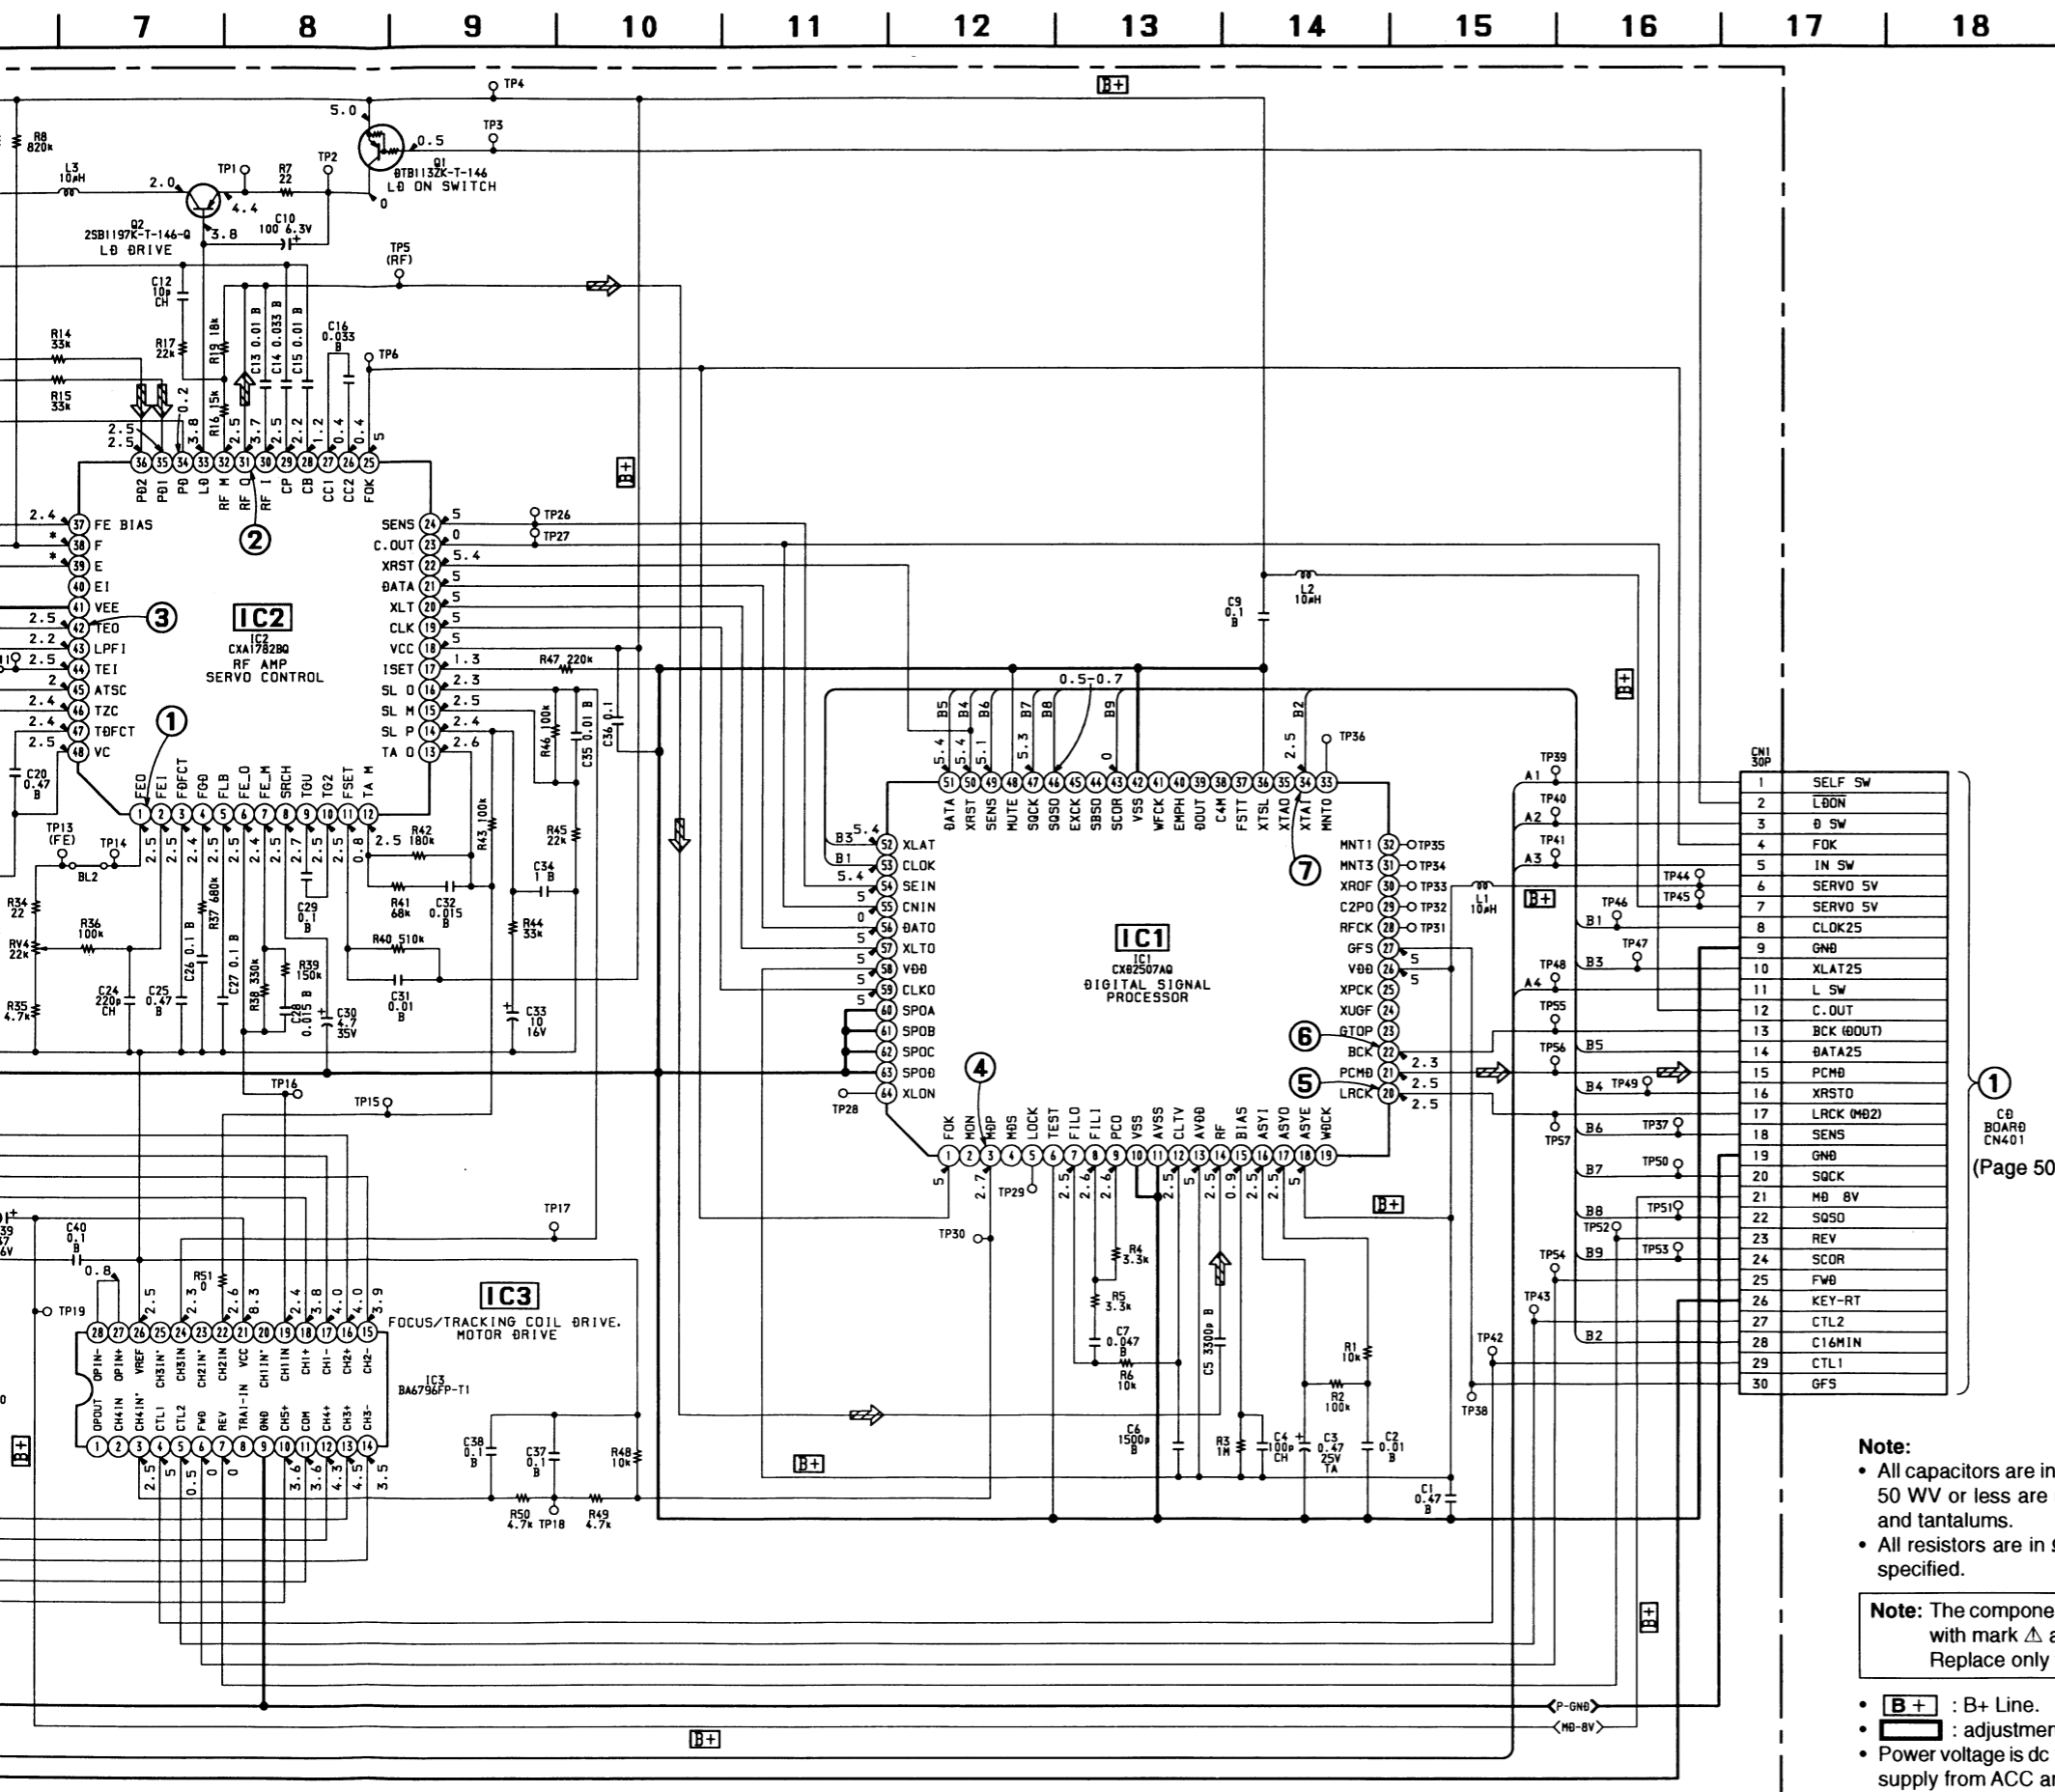

• Waveforms (MODE:PLAY)

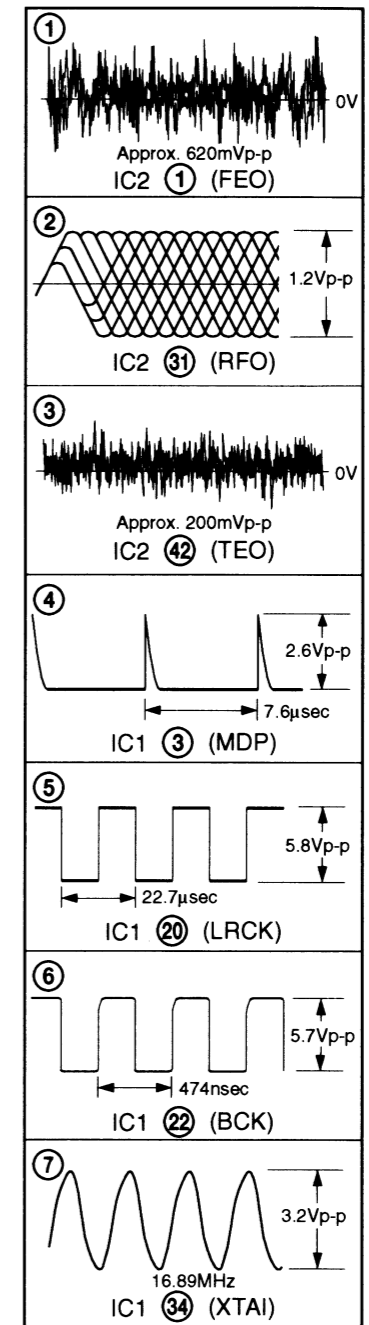

①
CB BOARD
CN401
(Page 50)

Note:


- All capacitors are in μF unless otherwise noted. pF: μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4W or less unless otherwise specified.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

- [B+] : B+ Line.
- [] : adjustment for repair.
- Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BATT cords.

- Voltage and waveforms are dc with respect to ground under no-signal conditions. no mark : CD PLAY
- * : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path. ⇨ : CD

6-8. SCHEMATIC DIAGRAM — CD SECTION — • Refer to page 69 for IC Block Diagrams.

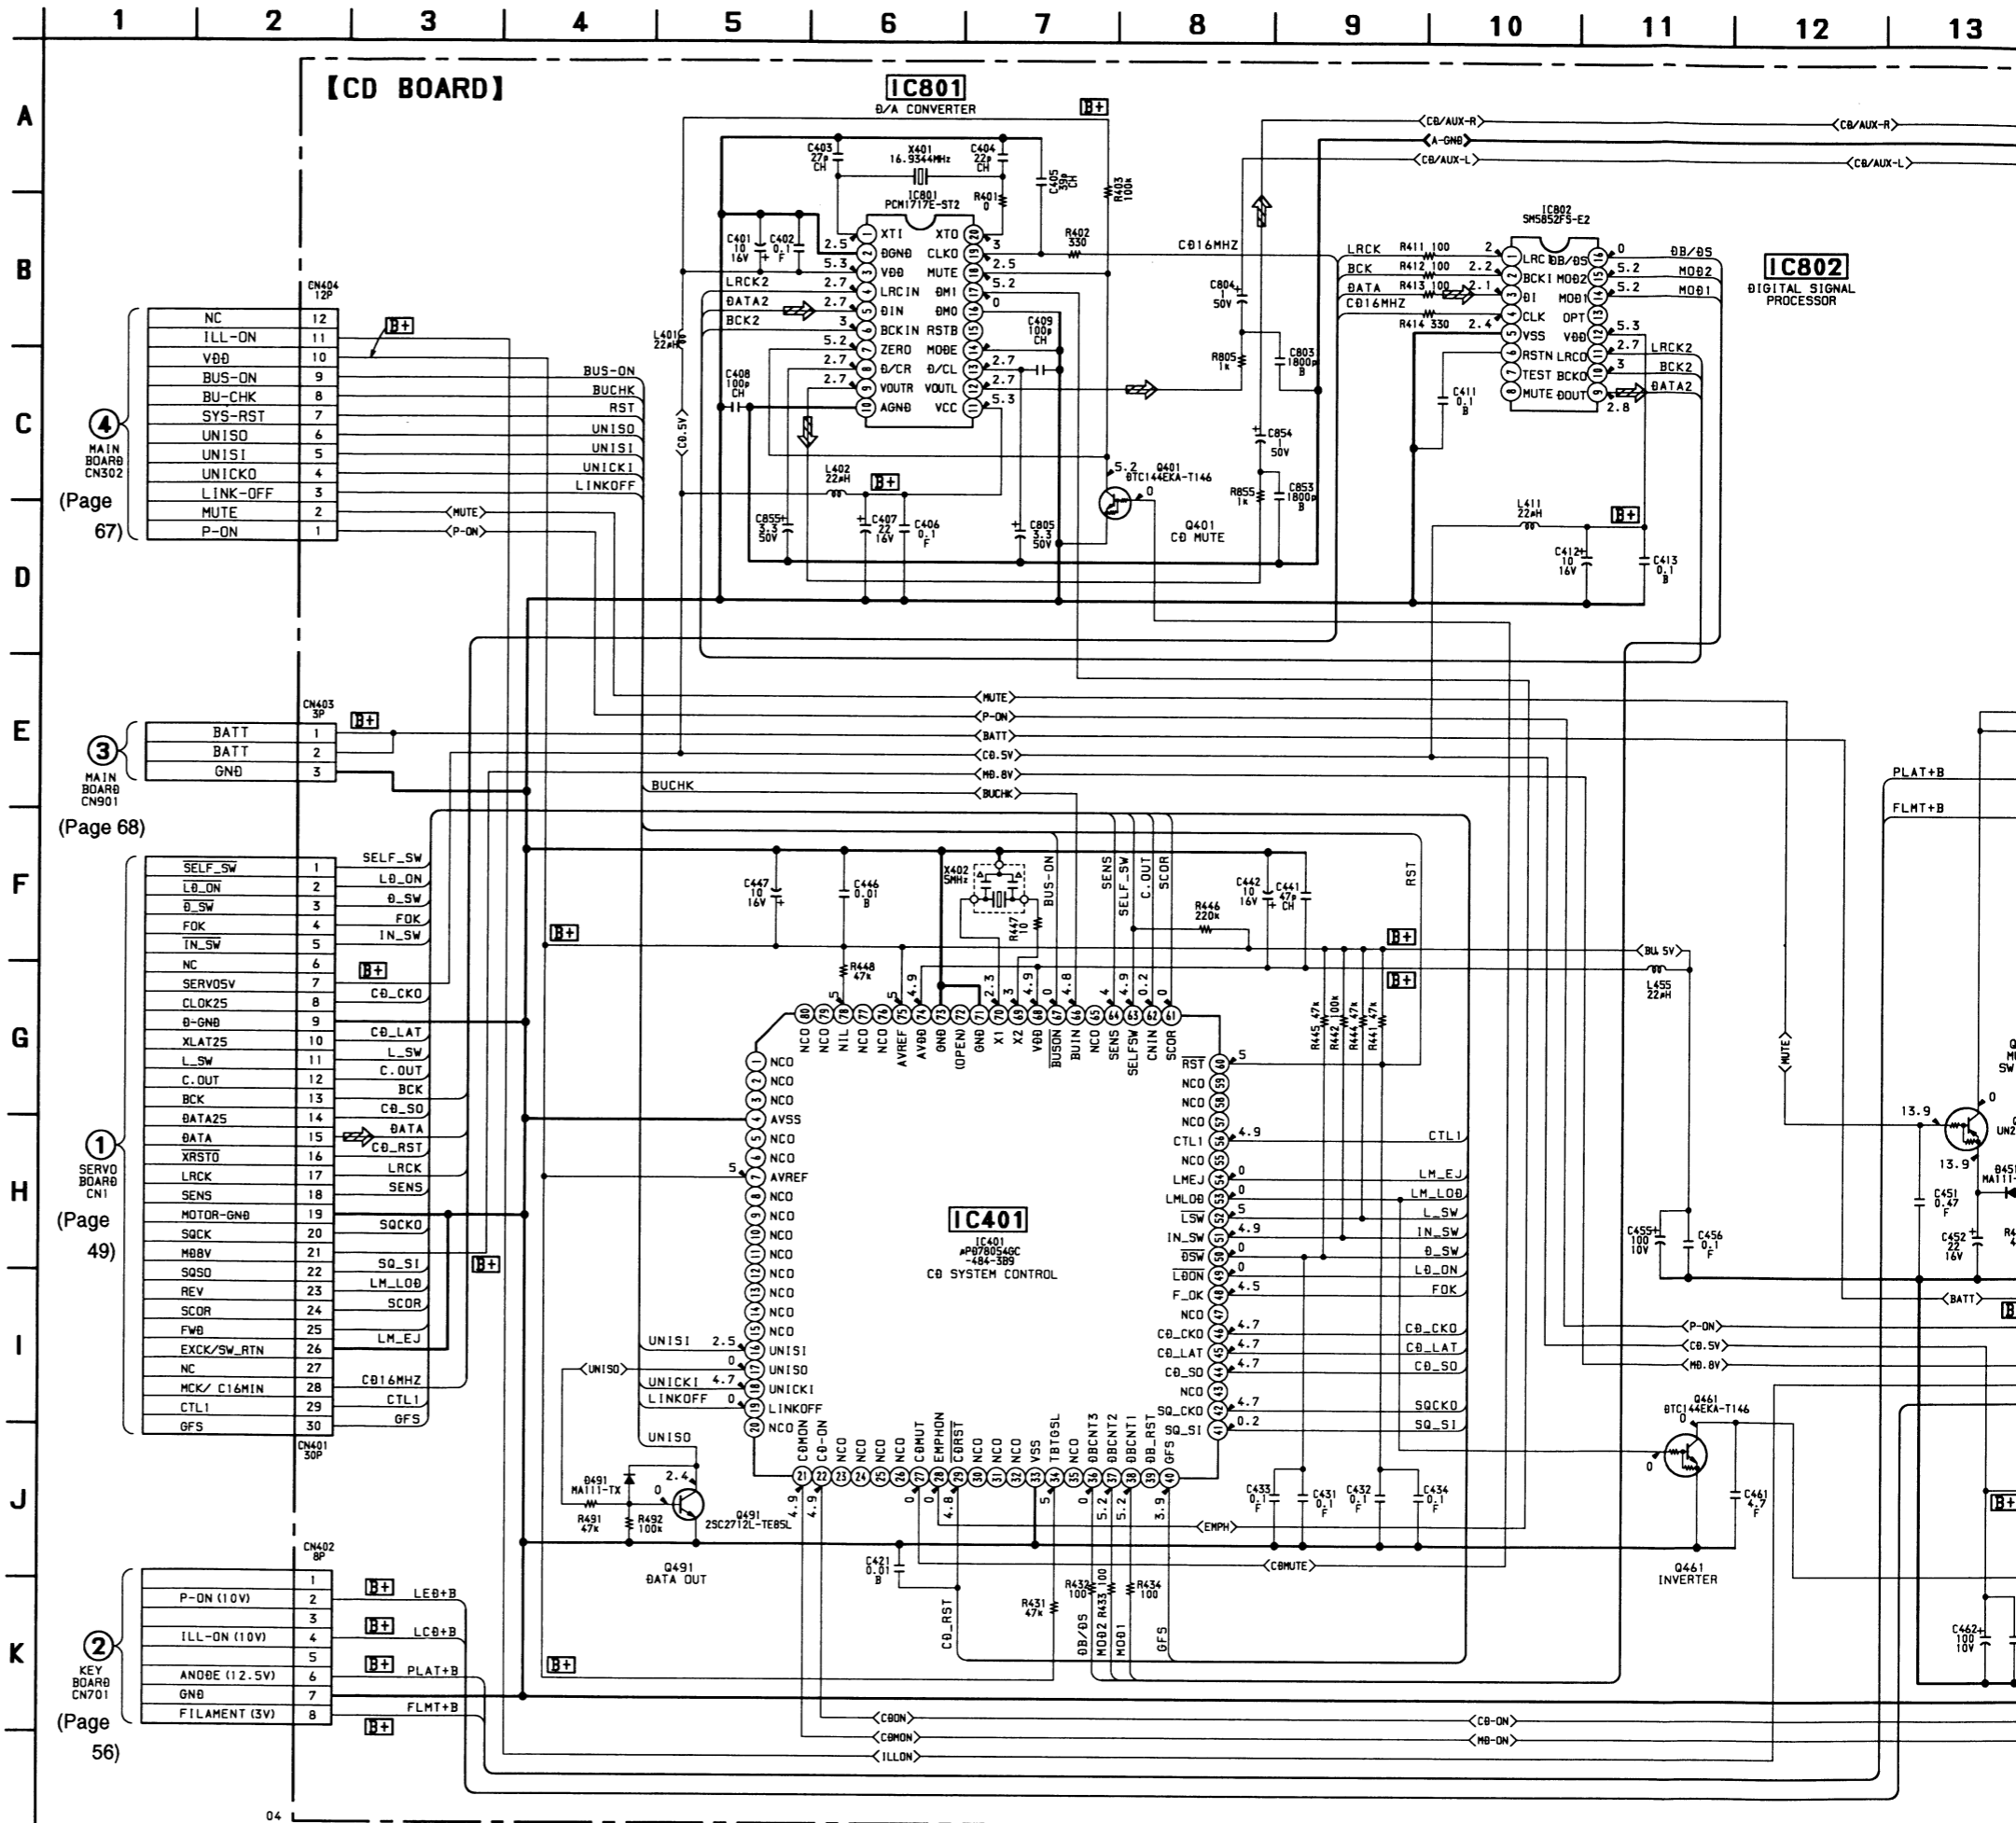


Note:

- All capacitors are in μF unless otherwise noted. pF: μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- **B+** : B+ Line.
- Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BATT cords.
- Voltage is dc with respect to ground under no-signal condition.
- no mark : CD PLAY
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Signal path.
- \Rightarrow : CD

SCHEMATIC DIAGRAM — CD SECTION — • Refer to page 69 for IC Block Diagrams.

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19

[CD BOARD]

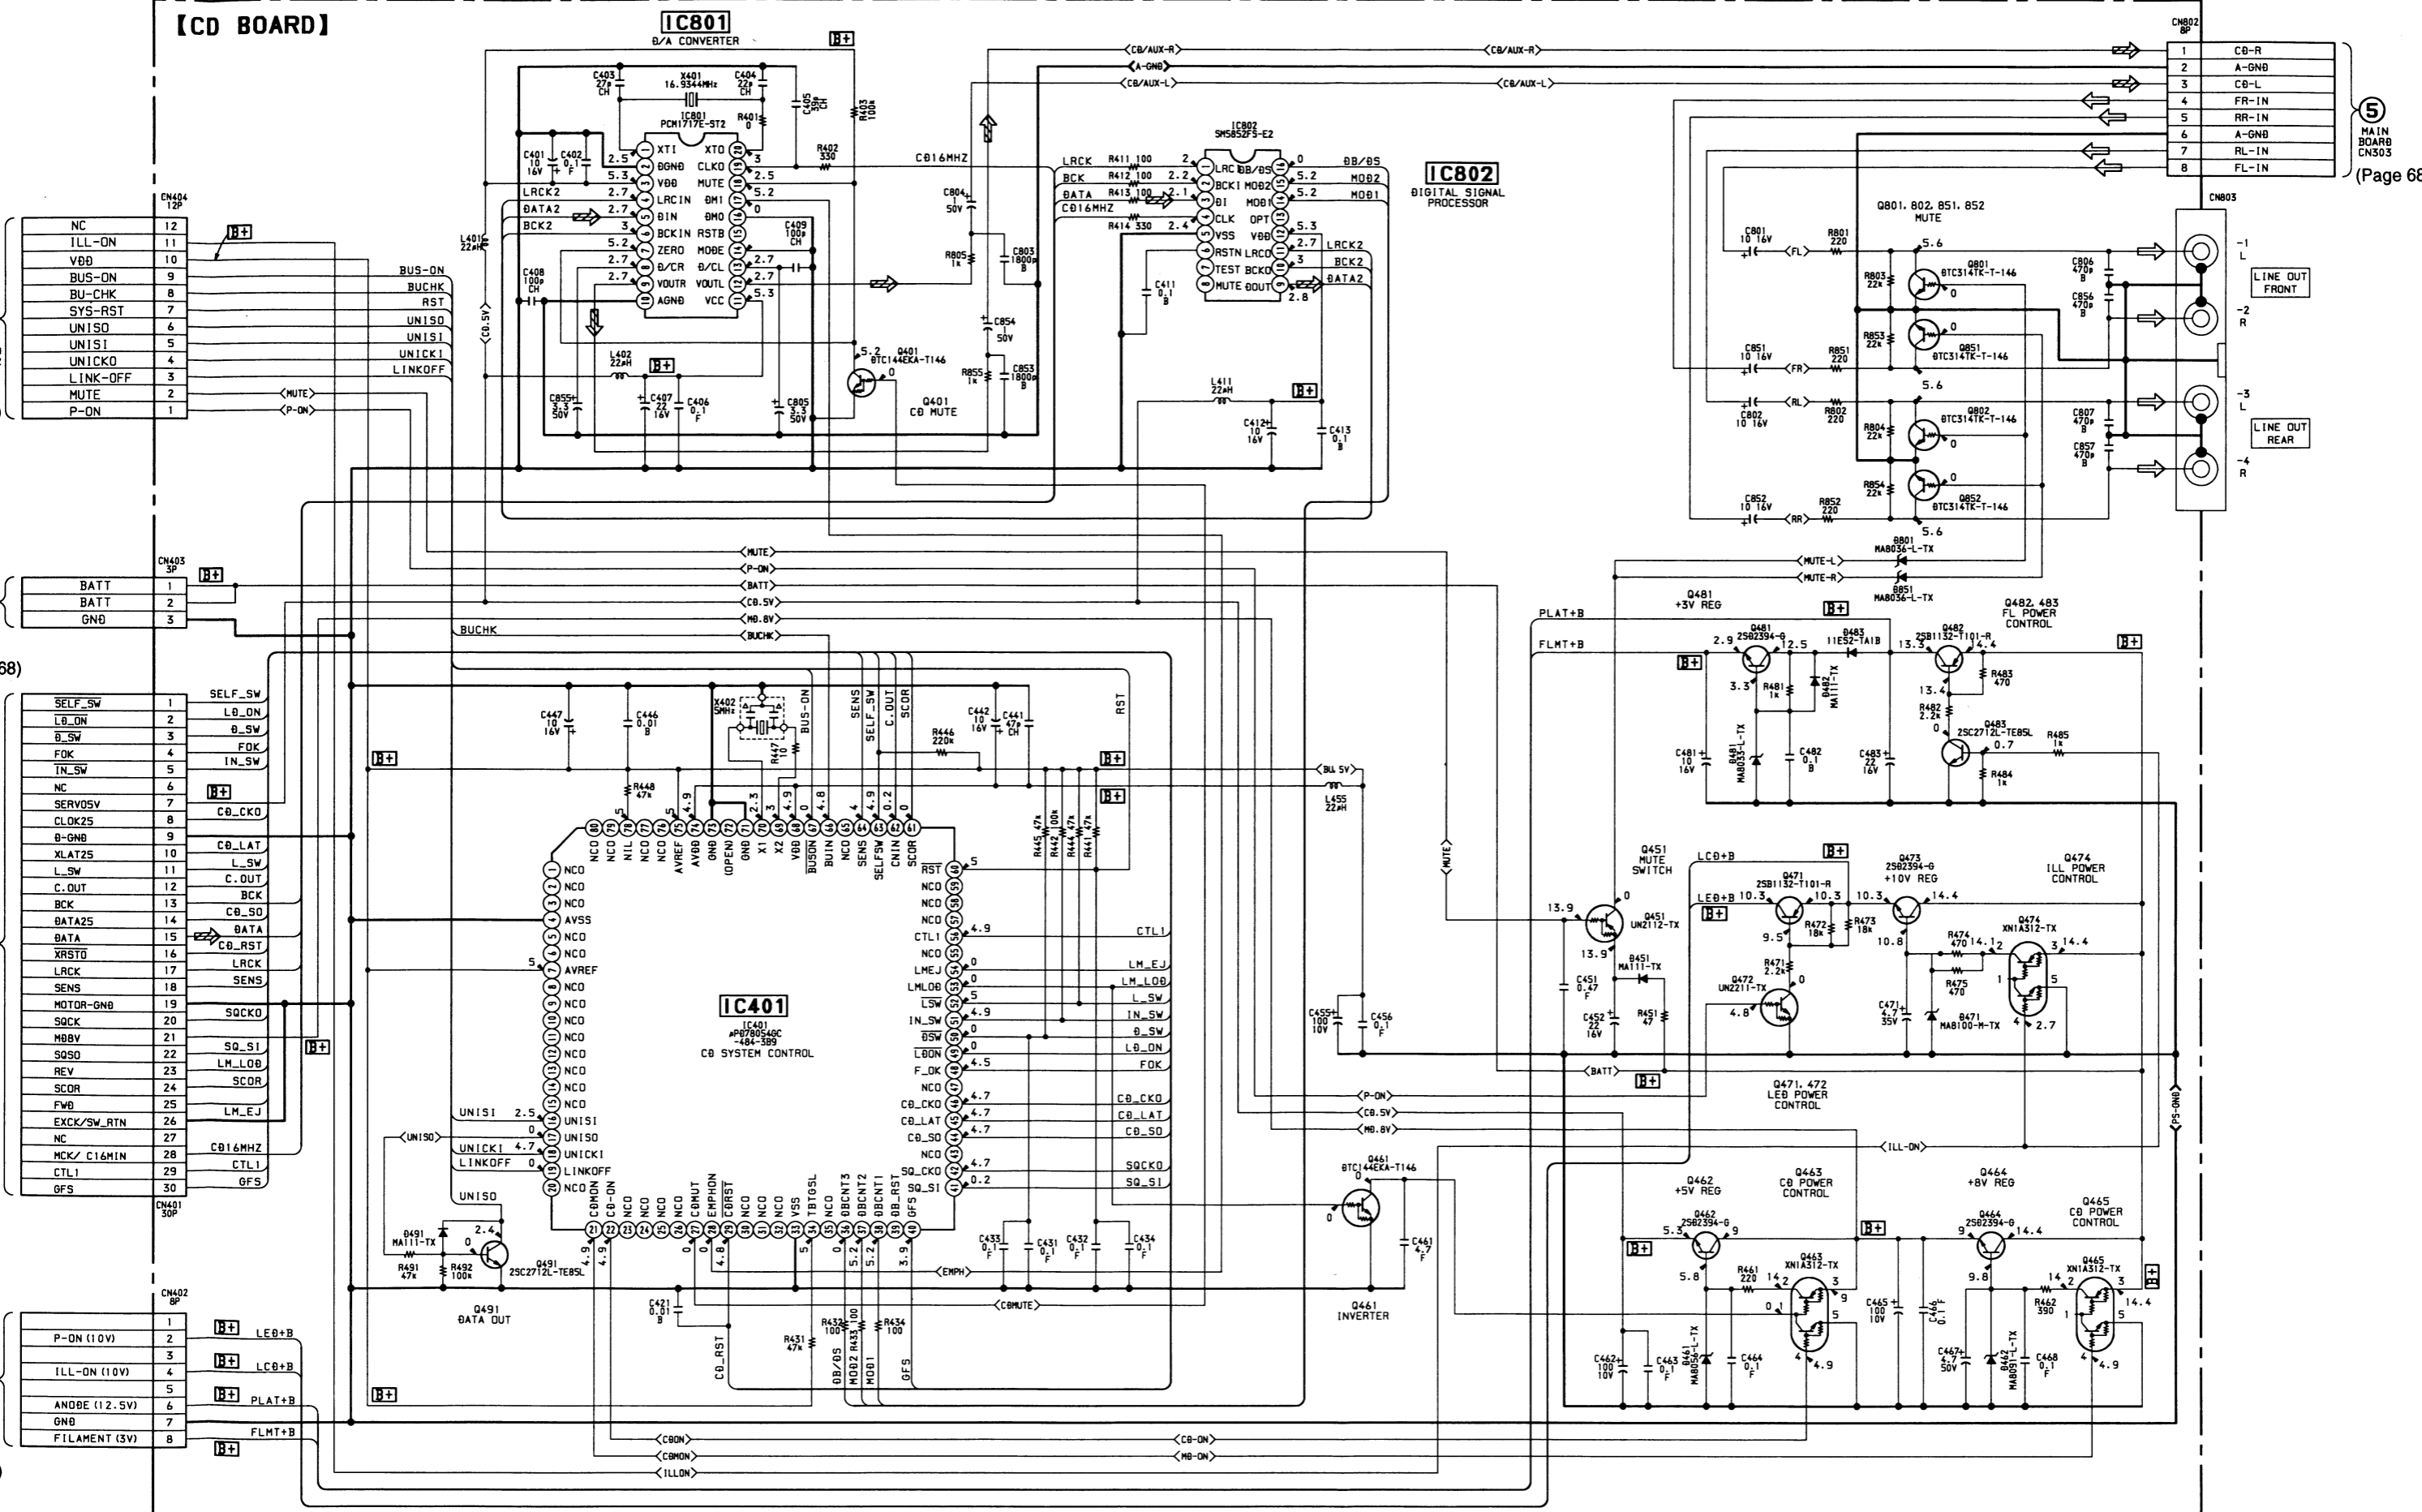

MAIN BOARD CN502

NC	12
TLL-ON	11
VDD	10
BUS-ON	9
BU-CHK	8
SYS-RST	7
UNISO	6
UNISI	5
UNICKO	4
LINK-OFF	3
MUTE	2
P-ON	1

MAIN BOARD CN501

BATT	1
BATT	2
GNB	3

SELF_SW	1	SELF_SW
LB_ON	2	LB_ON
B_SW	3	B_SW
FOK	4	FOK
IN_SW	5	IN_SW
NC	6	
SERVOSV	7	CB_CKO
CLOCK25	8	CB_LAT
B-GND	9	L_SW
XLAT25	10	C_OUT
L_SW	11	BCK
C_OUT	12	CB_SO
BCK	13	BATA25
BATA25	14	CB_RST
XRSTO	15	LRCK
LRCK	16	SENS
SENS	17	SOCKD
MOTOR-GND	18	
SOCK	19	
MBV	20	SO_S1
SO_S0	21	LM_LOB
REV	22	SCOR
SCOR	23	
FVB	24	
EXCK/SW_RTN	25	LM_EJ
NC	26	
MCK/ C16MIN	27	CB16MHZ
CTL1	28	UNICK1
GFS	29	LINKOFF
	30	UNISO

MAIN BOARD CN503


P-ON (10V)	1	LEB+B
ILL-ON (10V)	2	LCB+B
ANODE (12.5V)	3	PLAT+B
GNB	4	
FILAMENT (3V)	5	FLMT+B

MAIN BOARD CN503

1	CB-R
2	A-GND
3	CB-L
4	FR-IN
5	RR-IN
6	A-GND
7	RL-IN
8	FL-IN

(Page 68)

6-9. PRINTED WIRING BOARD — CD SECTION —

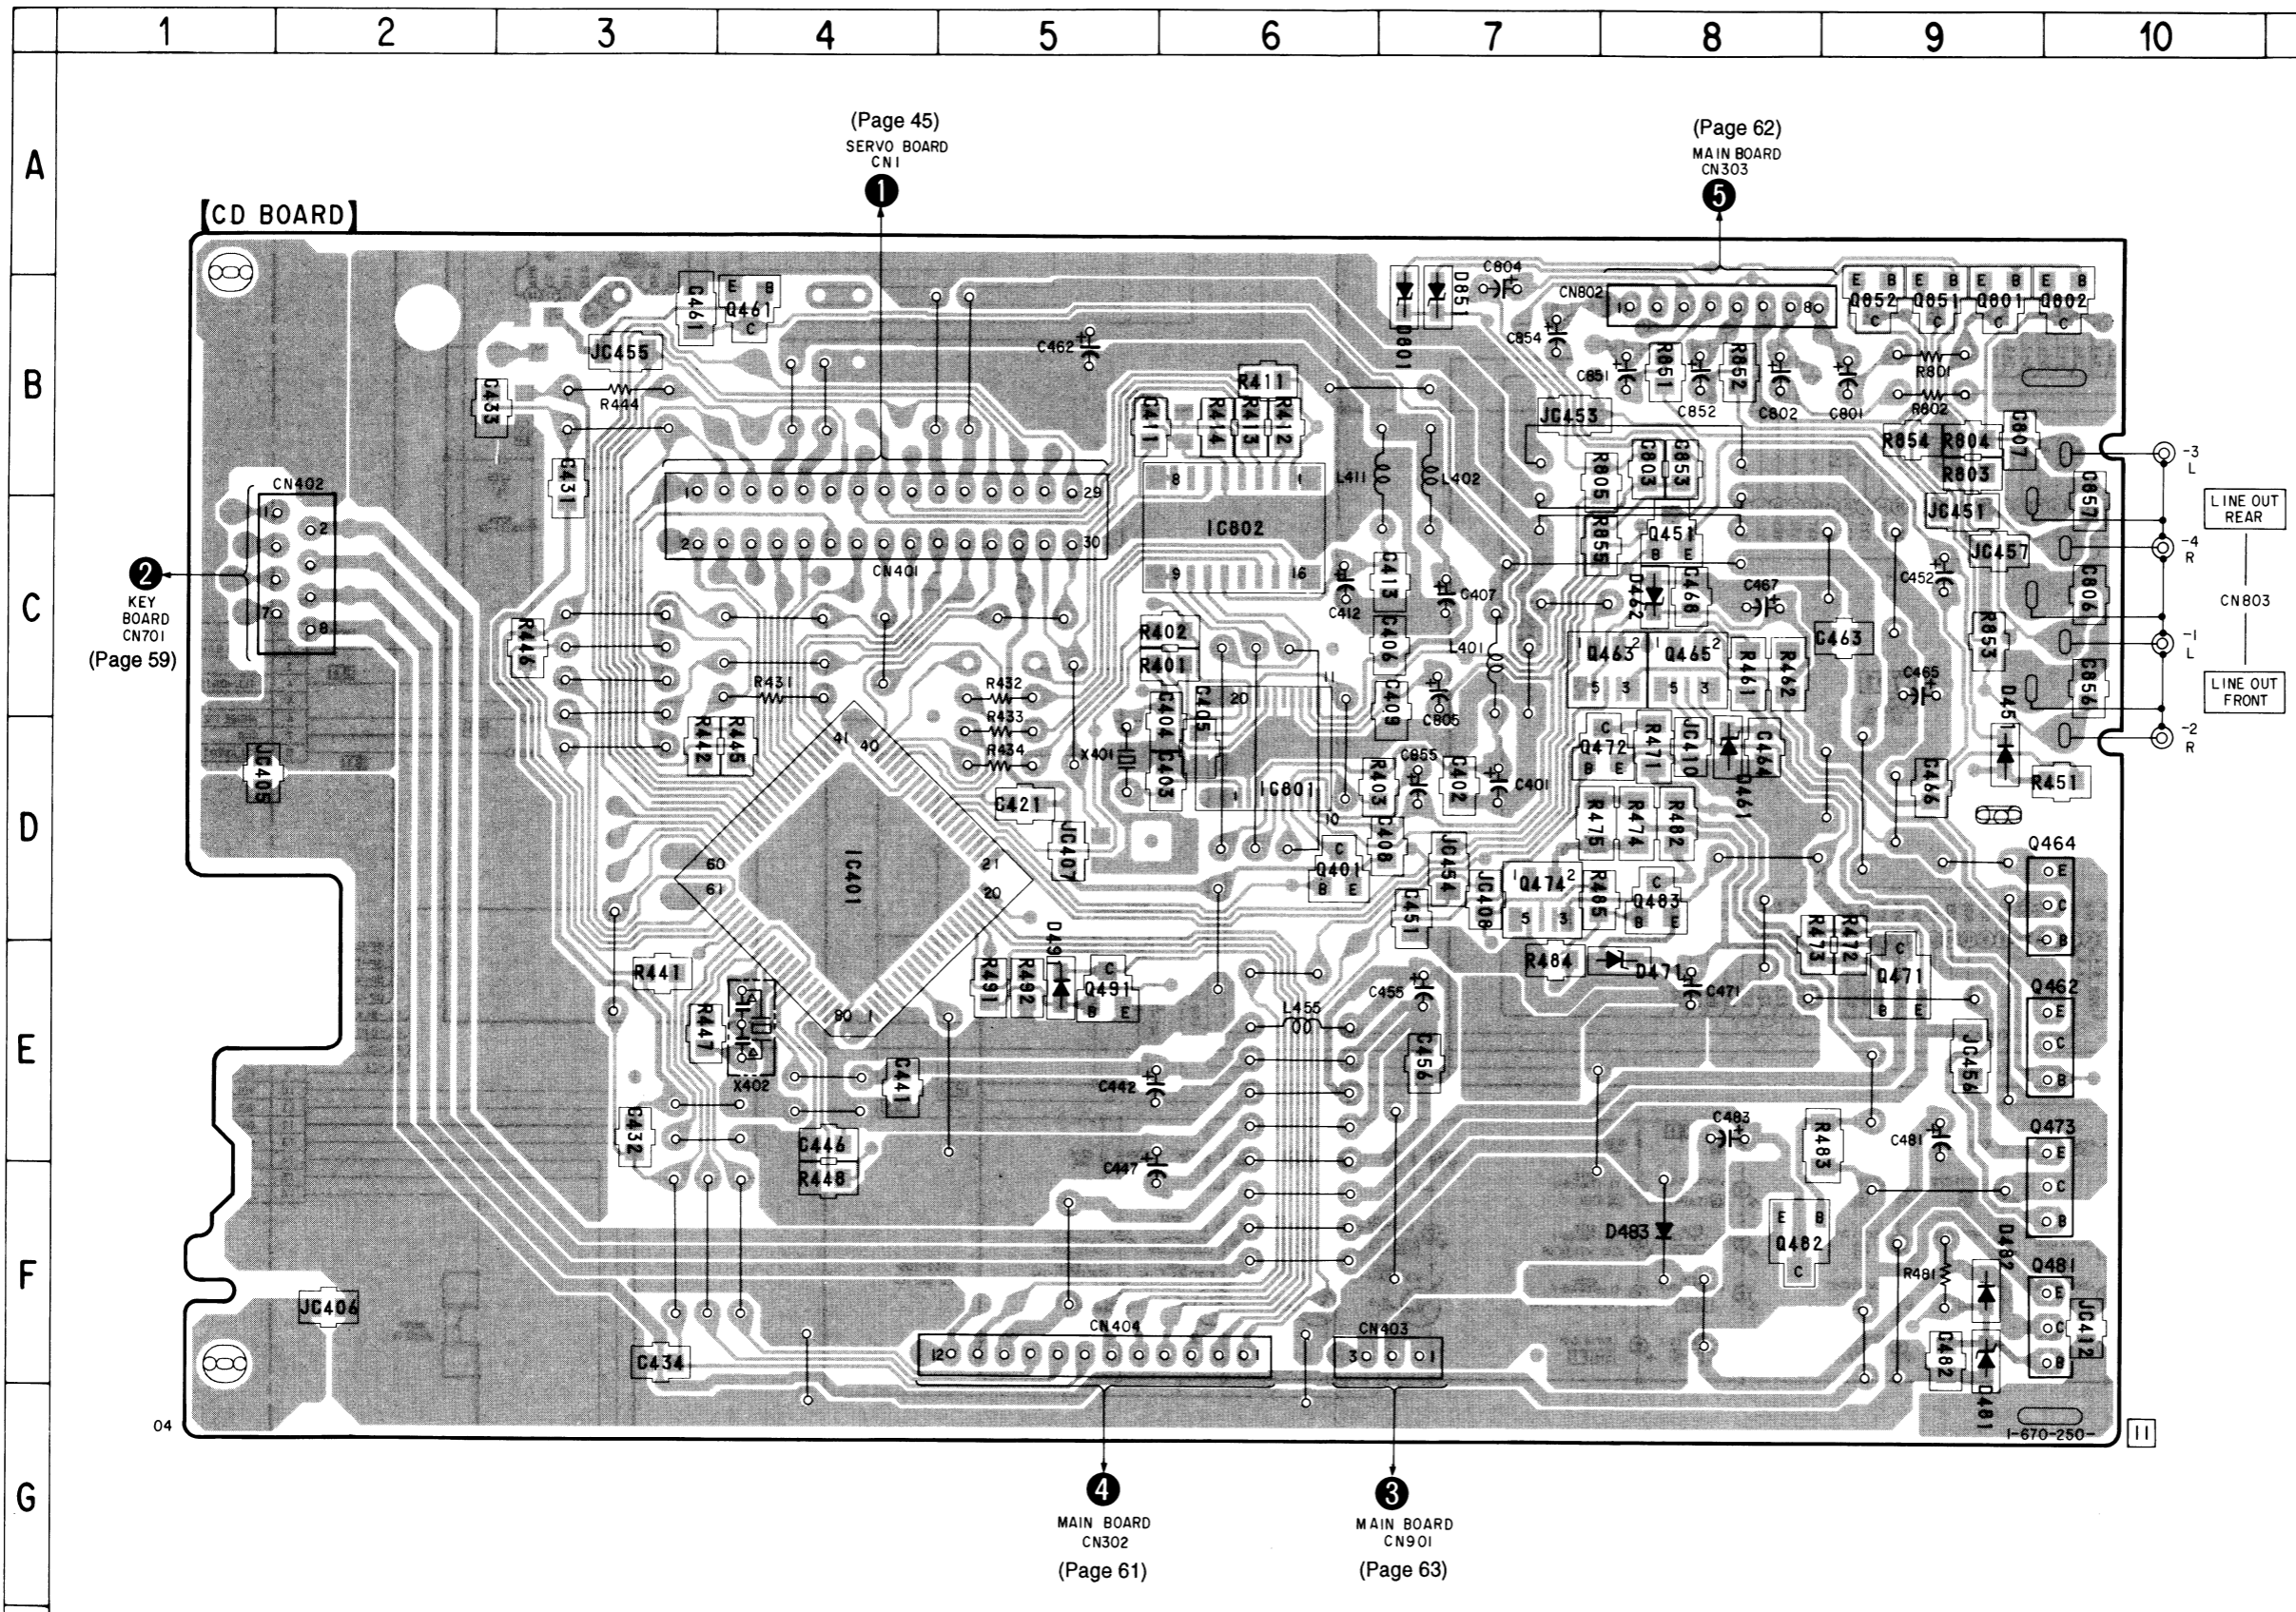


• Semiconductor Location

Ref. No.	Location
D451	C-9
D461	D-8
D462	C-8
D471	E-8
D481	F-9
D482	F-9
D483	F-8
D491	E-5
D801	B-7
D851	B-7
IC401	D-4
IC801	D-6
IC802	C-6
Q401	D-6
Q451	C-8
Q461	B-4
Q462	E-9
Q463	C-7
Q464	D-9
Q465	C-8
Q471	E-9
Q472	D-7
Q473	E-9
Q474	D-7
Q481	F-9
Q482	F-8
Q483	D-8
Q491	E-5
Q801	B-9
Q802	B-9
Q851	B-9
Q852	B-9


Note:

- — : parts extracted from the component side.
- Δ : internal component.
- [Pattern] : Pattern from the side which enables seeing.

6-10. SCHEMATIC DIAGRAM — CONTROL SECTION — • Refer to page 71 for IC Block Diagrams.

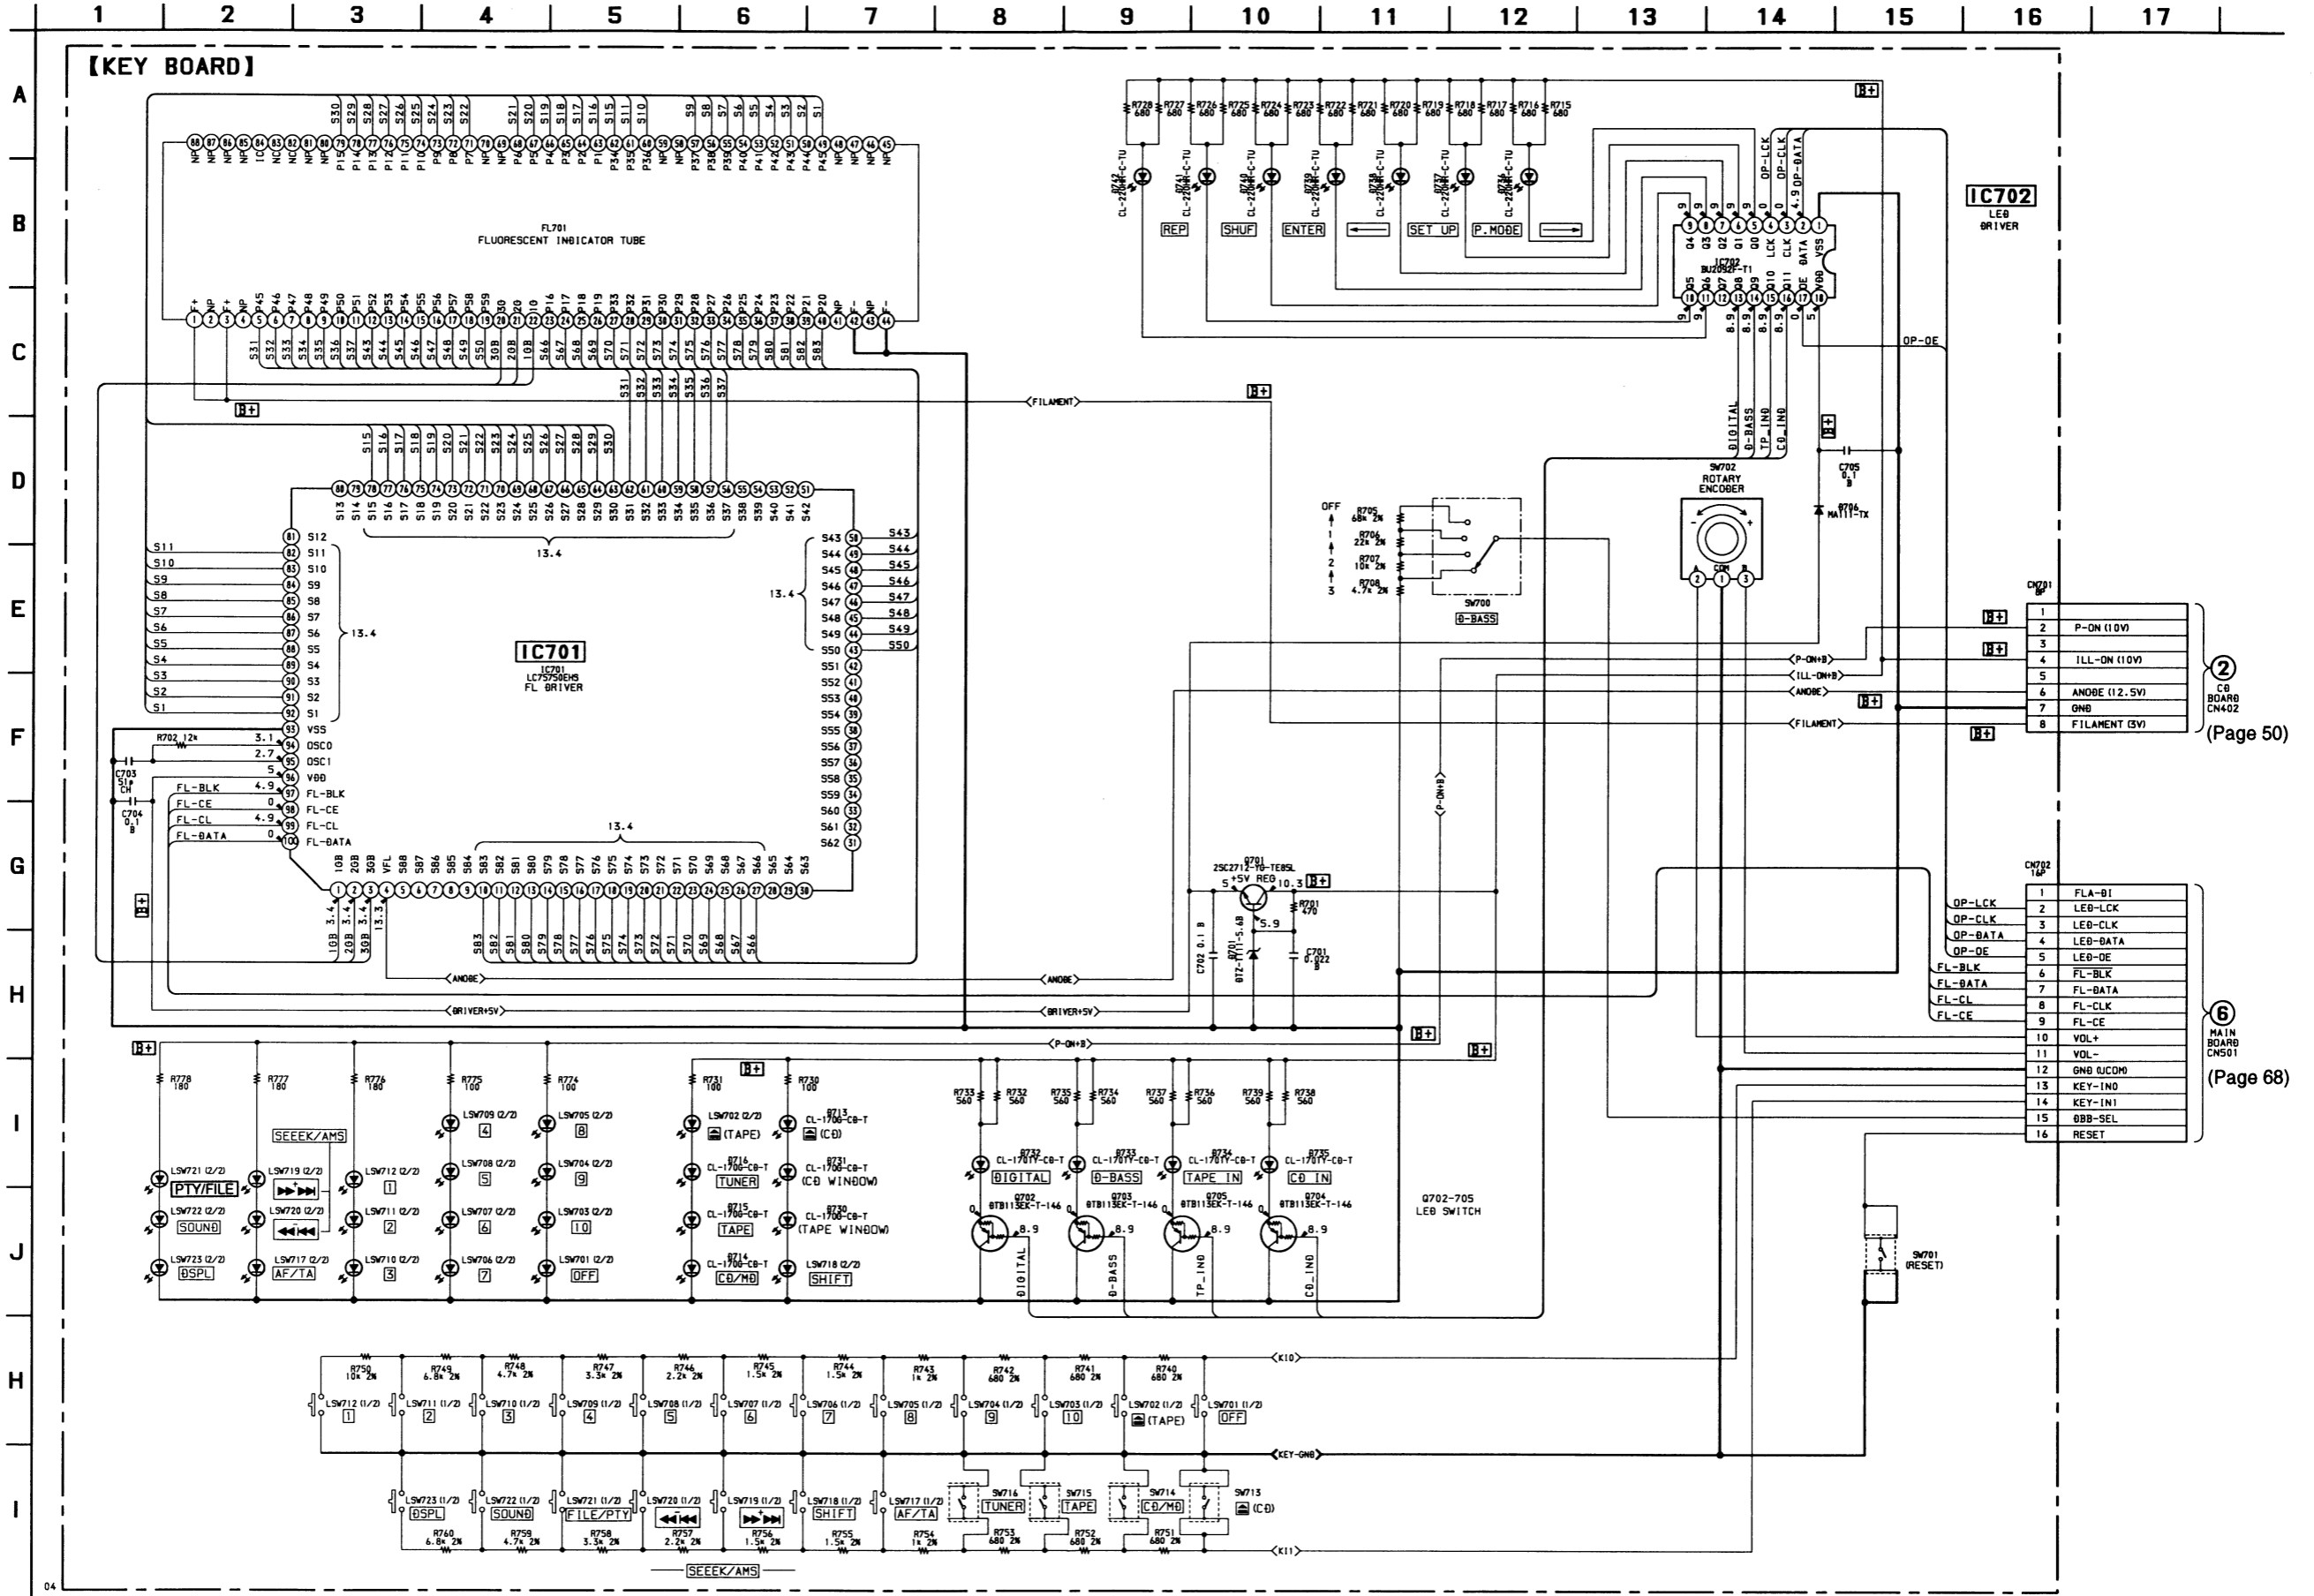

6-11. PRINTED WIRING BOARD — CONTROL SECTION —

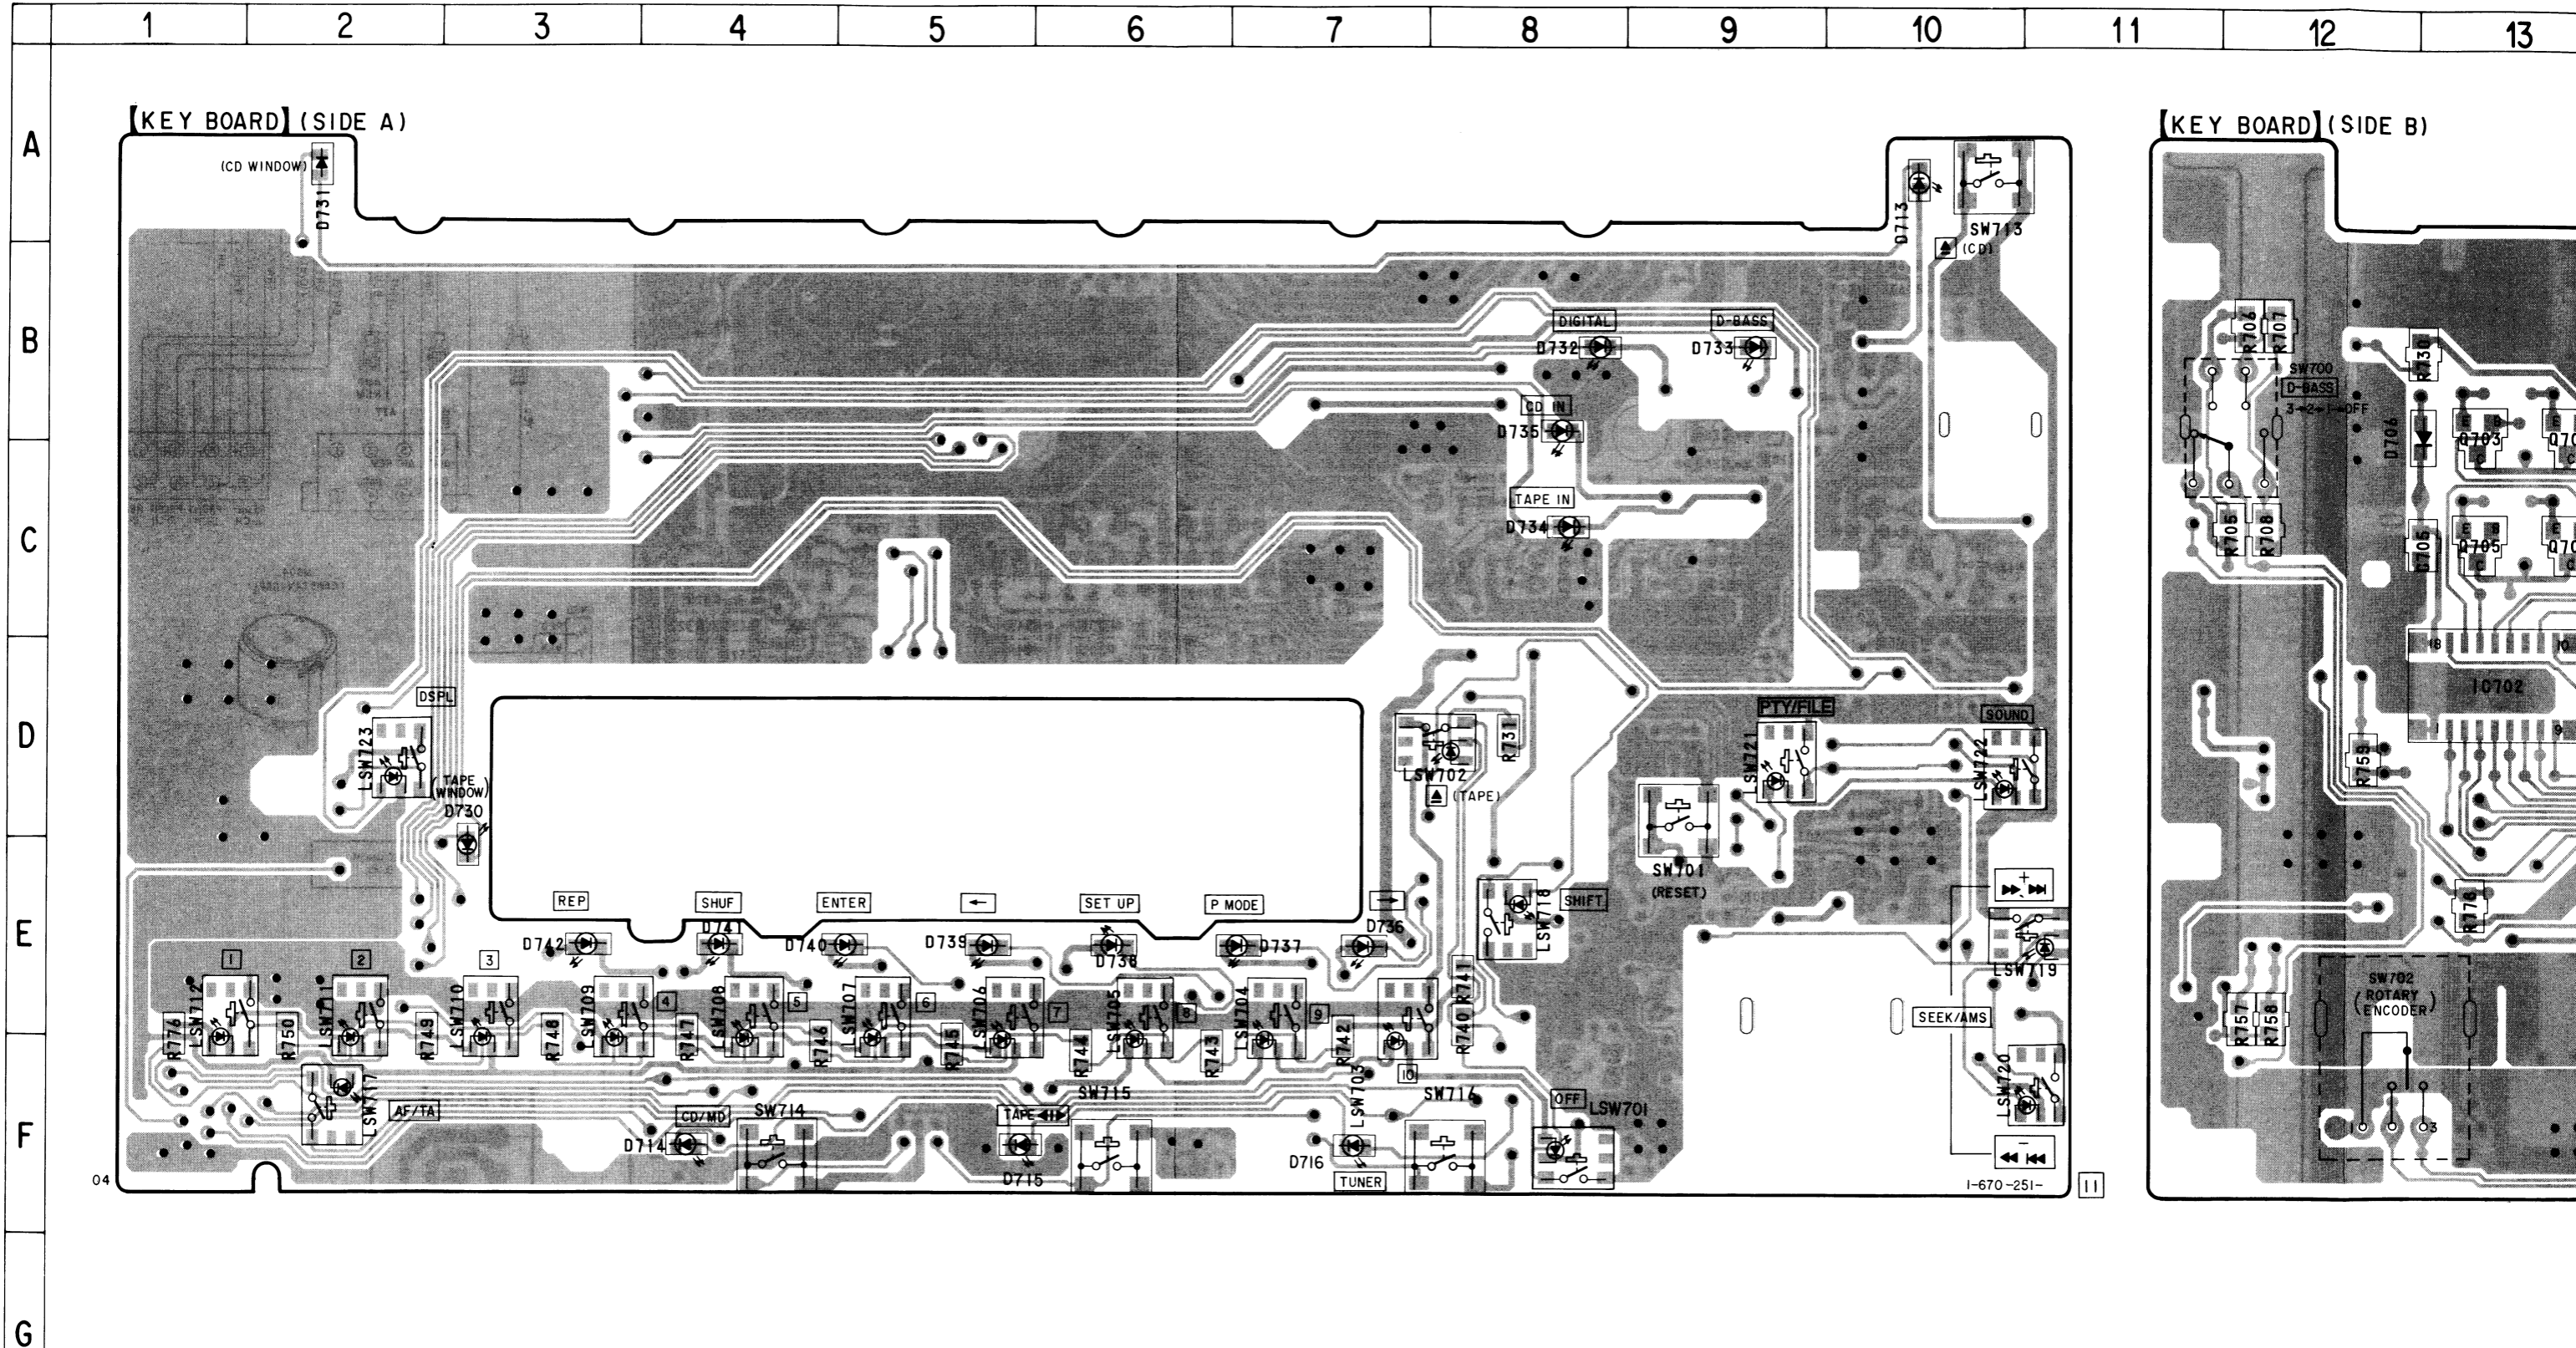

Note on Schematic Diagram:


- All capacitors are in μF unless otherwise noted. pF : μpF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}$ W or less unless otherwise specified.
- % : indicates tolerance.
- : panel designation.
- B+ : B+ Line.
- Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BATT cords.
- Voltage is dc with respect to ground under no-signal condition.
- no mark : TEST mode (See page 28.)
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.

11 12 13 14 15 16 17 18 19 20 21

KEY BOARD (SIDE B)

(Page 53)
CD BOARD
CN402

2

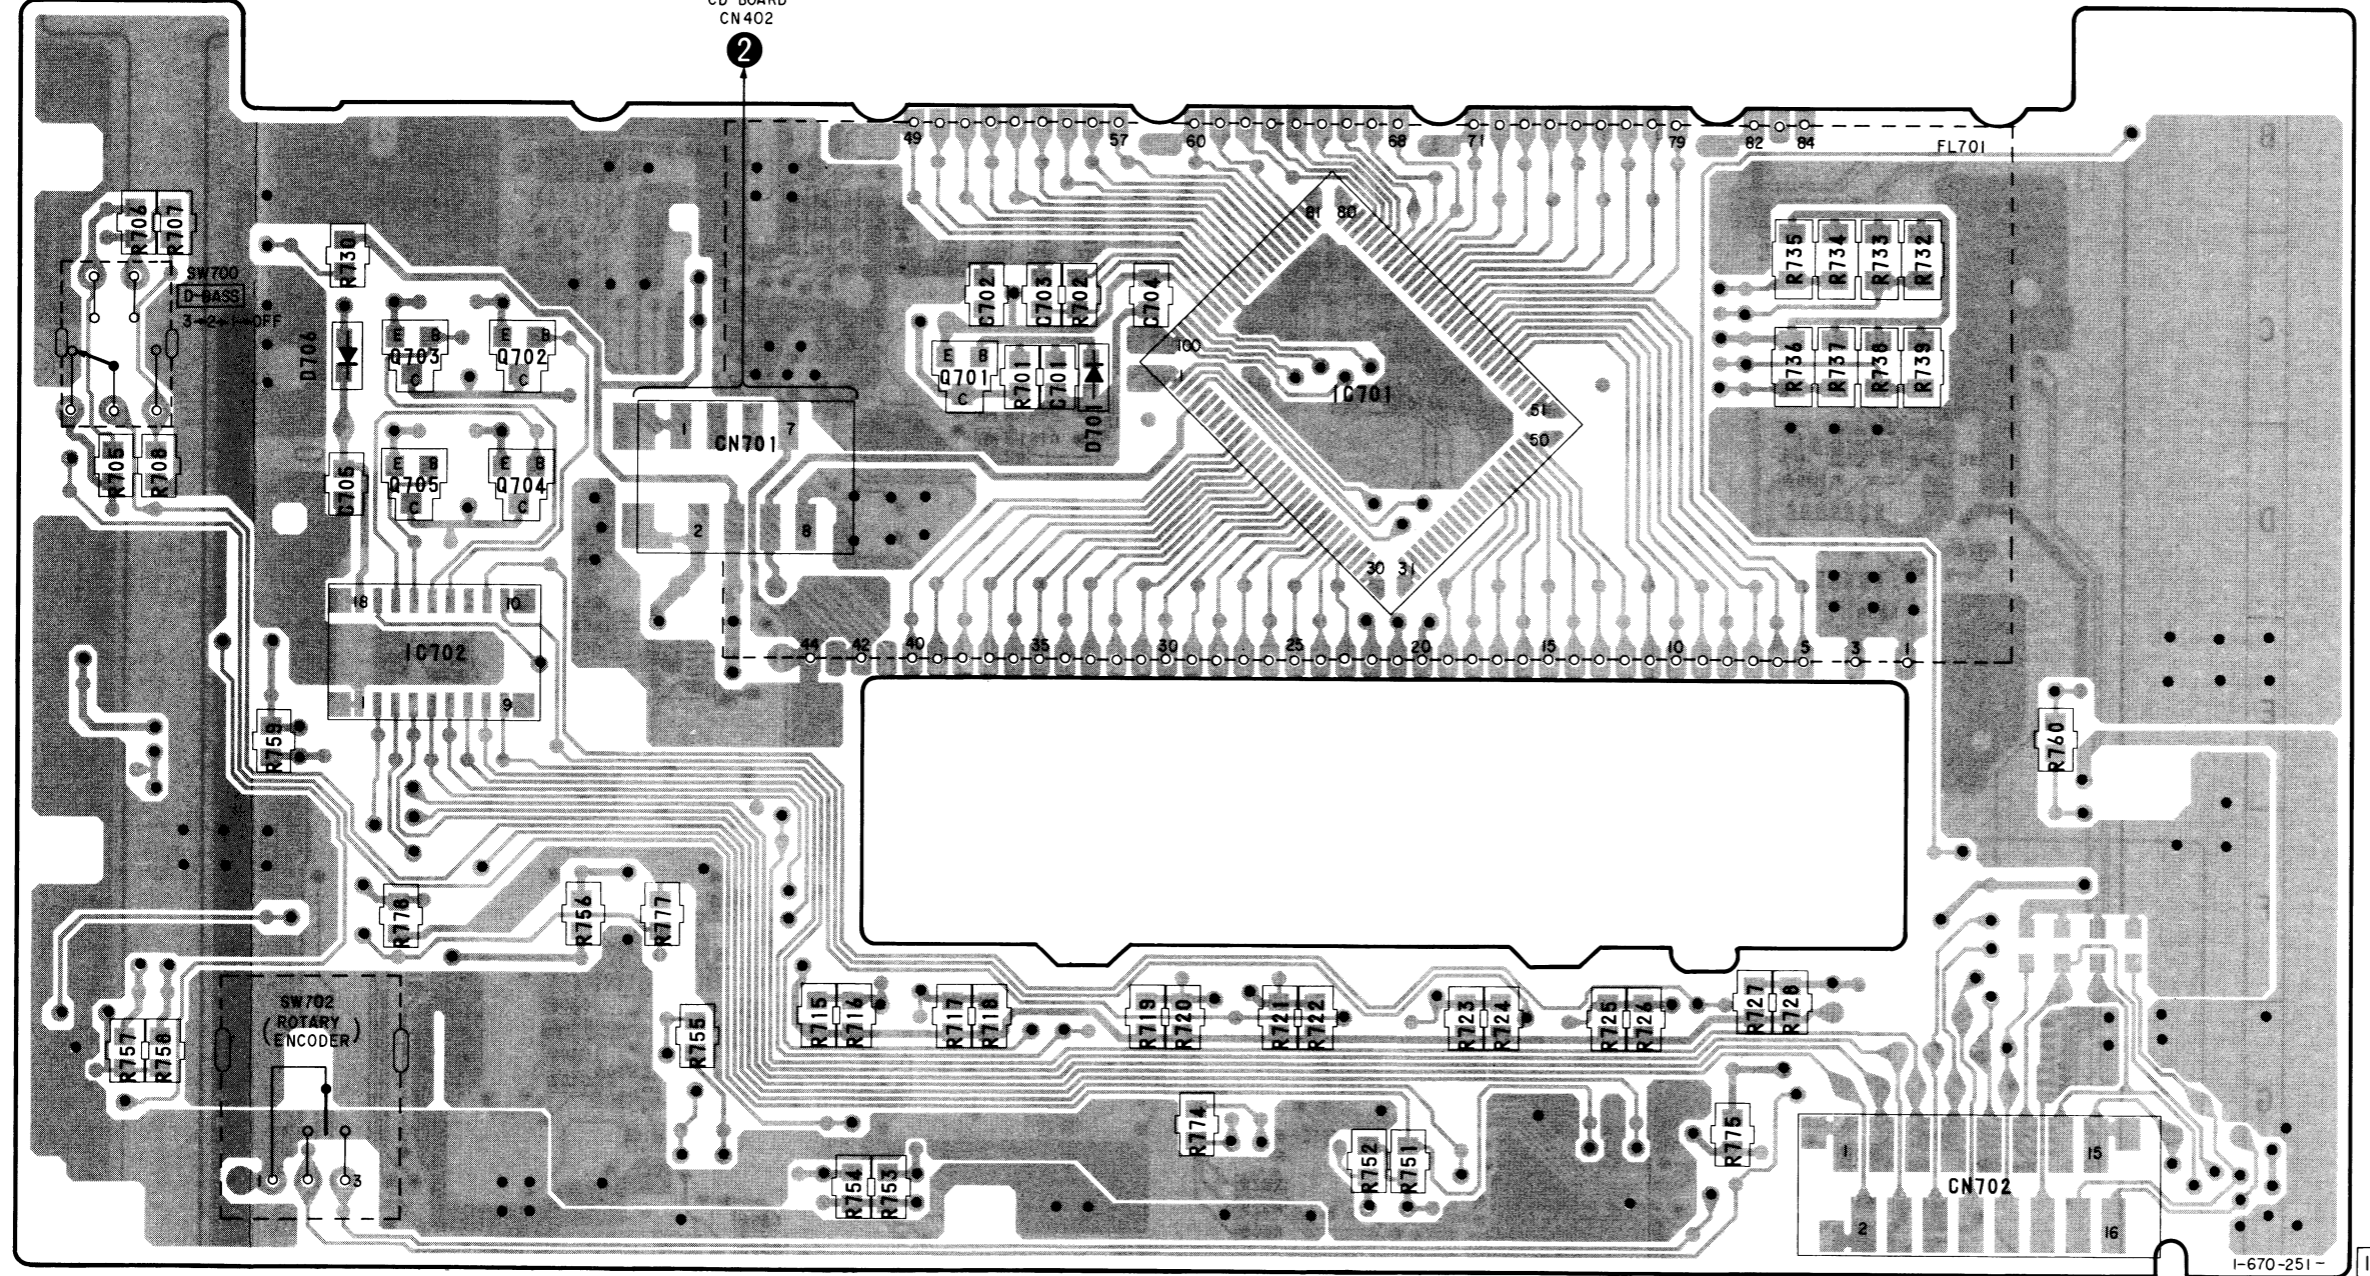

6
MAIN BOARD
CN501
(Page 64)

• Semiconductor Location


Ref. No.	Location
D701	C-16
D706	B-12
D713	A-10
D714	F-4
D715	F-5
D716	F-7
D730	D-3
D731	A-2
D732	B-8
D733	B-9
D734	C-8
D735	B-8
D736	E-7
D737	E-7
D738	E-6
D739	E-5
D740	E-4
D741	E-4
D742	E-3
IC701	C-17
IC702	D-13
Q701	C-15
Q702	B-13
Q703	B-13
Q704	C-13
Q705	C-13

Note on Printed Wiring Boards:
 ○ : parts extracted from the component side.
 ● : Through hole.
 ▨ : Pattern from the side which enables seeing.
 (The other layers' patterns are not indicated.)

6-12. PRINTED WIRING BOARD — MAIN SECTION —

• Semiconductor Location


Ref. No.	Location	Ref. No.	Location
D1	F-13	D1000	H-23
D71	E-14		
D181	D-7	IC41	D-9
D191	B-6	IC51	E-9
D192	B-6	IC81	I-6
D193	B-6	IC301	G-8
D194	B-6	IC302	F-7
D281	C-7	IC303	H-9
D291	B-7	IC306	B-16
D292	B-7	IC321	E-20
D293	B-7	IC501	G-4
D294	B-7	IC561	G-2
D301	F-14	IC562	H-2
D321	C-21	IC901	D-18
D322	E-21	IC941	C-19
D323	E-21	IC951	D-3
D324	D-21		
D361	G-2	Q31	H-13
D561	G-2	Q41	E-13
D562	G-2	Q61	D-10
D563	D-19	Q71	E-14
D564	E-19	Q81	I-7
D565	I-20	Q82	I-7
D566	I-2	Q151	H-14
D567	I-2	Q181	C-8
D568	H-1	Q182	C-8
D569	E-19	Q251	H-14
D571	I-21	Q281	C-8
D581	B-21	Q282	C-8
D582	B-21	Q321	F-21
D901	B-19	Q322	E-21
D902	C-5	Q323	E-21
D903	B-5	Q324	D-21
D904	C-5	Q325	D-2
D905	B-5	Q351	H-9
D906	B-4	Q352	H-8
D907	D-18	Q561	H-21
D908	E-18	Q562	H-21
D910	C-5	Q591	G-21
D921	C-16	Q901	E-18
D923	C-6	Q902	E-19
D924	E-17	Q903	F-5
D941	C-3	Q921	C-6
D951	D-2	Q922	C-6
D952	C-2	Q923	C-6
D953	D-20	Q924	D-5
D954	D-20	Q951	D-3
D955	D-20	Q952	D-20
D956	B-3	Q971	C-4
D971	C-4	Q1001	H-23
D972	C-4		

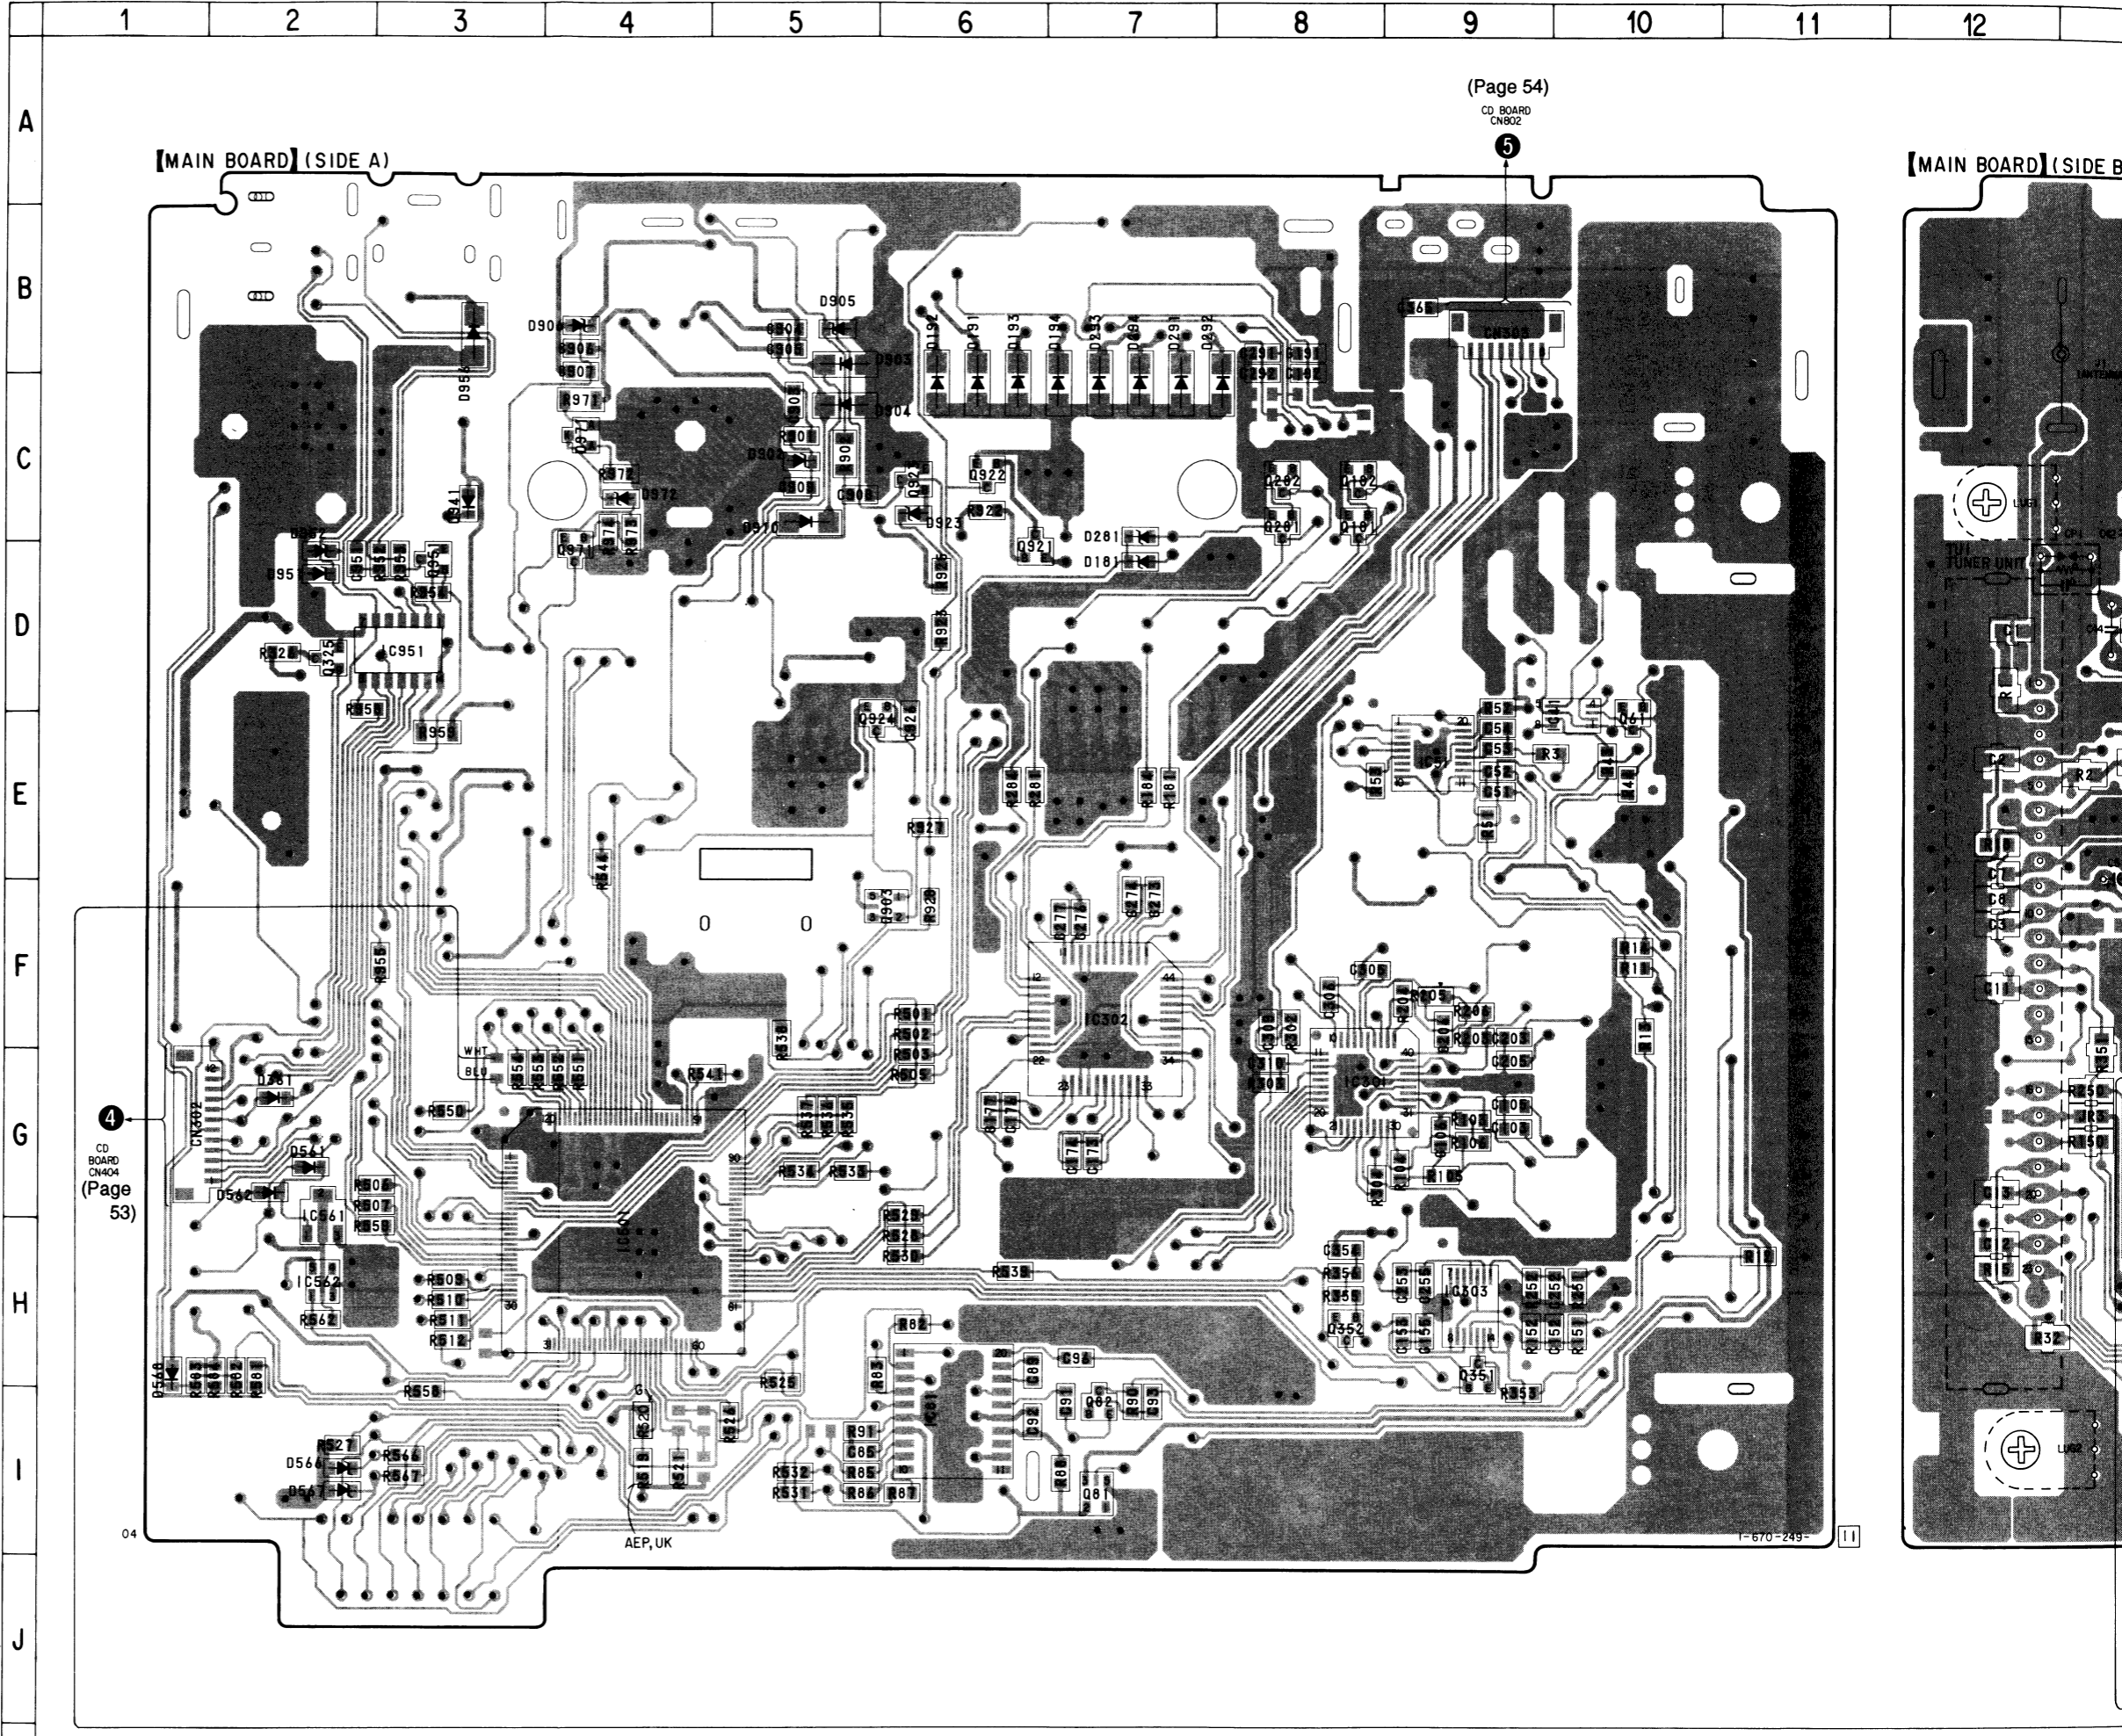






Note:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : Through hole.
- △ : internal component.
- ▨ : Pattern from the side which enables seeing. (The other layers' patterns are not indicated.)
- Abbreviation
- G : German model.


(Page 54)

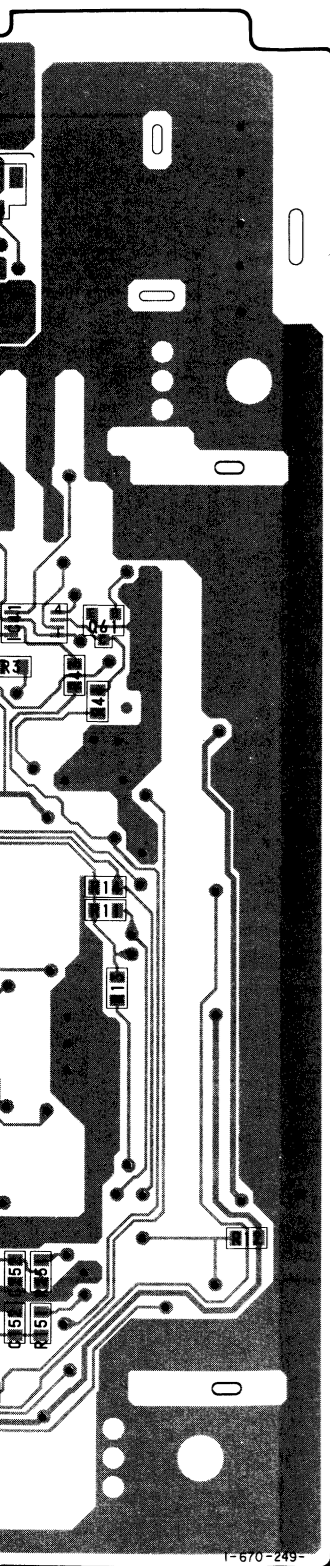


【MAIN BOARD】(SIDE B)

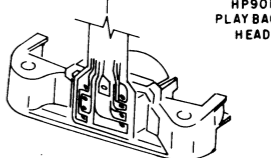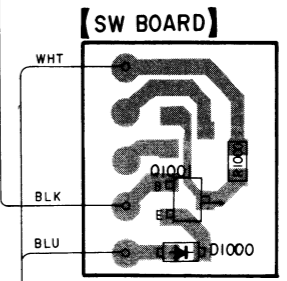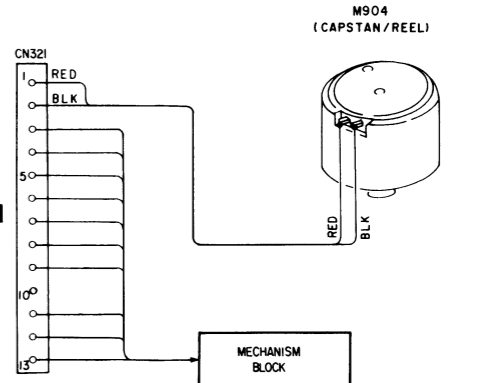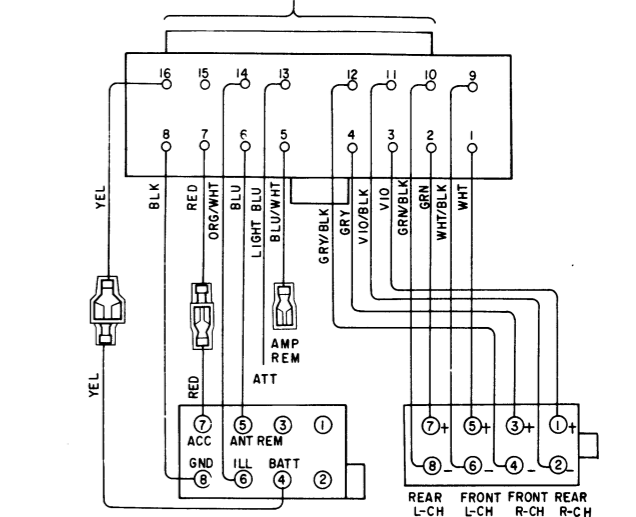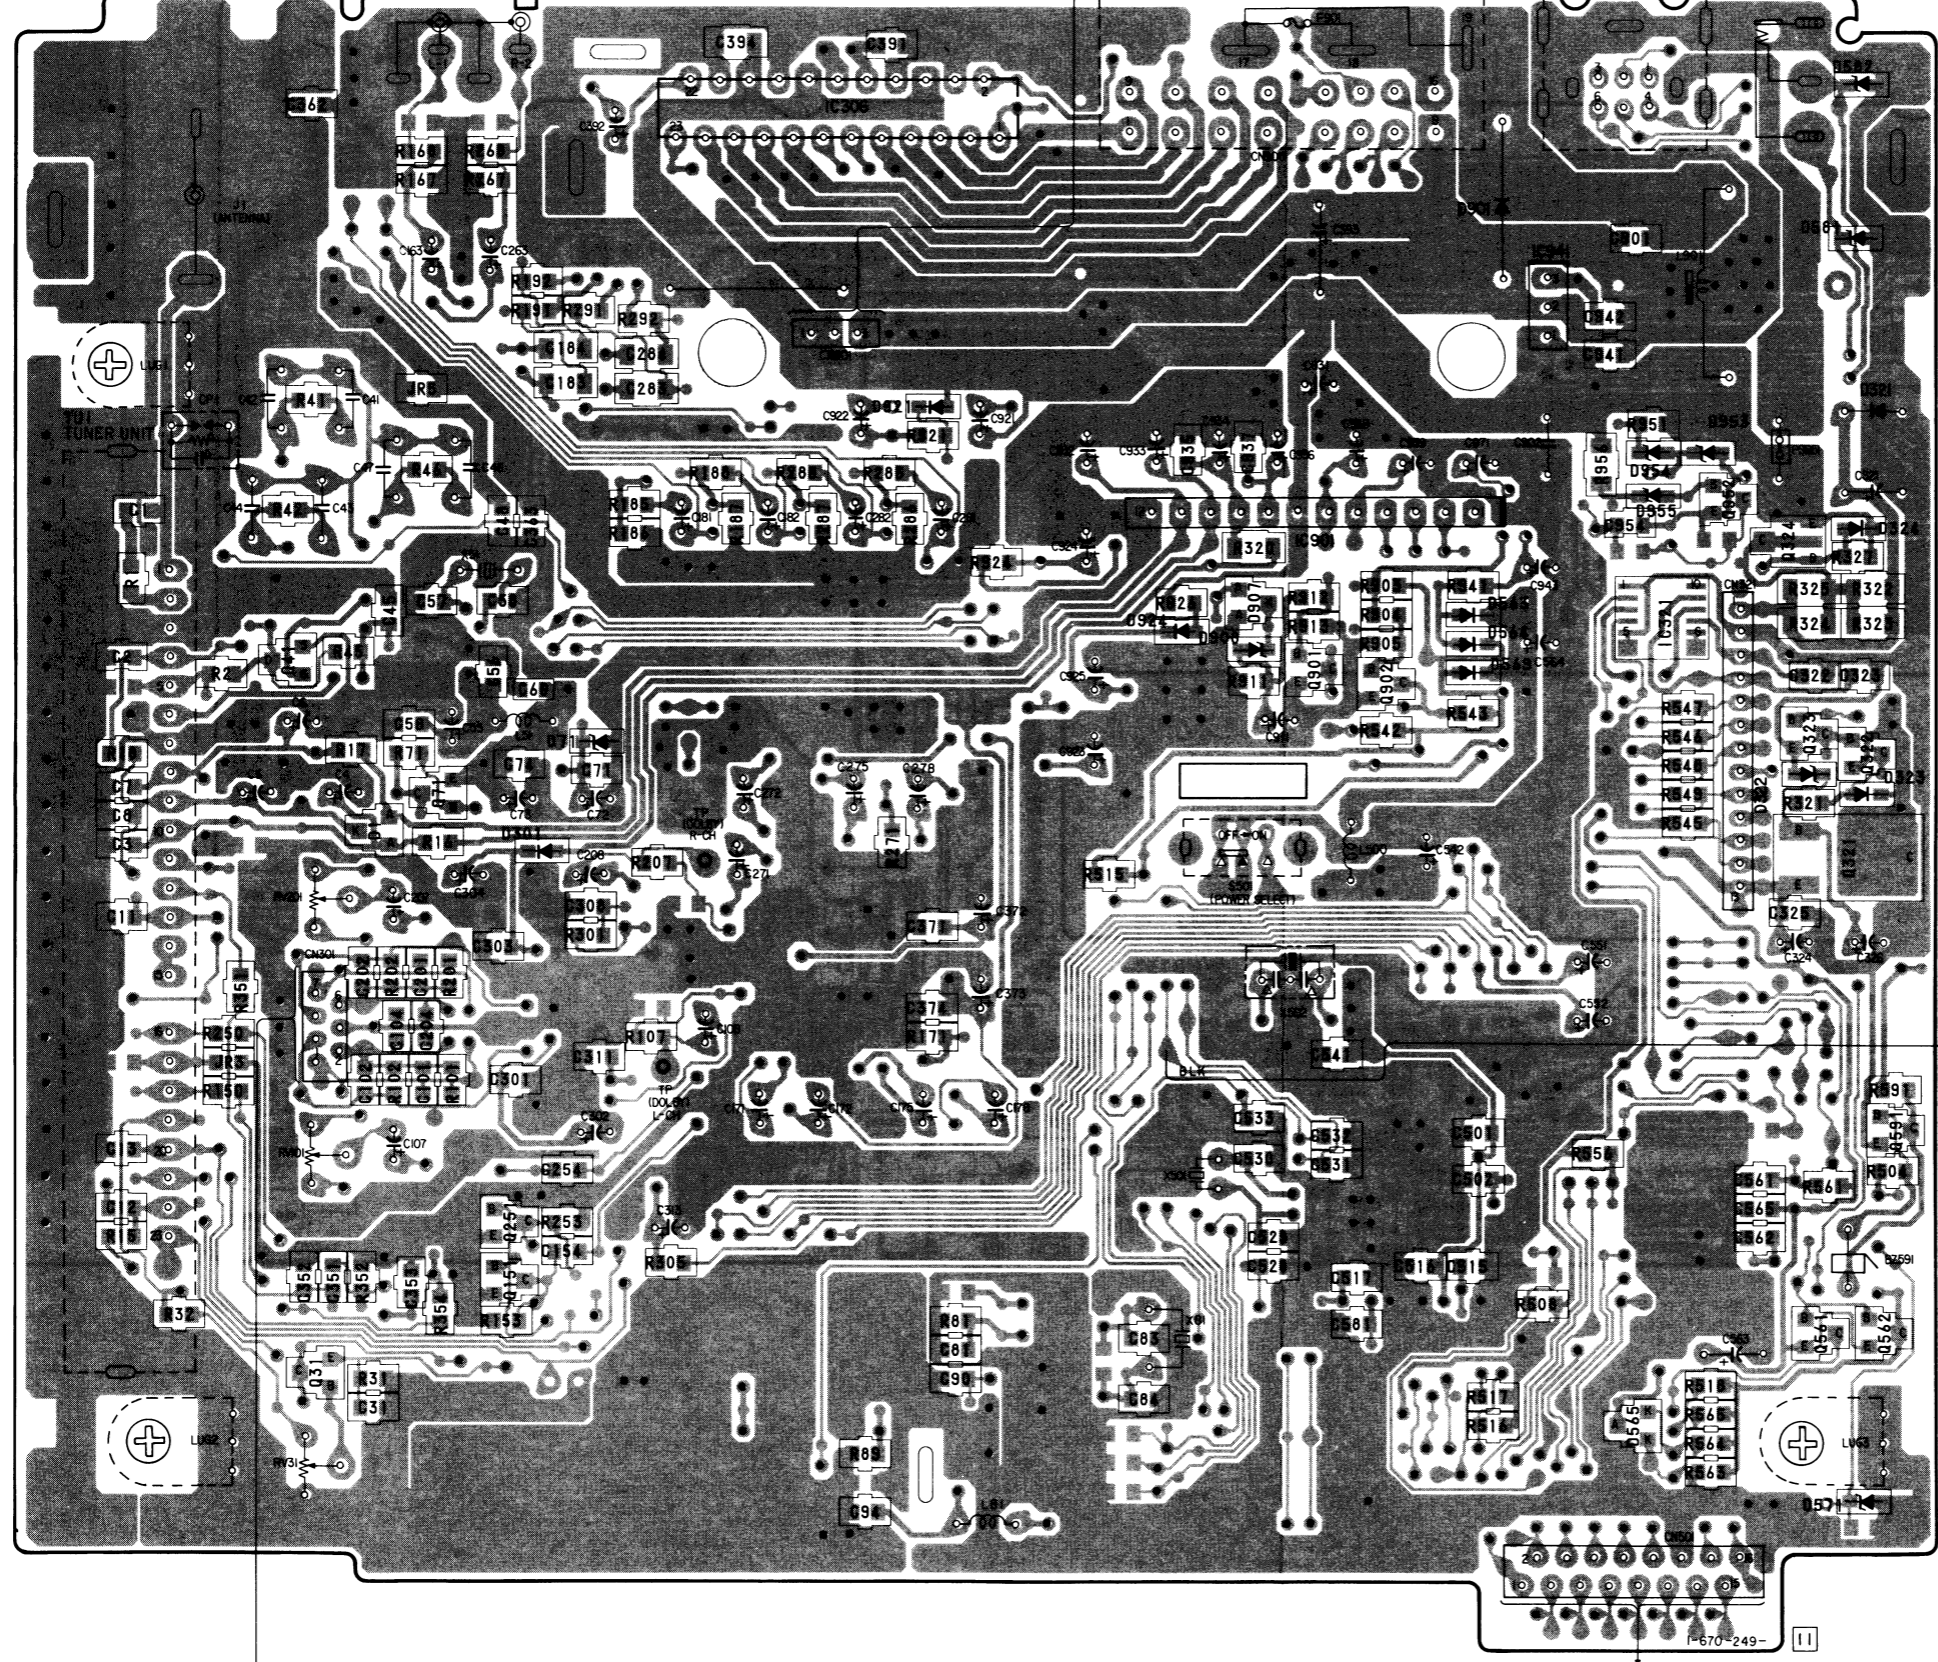

6 KEY BOARD (Page 60)
CN702

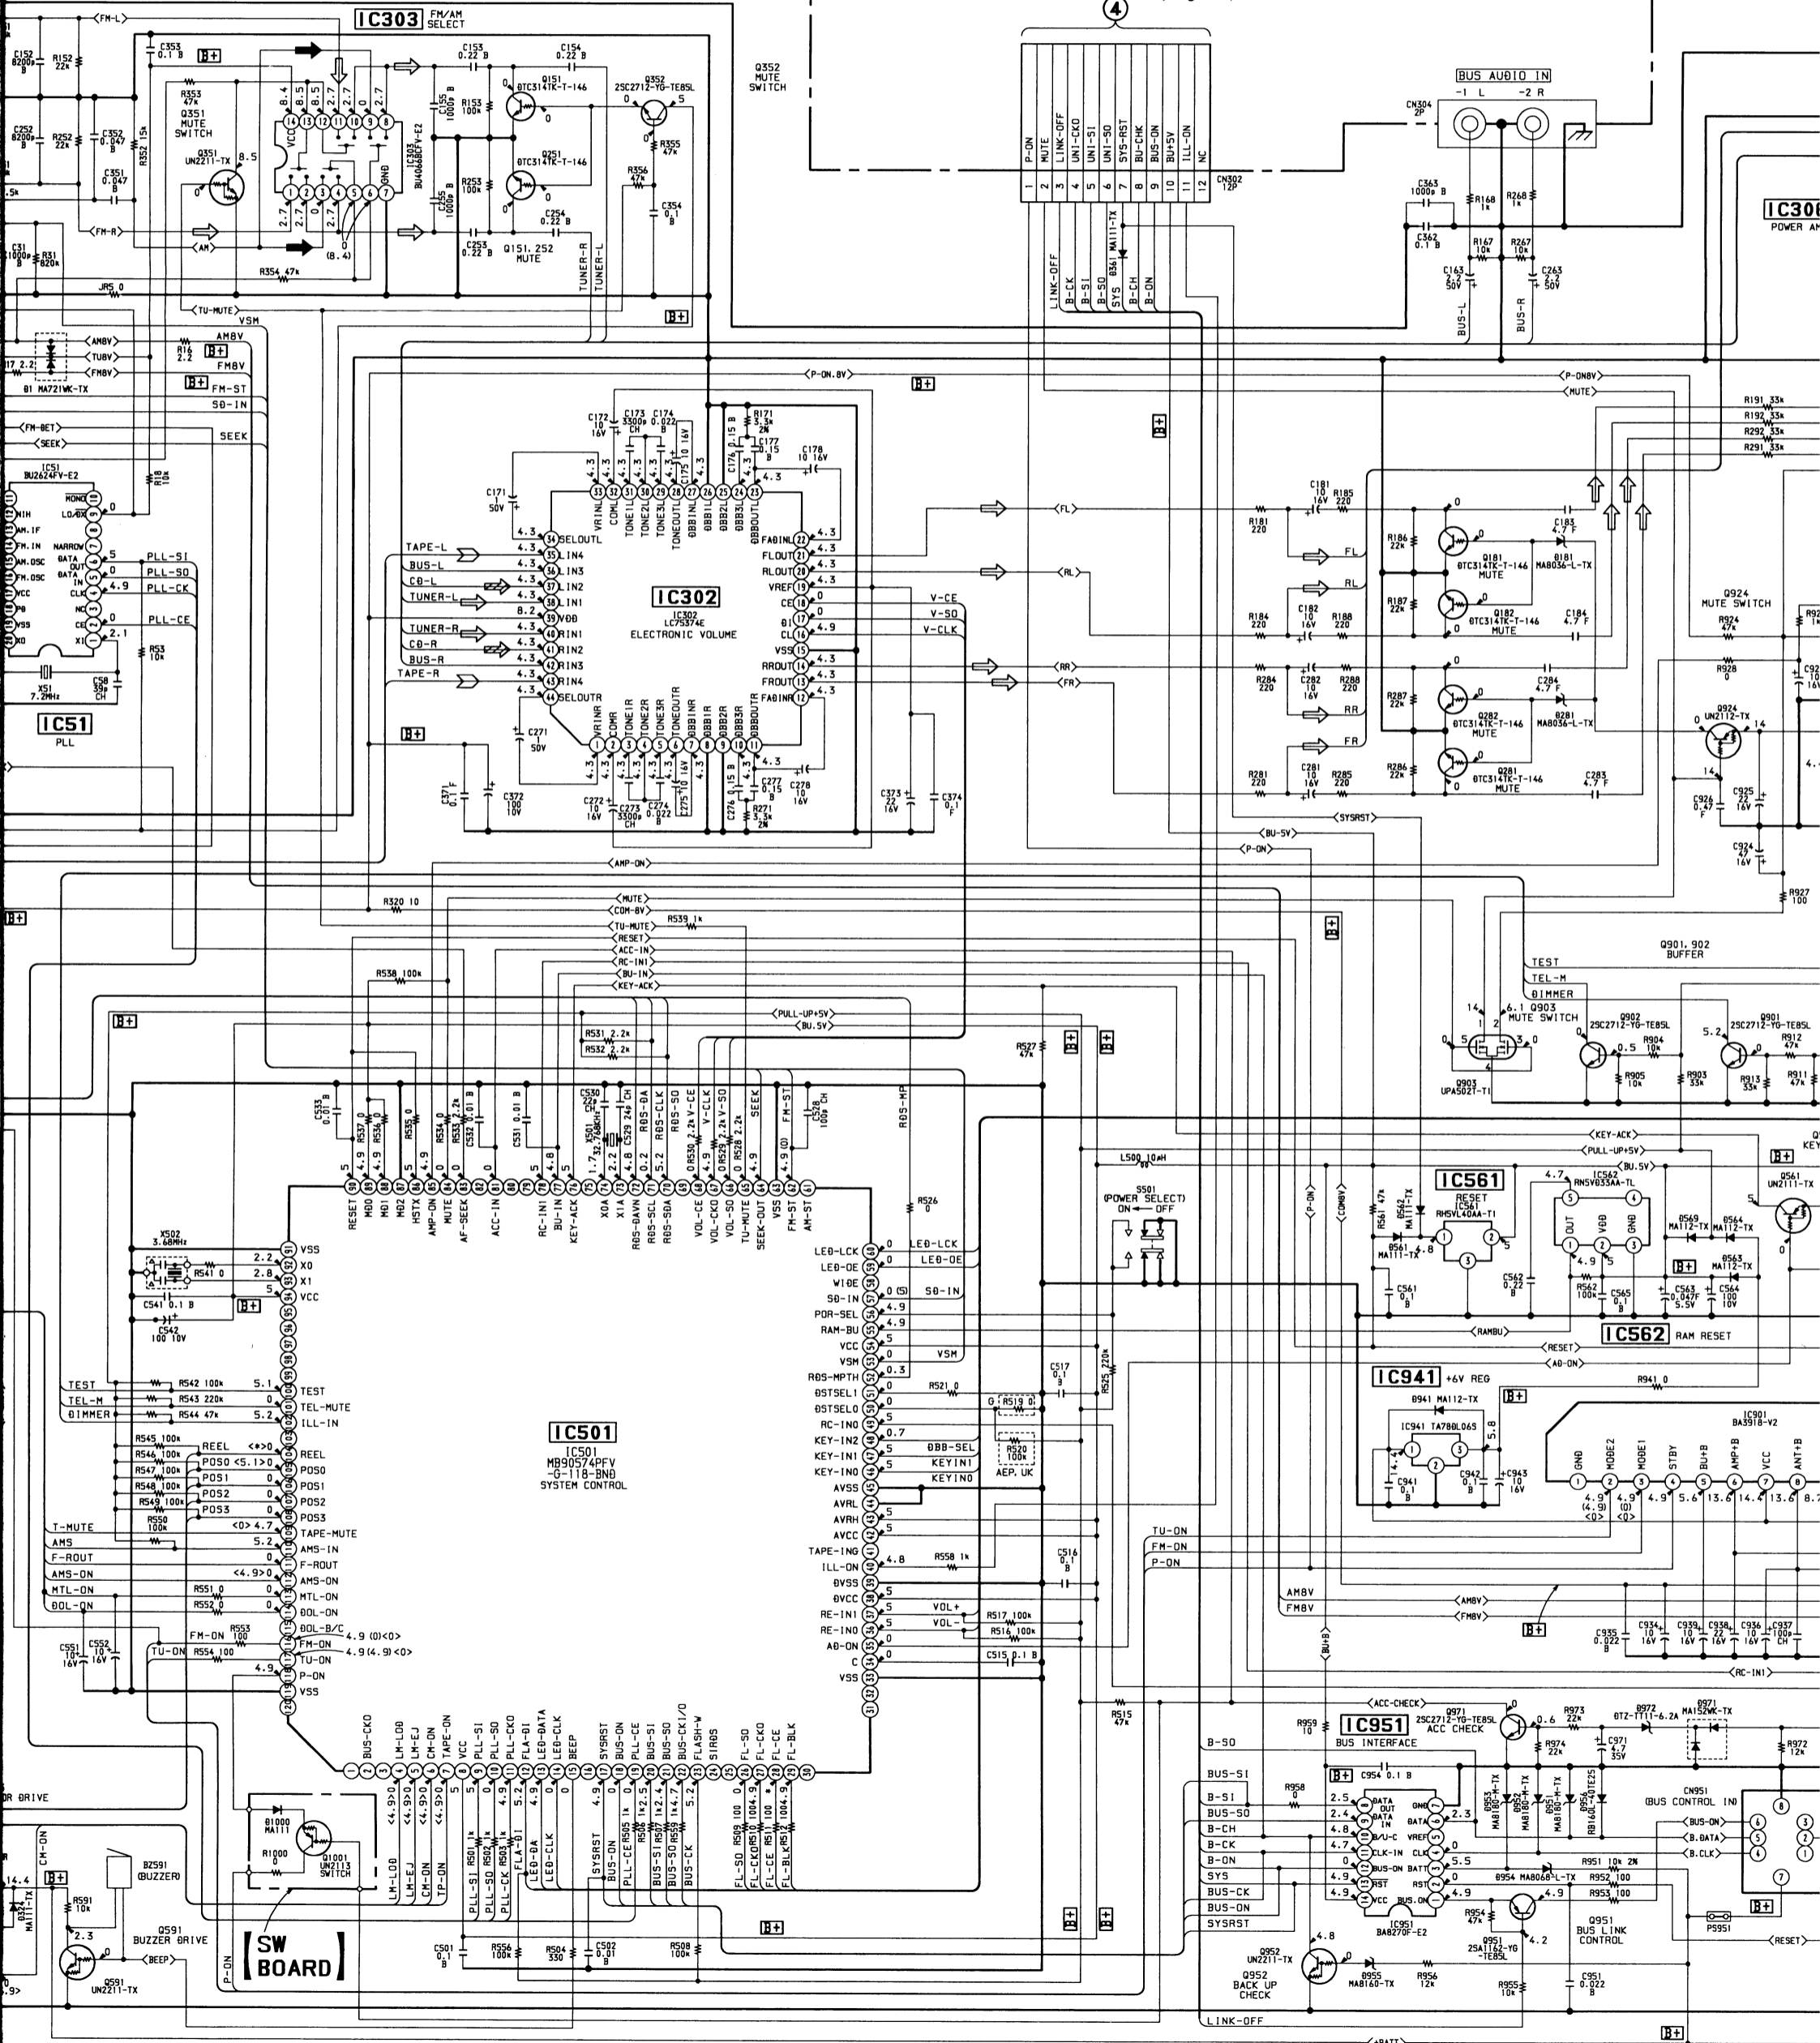


20 21 22 23 24 25 26 27 28 29

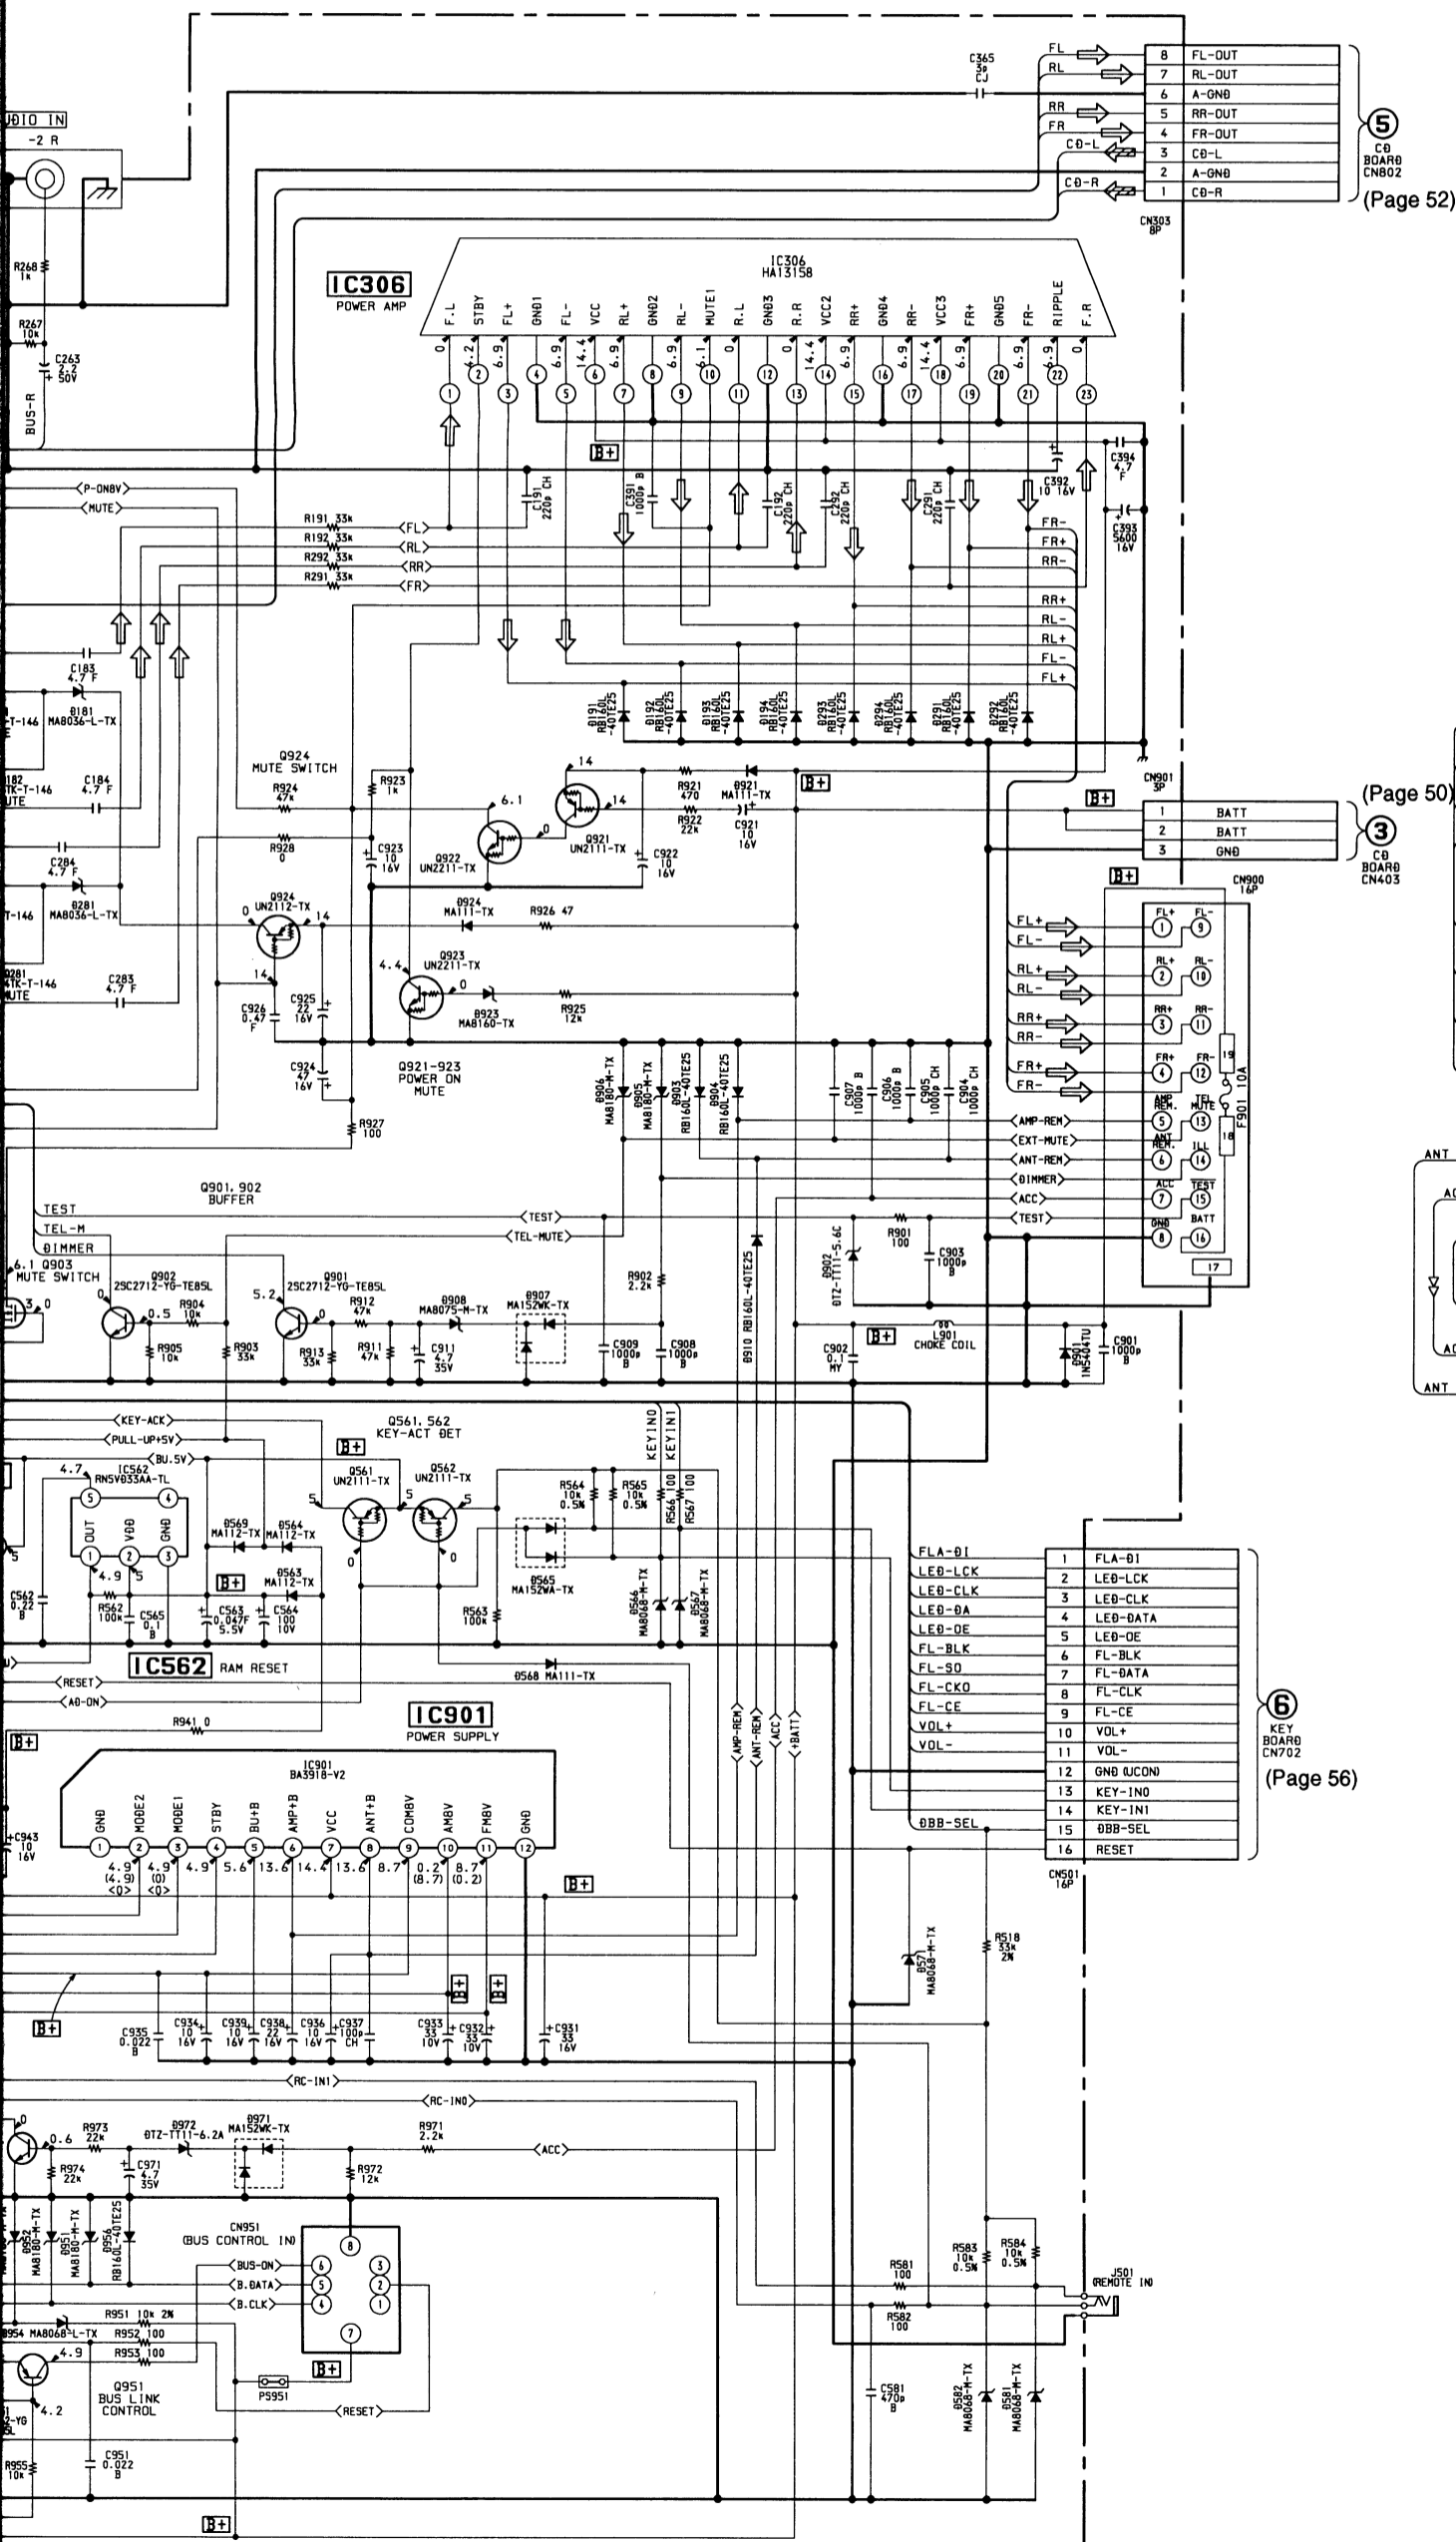

5
CD BOARD CN802
(Page 52)

3
CD BOARD CN403
(Page 50)


6
KEY BOARD CN702
(Page 56)

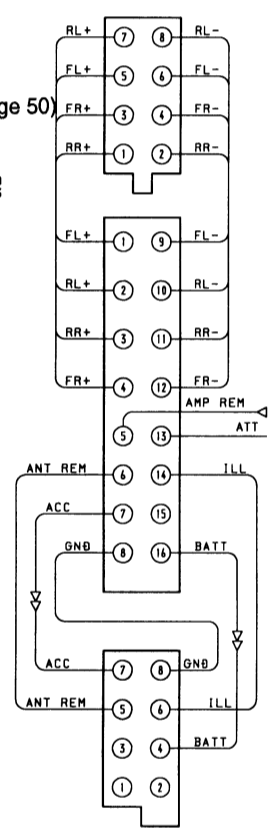


- Note:**
- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
 - All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
 - % : indicates tolerance.
 - Δ : internal component.
 - [] : panel designation.
 - [B+] : B+ Line.
 - [] : adjustment for repair.
 - Power voltage is dc 14.4V and fed with regulated dc power supply from ACC and BATT cords.
 - Voltage is dc with respect to ground under no-signal (detuned) condition.
 - no mark : FM
 - () : MW
 - < > : TAPE PLAY
 - * : Impossible to measure
 - Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
 - Signal path:
 - \square : FM
 - \blacksquare : MW
 - \square : PB (TAPE)
 - \square : CD
 - Abbreviation G : German model.

• IC Block Diagrams


IC1 CXD2507AQ (SERVO BOARD)

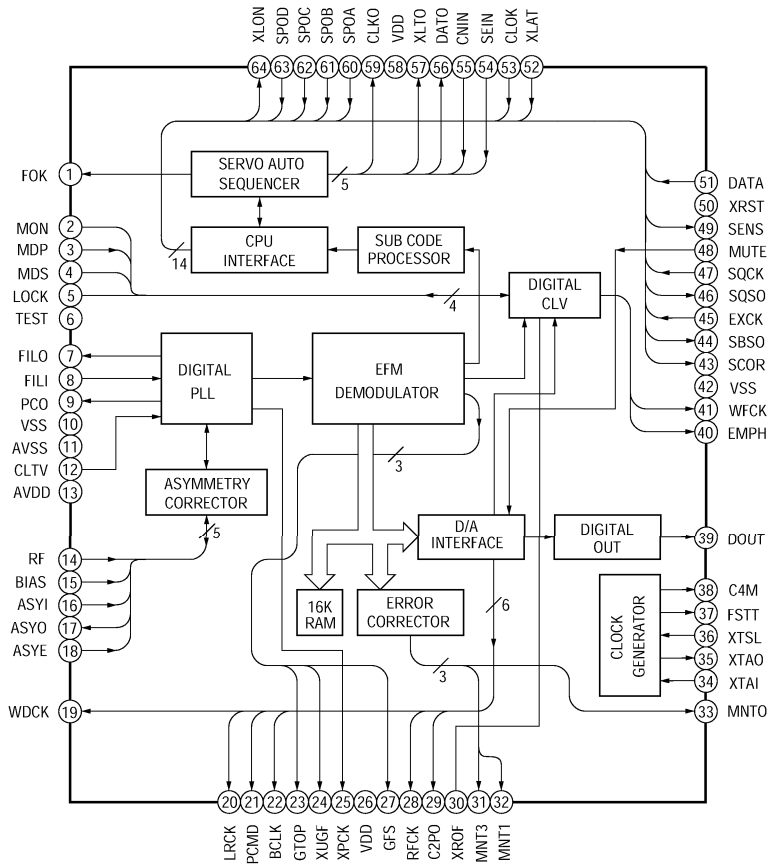


IC801 PCM1717E-ST2

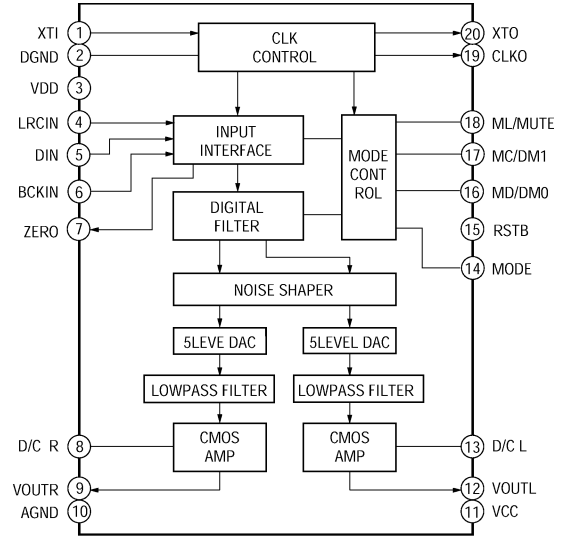


IC802 SM5852FS-E2

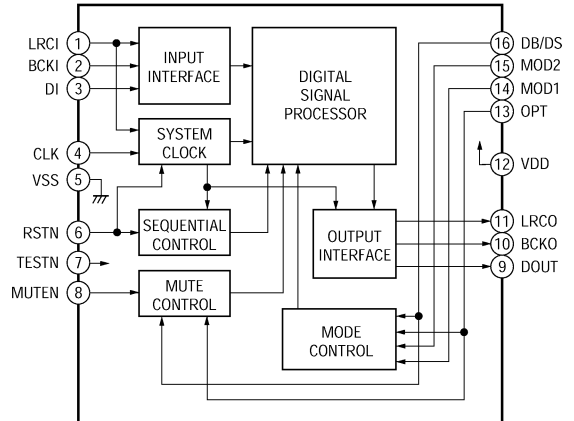


IC3 BA6796FP-T1

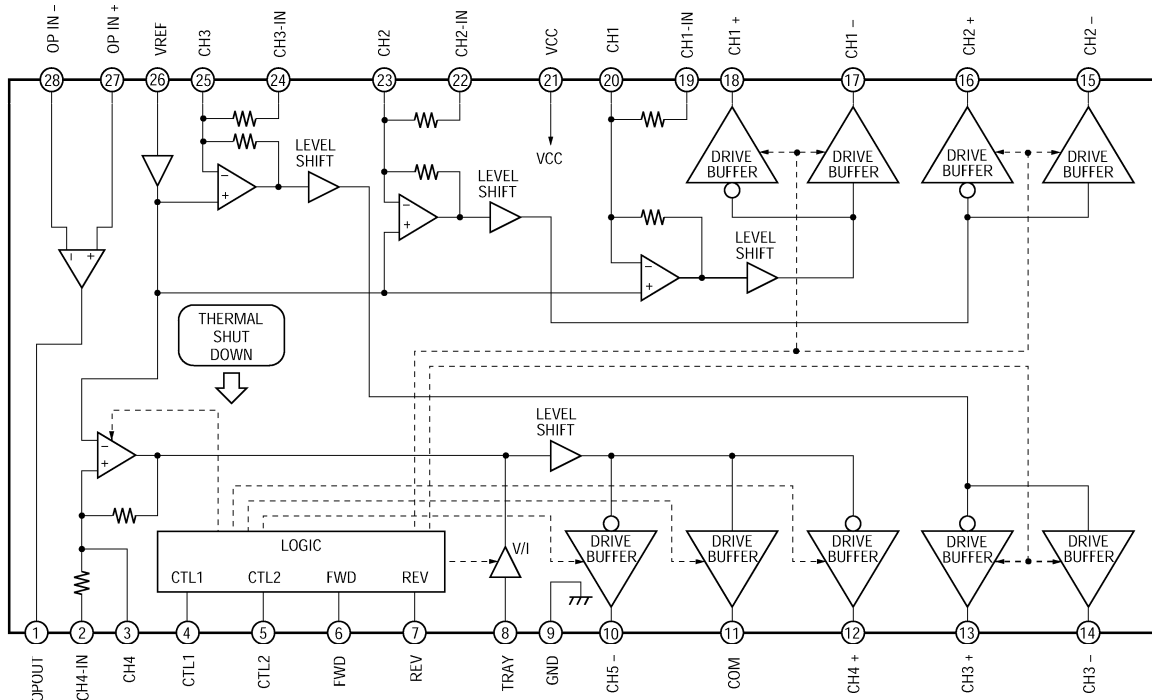


IC2 CXA1782BQ (SERVO BOARD)

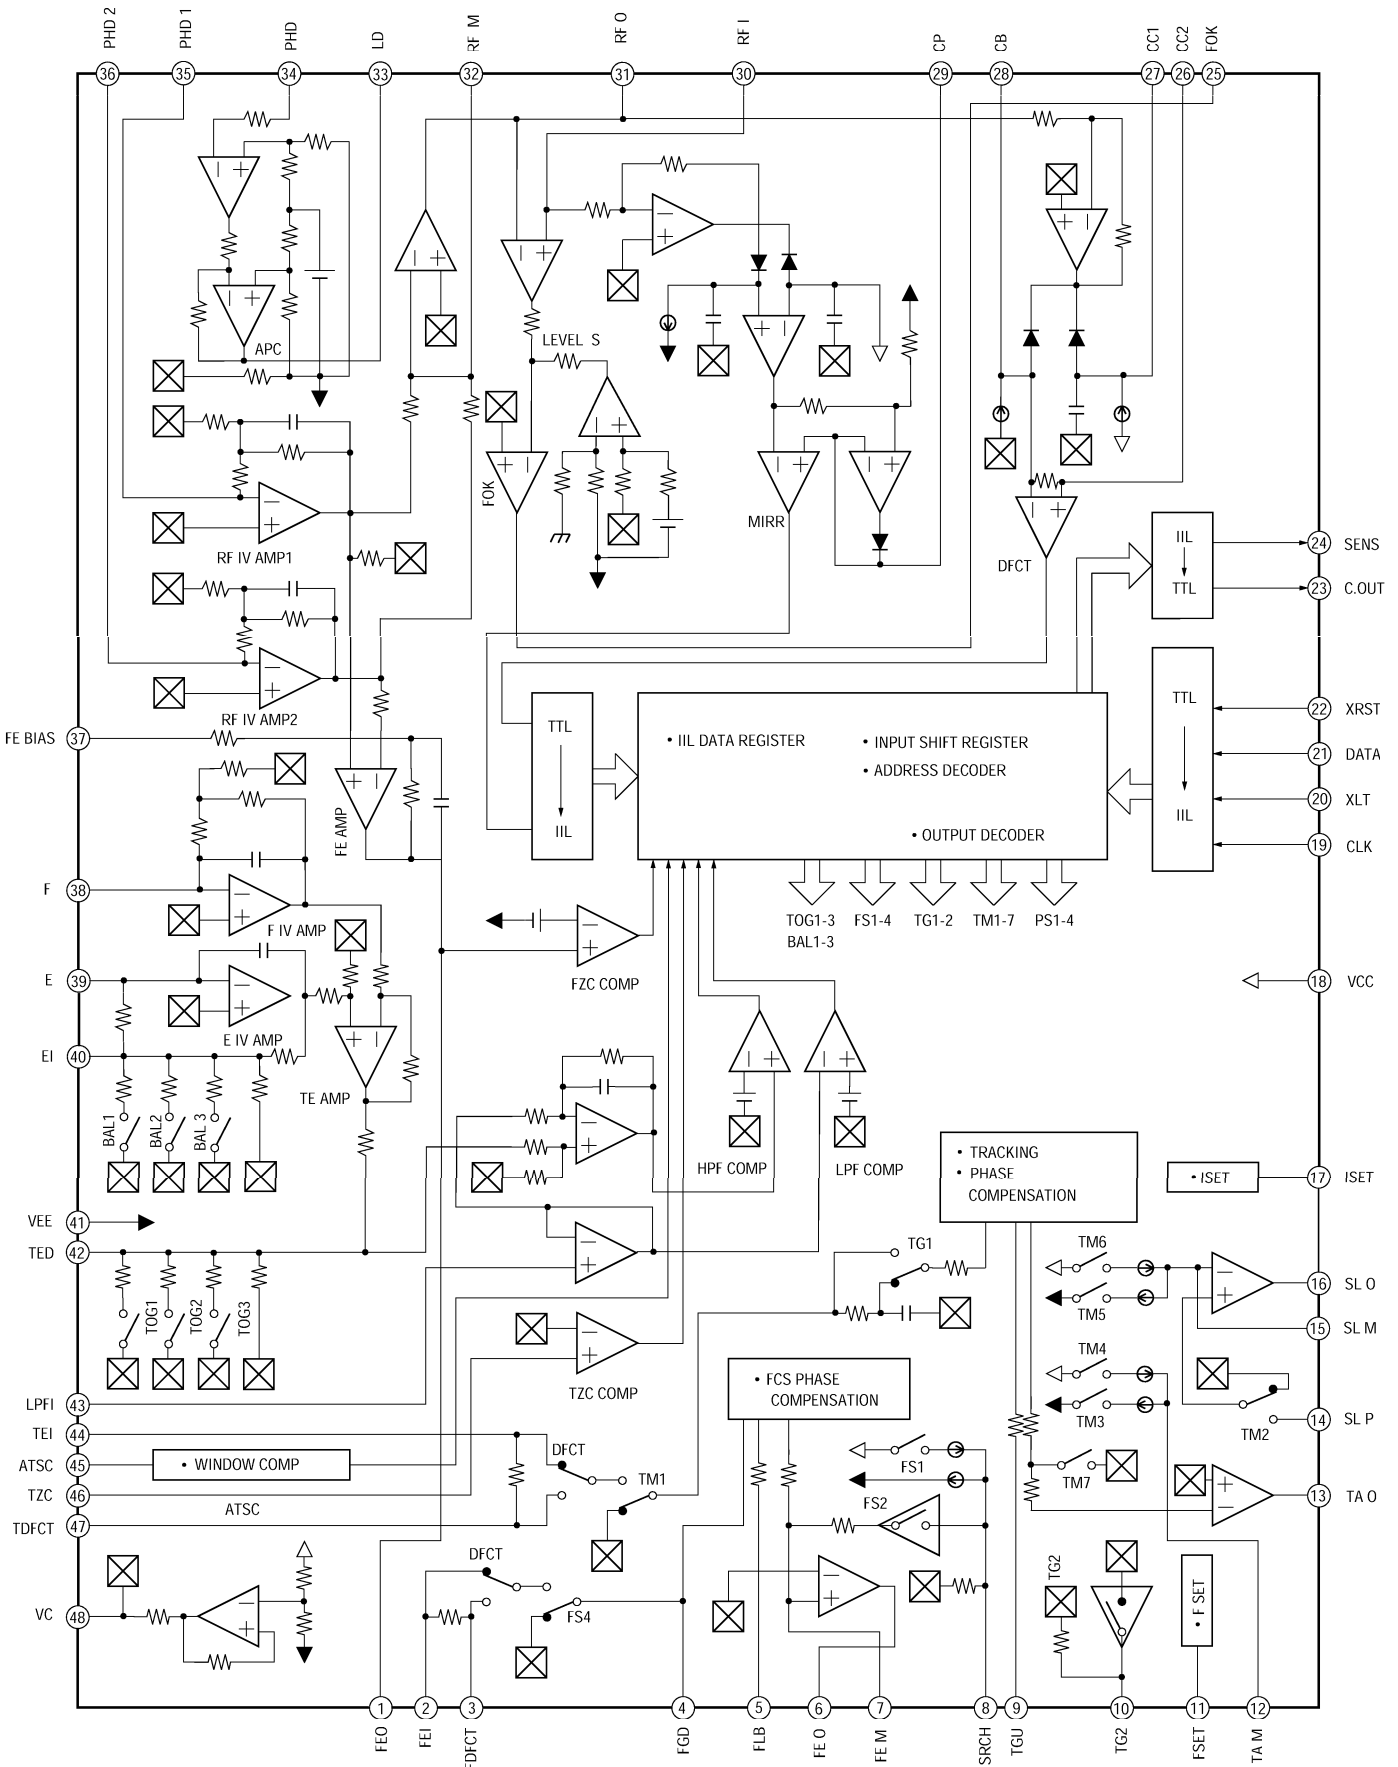


IC702 BU2092F-T1

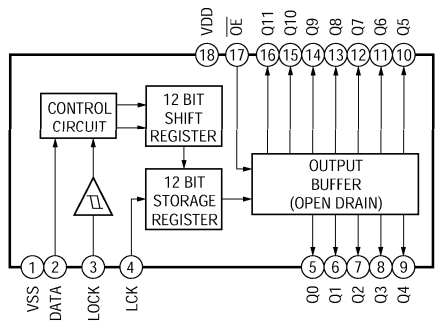


IC51 BU2624FV-E2

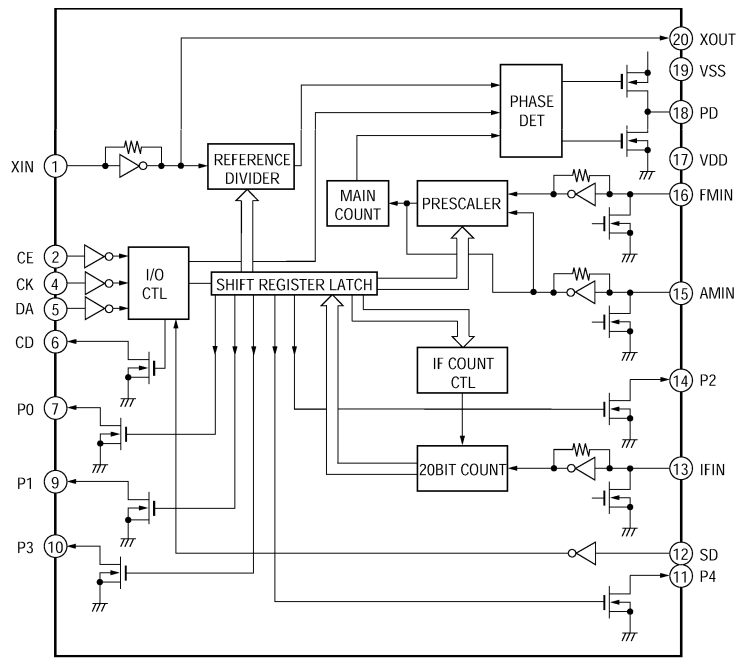


IC81 SAA6588T-118

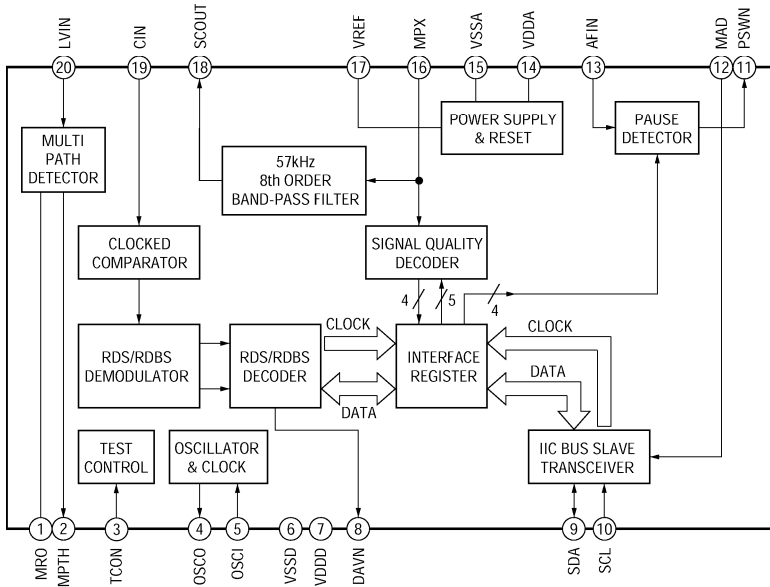


IC306 HA13158

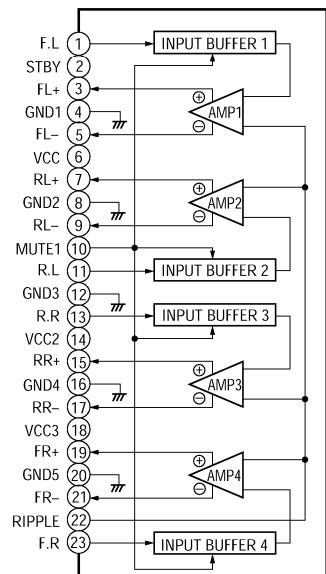


IC901 BA3918-V2

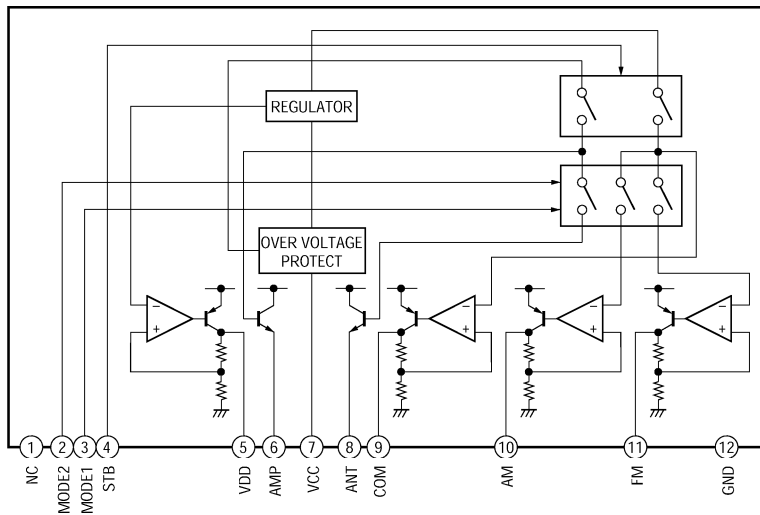


IC561 RN5VD33AA-TL

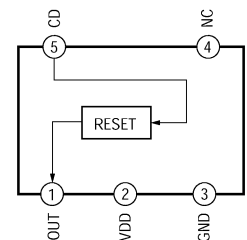


IC301 CXA2510AQ-T4

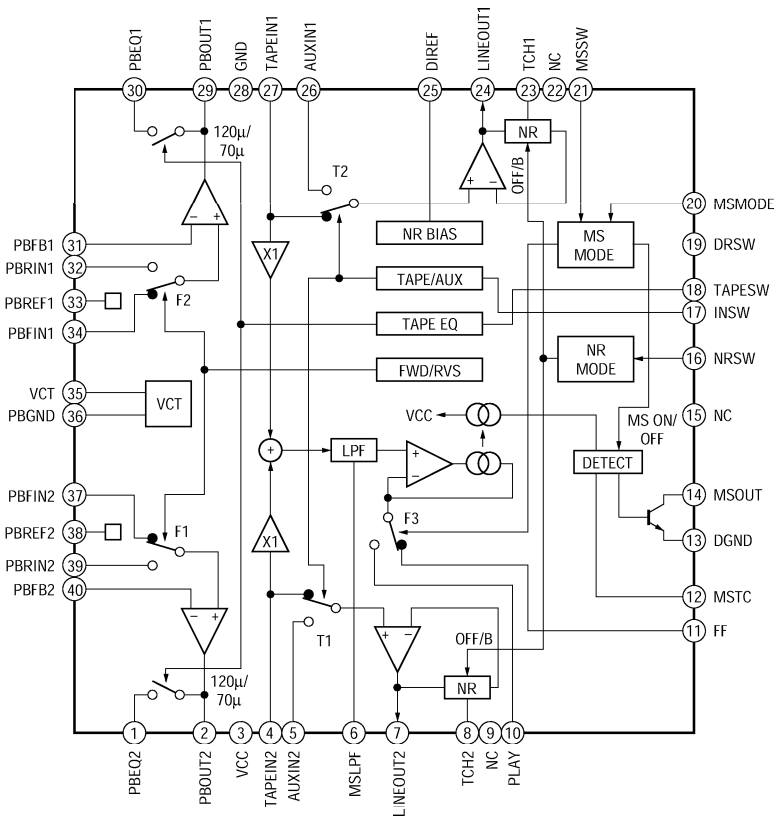


IC321 LB1638MTP-T1

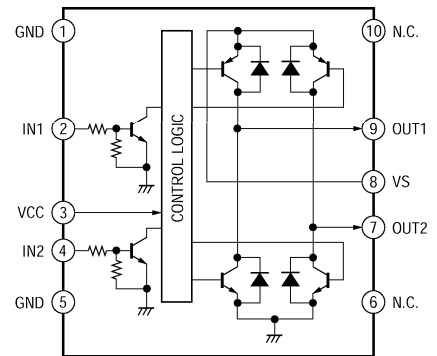

IC302 LC75374E

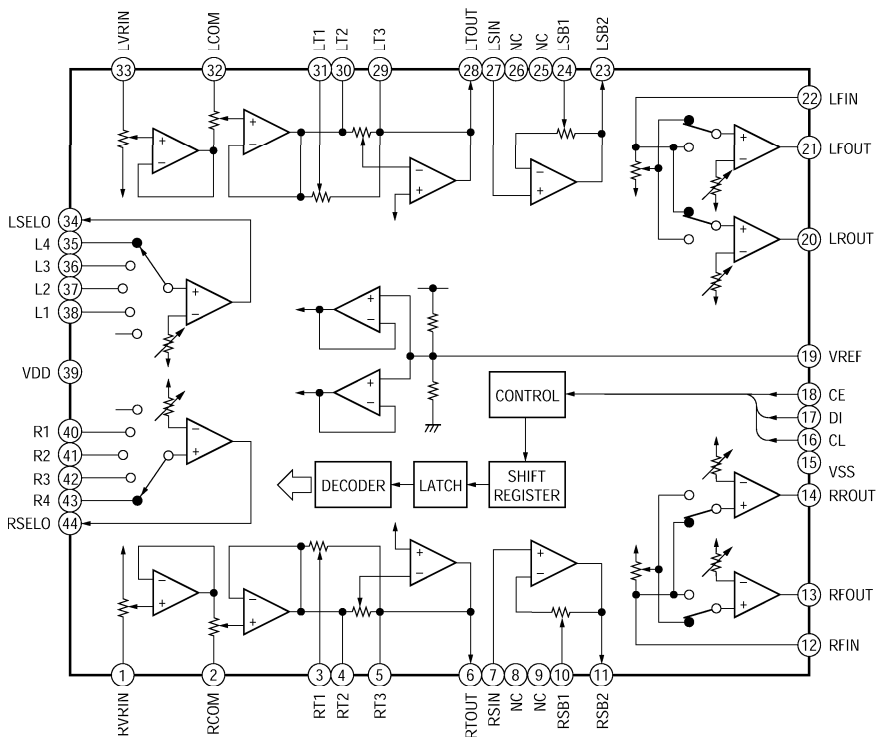

IC951 BA8270F-E2

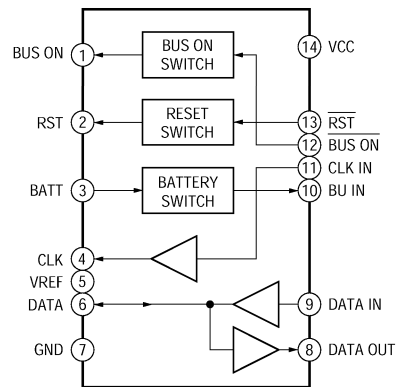

SECTION 7 EXPLODED VIEWS

NOTE:


- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
Example :
 KNOB, BALANCE (WHITE) ... (RED)
 ↑ ↑
 Parts Color Cabinet's Color

- Accessories and packing materials and hardware (# mark) list are given in the last of this parts list.


The components identified by mark △ or dotted line with mark. △ are critical for safety. Replace only with part number specified.

7-1. COVER SECTION

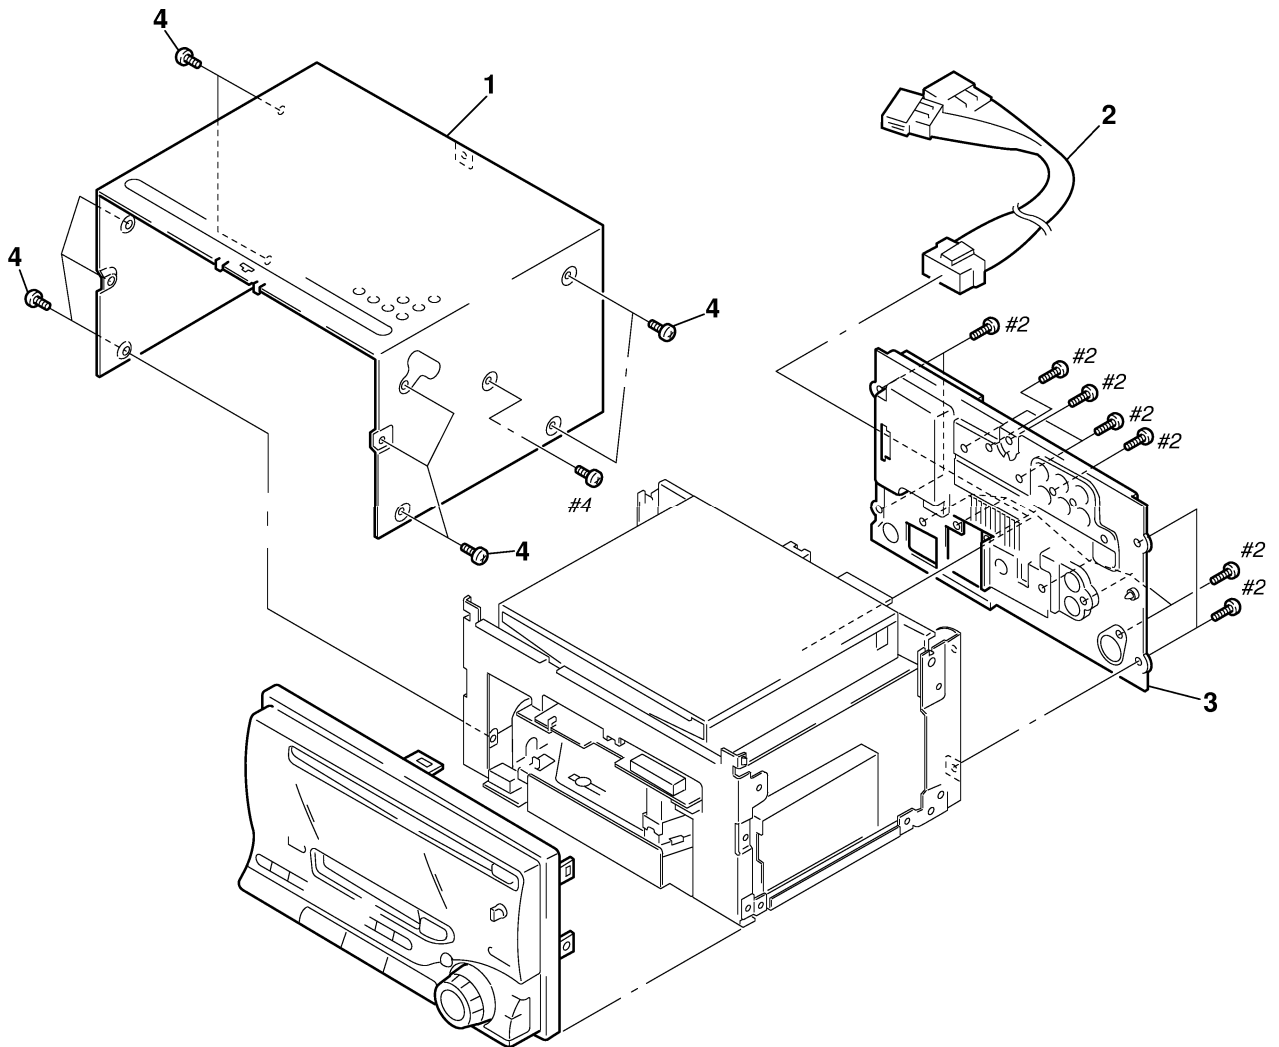


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 1	3-012-507-01	COVER		* 3	3-012-508-22	HEAT SINK	
2	1-776-527-71	CORD (WITH CONNECTOR) (ISO) (POWER)		4	3-919-171-01	SCREW (2.6X6) (C TIGHT)	

7-2. FRONT PANEL SECTION

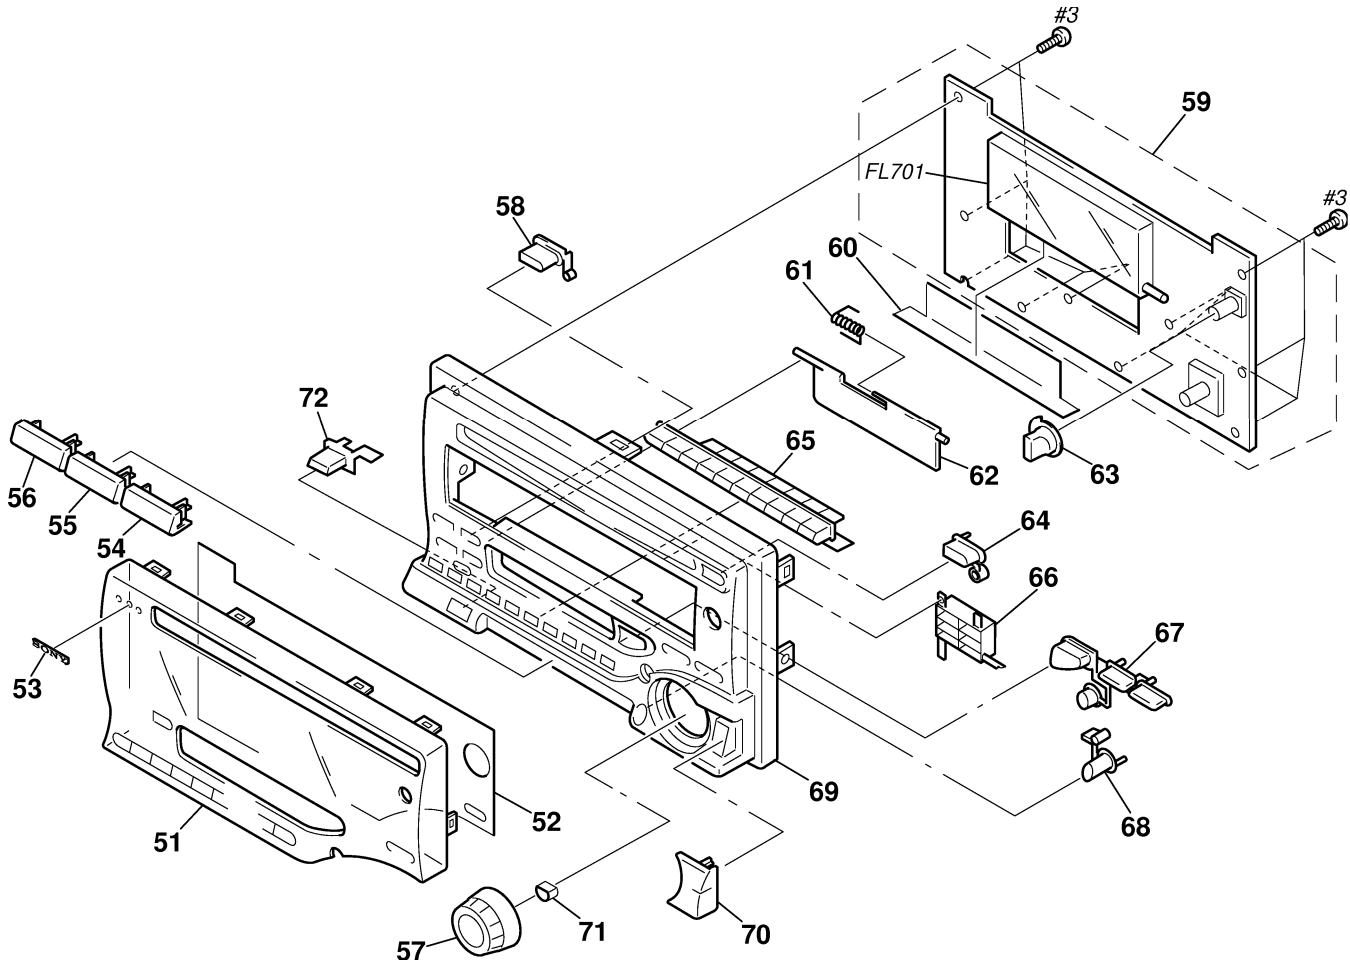


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
51	3-021-889-01	PLATE, TRANSPARENT		63	3-012-505-01	KNOB (D-BASS)	
52	3-021-893-01	SHEET, INDICATION		64	3-012-484-01	BUTTON (CD EJECT)	
53	3-736-833-11	EMBLEM (NO.3), SONY		65	3-012-488-01	BUTTON (10 KEY)	
54	3-012-487-11	BUTTON (TUNE)		66	3-012-503-01	PLATE, LIGHT INTERCEPTION	
55	3-012-486-11	BUTTON (TAPE)		67	3-021-890-01	BUTTON (PTY)	
56	3-012-485-11	BUTTON (CD)		68	3-012-521-11	BUTTON (OFF)	
57	3-013-018-01	KNOB (VOL)		69	X-3374-759-1	FRONT ASSY	
58	3-021-891-01	BUTTON (DSPL)		70	3-012-490-11	BUTTON (AMS)	
* 59	A-3313-770-A	KEY BOARD, COMPLETE		71	2-127-723-01	SPRING (KNOB)	
60	3-015-164-01	SHEET (FL), INSULATING		72	3-012-520-21	BUTTON (AF/TA)	
61	3-014-207-01	SPRING (CASSETTE LID)		FL701	1-517-779-11	INDICATOR TUBE, FLUORESCENT	
62	3-012-483-01	DOOR, CASSETTE					

7-3. CHASSIS SECTION

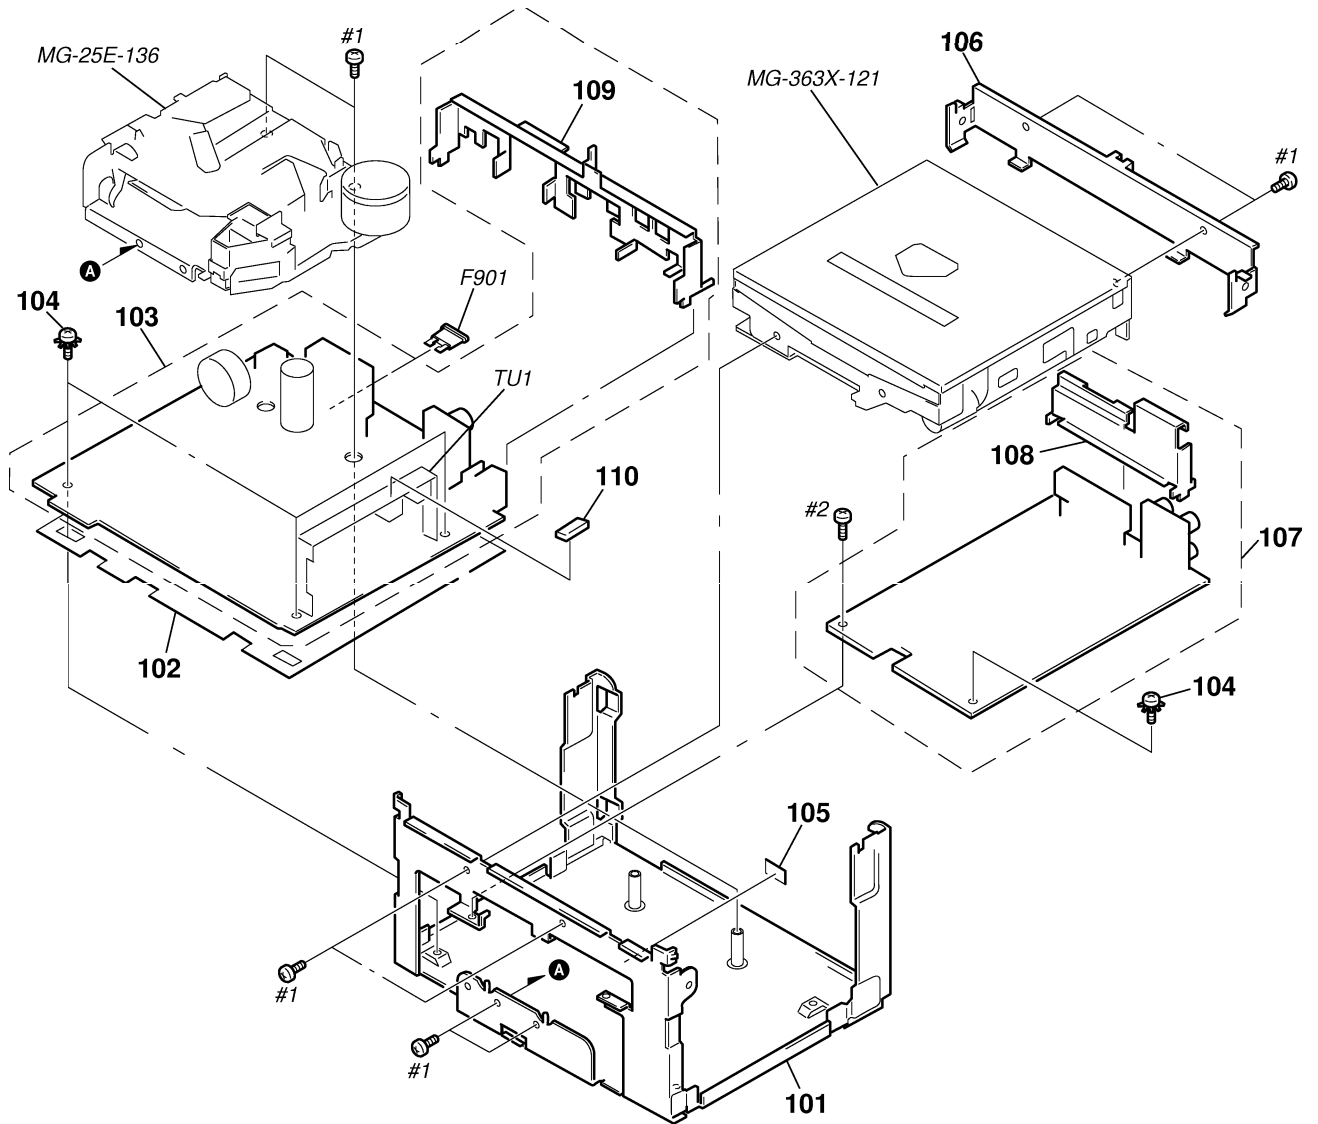


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 101	X-3373-616-1	CHASSIS ASSY		107	A-3313-812-A	CD BOARD, COMPLETE	
* 102	3-012-514-01	SHEET, INSULATING		* 108	3-012-511-01	BRACKET (2F)	
* 103	A-3313-768-A	MAIN BOARD, COMPLETE		* 109	3-012-509-01	BRACKET (1F)	
104	3-376-464-11	SCREW (+PTT 2.6X6), GROUND POINT		110	3-322-044-01	SPACER, RUBBER	
* 105	3-320-882-01	SHEET, DIRECTION		F901	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
* 106	3-012-512-01	BRACKET (CD)		TU1	A-3282-029-A	TUNER UNIT (TUX-006/2(E))	

7-4. CD MECHANISM SECTION (1)
(MG-363X-121)

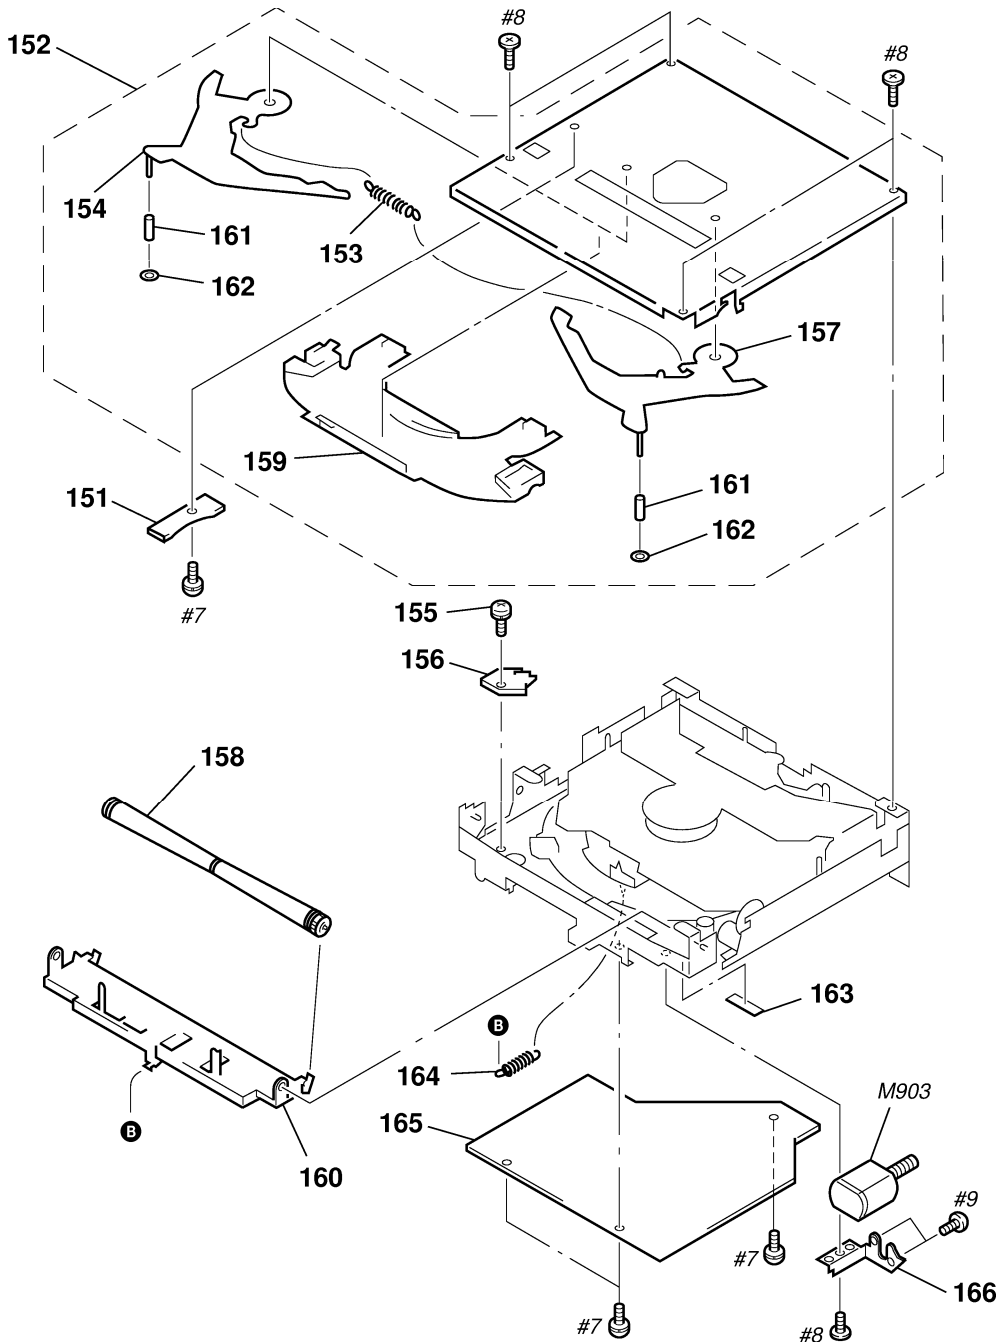


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 151	1-659-836-11	DISC IN SW BOARD		160	3-931-902-03	ARM (ROLLER)	
* 152	A-3291-816-B	CHASSIS (T) SUB ASSY		161	3-936-756-01	ROLLER (D)	
153	3-931-909-01	SPRING (LR), TENSION		162	3-321-393-01	WASHER, STOPPER	
154	X-3371-501-1	LEVER (L) ASSY		* 163	3-939-139-01	SPACER	
155	3-338-737-01	SCREW (2X3), + PS		164	3-931-916-01	SPRING (RA), TENSION	
* 156	1-659-837-11	LOAD SW BOARD		* 165	A-3309-227-A	SERVO BOARD, COMPLETE	
157	X-3371-502-1	LEVER (R) ASSY		* 166	3-007-530-01	BRACKET (MOTOR)	
158	A-3301-203-A	ROLLER ASSY		M903	A-3291-676-A	MOTOR SUB ASSY, LOADING	
159	3-931-908-01	GUIDE (DISC)					

7-5. CD MECHANISM SECTION (2)
(MG-363X-121)

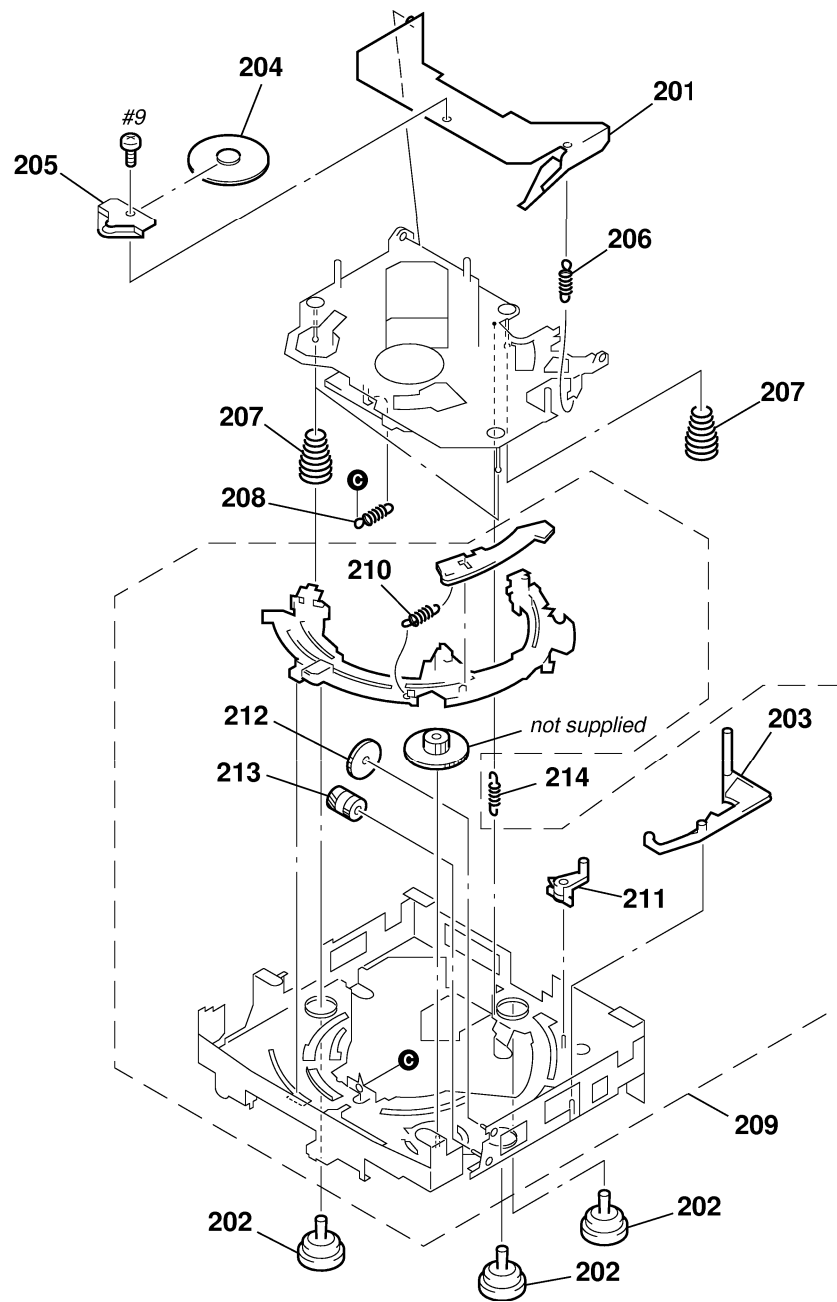

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	3-931-893-01	ARM, CHUCKING		208	3-019-805-01	SPRING (KF1), TENSION	
202	3-931-897-01	DAMPER (T)		209	A-3277-802-C	CHASSIS (M) ASSY	
203	3-931-879-02	LEVER (D)		210	3-931-883-01	SPRING (TR), TENSION	
* 204	3-913-404-11	RETAINER (DISC)		211	3-931-881-01	LEVER (LOCK)	
205	3-931-894-01	BRACKET (CP)		212	3-931-882-02	GEAR (MDL)	
206	3-931-895-01	SPRING (CH), TENSION		213	3-007-537-11	WHEEL (U), WORM	
207	3-931-898-01	SPRING (FL), COMPRESSION		214	3-019-806-01	SPRING (KR1), TENSION	


7-6. CD MECHANISM SECTION (3)
(MG-363X-121)

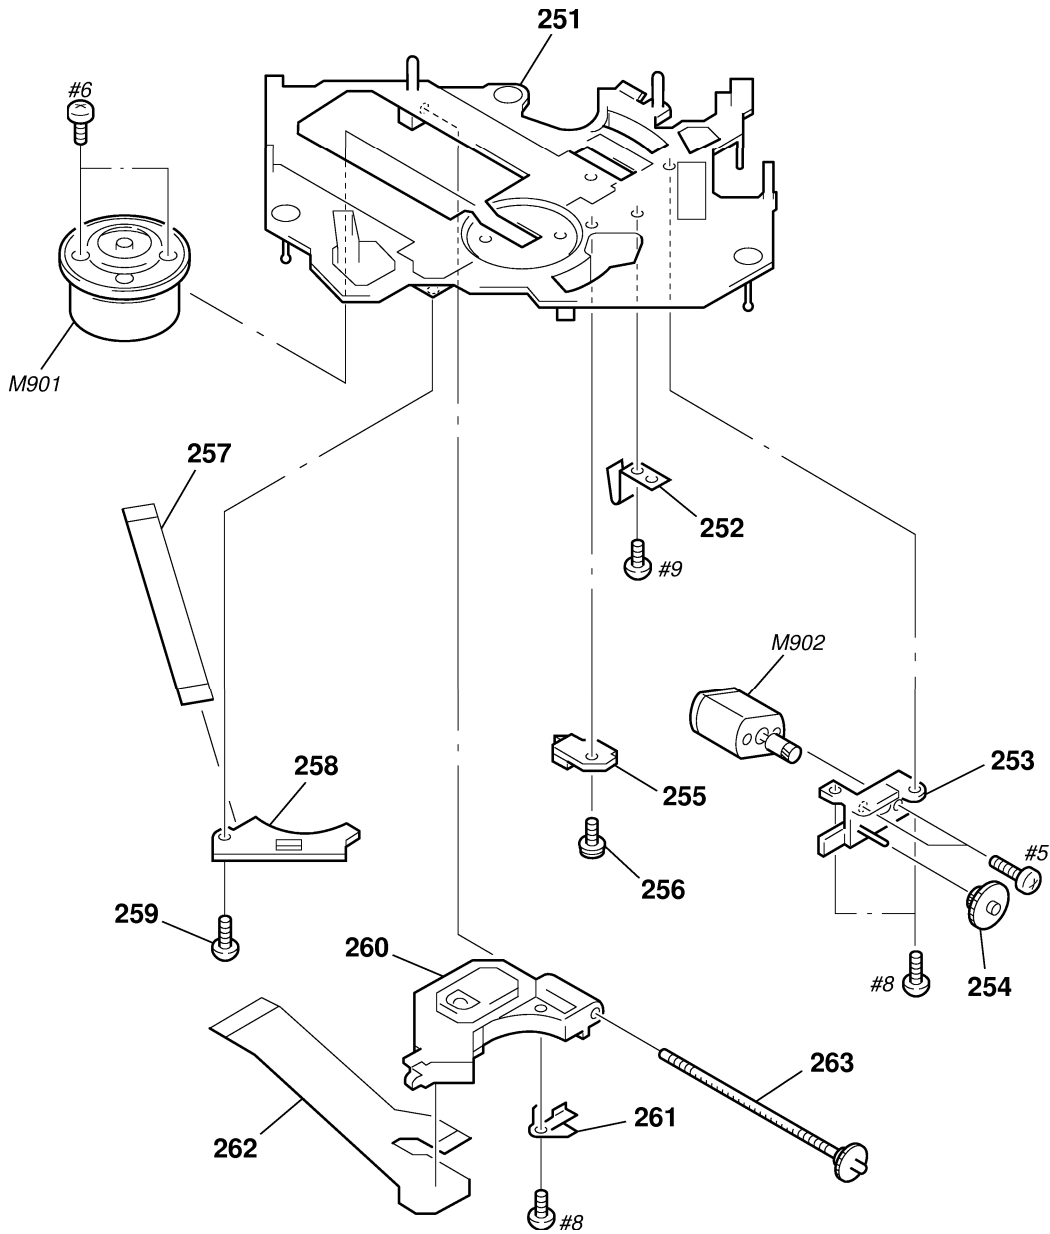

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 251	X-3374-022-1	CHASSIS (OP) (O/S) ASSY		259	3-909-607-01	SCREW	
252	3-931-829-01	SPRING (SL), PLATE		\triangle 260	8-820-010-06	PICK-UP, OPTICAL KSS-521A/K1RP	
253	X-3371-504-1	BASE (DRIVING) ASSY		261	3-931-834-01	SPRING (FEED), PLATE	
254	3-931-832-01	GEAR (SL MIDWAY)		262	1-659-881-11	PICK-UP FLEXIBLE BOARD	
* 255	1-659-835-12	LIMIT SW BOARD		263	A-3291-669-A	SHAFT (FEED) ASSY	
256	3-338-737-01	SCREW (2X3), + PS		M901	X-3371-664-2	MOTOR ASSY (SPINDLE)	
257	1-659-880-11	MOTOR FLEXIBLE BOARD		M902	A-3291-674-A	MOTOR ASSY, SLED	
* 258	1-659-834-11	SUB BOARD					

**7-7. TAPE MECHANISM SECTION
(MG-25E-136)**

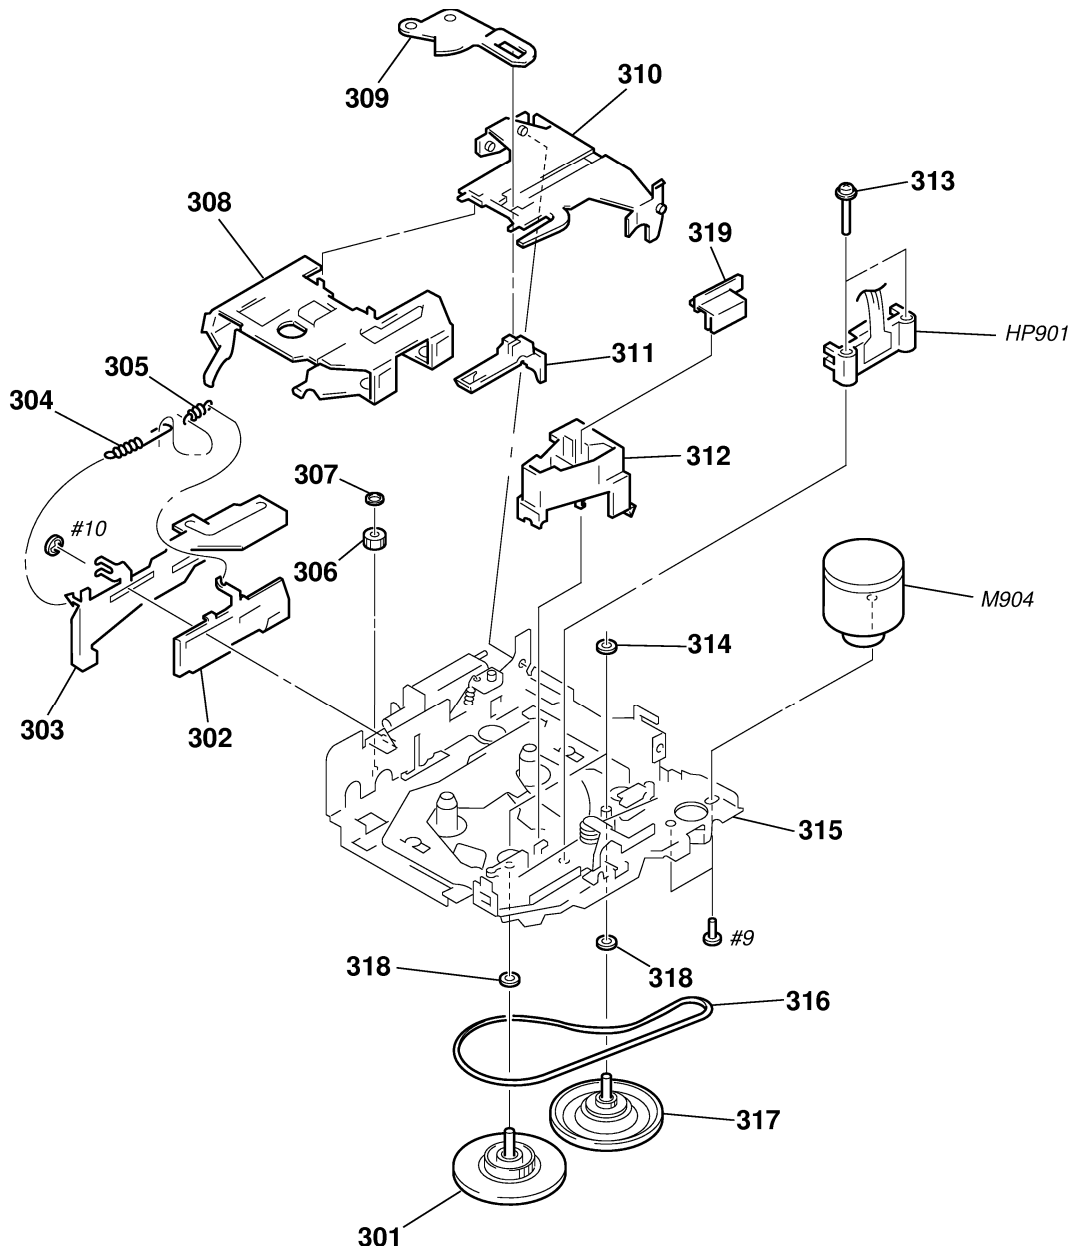

<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>	<u>Ref. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Remark</u>
301	A-3291-667-A	CLUTCH (FR) ASSY		312	3-933-344-01	GUIDE (C)	
* 302	3-019-130-01	LEVER (LDG-A)		313	3-014-798-01	SCREW (HEAD), SPECIAL	
* 303	3-019-131-01	LEVER (LDG-B)		314	3-364-151-01	WASHER	
304	3-020-539-01	SPRING (LD-1), TENSION		315	X-3375-625-1	CHASSIS ASSY (E)	
305	3-020-540-01	SPRING (LD-2), TENSION		316	3-017-302-01	BELT (25)	
306	3-020-542-01	GEAR (LOADING FT)		317	3-936-853-01	FLYWHEEL (F)	
307	3-341-753-11	WASHER, POLYETHYLENE		318	3-701-437-21	WASHER	
308	3-020-533-01	HOUSING		* 319	3-012-502-01	GUIDE	
* 309	3-020-532-01	ARM (SUCTION)		HP901	1-500-157-21	HEAD, MAGNETIC (PLAYBACK)	
310	3-020-534-01	HANGER		M904	A-3291-665-A	MOTOR ASSY, MAIN (CAPSTAN/REEL)	
311	3-933-346-01	CATCHER					

SECTION 8 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable
- Abbreviation
G : German model

- Items marked “**” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u : μ , for example:
uA.. : μ A.. uPA.. : μ PA..
uPB.. : μ PB.. uPC.. : μ PC.. uPD.. : μ PD..
- CAPACITORS
uF : μ F
- COILS
uH : μ H

The components identified by mark Δ or dotted line with mark. Δ are critical for safety.
Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
	A-3313-812-A	CD BOARD, COMPLETE *****	
*	3-012-511-01	BRACKET (2F) < CAPACITOR >	
C401	1-126-157-11	ELECT 10uF	20% 16V
C402	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C403	1-163-237-11	CERAMIC CHIP 27PF	5% 50V
C404	1-163-235-11	CERAMIC CHIP 22PF	5% 50V
C405	1-163-241-11	CERAMIC CHIP 39PF	5% 50V
C406	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C407	1-104-952-11	ELECT 22uF	20% 16V
C408	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C409	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C411	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C412	1-126-157-11	ELECT 10uF	20% 16V
C413	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C421	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C431	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C432	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C433	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C434	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C441	1-163-243-11	CERAMIC CHIP 47PF	5% 50V
C442	1-126-157-11	ELECT 10uF	20% 16V
C446	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C447	1-126-157-11	ELECT 10uF	20% 16V
C451	1-164-005-11	CERAMIC CHIP 0.47uF	25V
C452	1-124-234-00	ELECT 22uF	20% 16V
C455	1-124-584-00	ELECT 100uF	20% 10V
C456	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C461	1-164-506-11	CERAMIC CHIP 4.7uF	16V
C462	1-124-584-00	ELECT 100uF	20% 10V
C463	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C464	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C465	1-124-584-00	ELECT 100uF	20% 10V
C466	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C467	1-126-163-11	ELECT 4.7uF	20% 50V
C468	1-163-038-00	CERAMIC CHIP 0.1uF	25V
C471	1-126-163-11	ELECT 4.7uF	20% 50V
C481	1-126-157-11	ELECT 10uF	20% 16V
C482	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C483	1-124-234-00	ELECT 22uF	20% 16V
C801	1-126-157-11	ELECT 10uF	20% 16V
C802	1-126-157-11	ELECT 10uF	20% 16V

Ref. No.	Part No.	Description	Remark
C803	1-163-012-00	CERAMIC CHIP 0.0018uF	10% 50V
C804	1-126-301-11	ELECT 1uF	20% 50V
C805	1-104-944-11	ELECT 3.3uF	20% 50V
C806	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
C807	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
C851	1-126-157-11	ELECT 10uF	20% 16V
C852	1-126-157-11	ELECT 10uF	20% 16V
C853	1-163-012-00	CERAMIC CHIP 0.0018uF	10% 50V
C854	1-126-301-11	ELECT 1uF	20% 50V
C855	1-104-944-11	ELECT 3.3uF	20% 50V
C856	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
C857	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
< CONNECTOR >			
CN401	1-764-617-12	PIN, CONNECTOR (PC BOARD) 30P	
CN402	1-770-405-11	CONNECTOR, BOARD TO BOARD 8P	
* CN403	1-506-999-11	PIN, CONNECTOR (PC BOARD) 3P	
* CN404	1-564-728-11	PIN, CONNECTOR (SMALL TYPE) 12P	
* CN802	1-564-724-11	PIN, CONNECTOR (SMALL TYPE) 8P	
< JACK >			
CN803	1-774-699-12	JACK, PIN 4P (LINE OUT)	
< DIODE >			
D451	8-719-404-49	DIODE MA111	
D461	8-719-422-49	DIODE MA8056-L	
D462	8-719-422-94	DIODE MA8091-L	
D471	8-719-423-10	DIODE MA8100-M-TX	
D481	8-719-421-18	DIODE MA8033-L-TX	
D482	8-719-404-49	DIODE MA111	
D483	8-719-200-82	DIODE 11ES2	
D491	8-719-404-49	DIODE MA111	
D801	8-719-421-36	DIODE MA8036-L	
D851	8-719-421-36	DIODE MA8036-L	
< IC >			
IC401	8-759-537-65	IC uPD78054GC-484-3B9	
IC801	8-759-464-81	IC PCM1717E-ST2	
IC802	8-759-537-11	IC SM5852FS-E2	
< JUMPER RESISTOR >			
JC405	1-216-295-00	SHORT	0
JC406	1-216-295-00	SHORT	0
JC407	1-216-295-00	SHORT	0
JC408	1-216-295-00	SHORT	0

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
JC410	1-216-295-00	SHORT	0	R447	1-216-001-00	METAL CHIP	10 5% 1/10W
JC412	1-216-295-00	SHORT	0	R448	1-216-089-00	RES,CHIP	47K 5% 1/10W
JC451	1-216-296-00	SHORT	0	R451	1-216-017-00	RES,CHIP	47 5% 1/10W
JC453	1-216-296-00	SHORT	0	R461	1-216-182-00	RES,CHIP	220 5% 1/8W
JC454	1-216-296-00	SHORT	0	R462	1-216-188-00	RES,CHIP	390 5% 1/8W
JC455	1-216-296-00	SHORT	0	R471	1-216-206-00	RES,CHIP	2.2K 5% 1/8W
JC456	1-216-296-00	SHORT	0	R472	1-216-079-00	METAL CHIP	18K 5% 1/10W
JC457	1-216-295-00	SHORT	0	R473	1-216-079-00	METAL CHIP	18K 5% 1/10W
		< COIL >		R474	1-216-190-00	RES,CHIP	470 5% 1/8W
				R475	1-216-190-00	RES,CHIP	470 5% 1/8W
L401	1-410-513-11	INDUCTOR	22uH	R481	1-249-417-11	CARBON	1K 5% 1/4W
L402	1-410-513-11	INDUCTOR	22uH	R482	1-216-206-00	RES,CHIP	2.2K 5% 1/8W
L411	1-410-513-11	INDUCTOR	22uH	R483	1-216-190-00	RES,CHIP	470 5% 1/8W
L455	1-410-513-11	INDUCTOR	22uH	R484	1-216-049-11	RES,CHIP	1K 5% 1/10W
		< TRANSISTOR >		R485	1-216-049-11	RES,CHIP	1K 5% 1/10W
Q401	1-801-806-11	TRANSISTOR	DTC144EKA-T146	R491	1-216-089-00	RES,CHIP	47K 5% 1/10W
Q451	8-729-424-12	TRANSISTOR	UN2112	R492	1-216-097-00	RES,CHIP	100K 5% 1/10W
Q461	1-801-806-11	TRANSISTOR	DTC144EKA-T146	R801	1-247-815-11	CARBON	220 5% 1/4W
Q462	8-729-019-00	TRANSISTOR	2SD2394-G	R802	1-247-815-11	CARBON	220 5% 1/4W
Q463	8-729-020-67	TRANSISTOR	XN1A312-TX	R803	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q464	8-729-019-00	TRANSISTOR	2SD2394-G	R804	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q465	8-729-020-67	TRANSISTOR	XN1A312-TX	R805	1-216-049-11	RES,CHIP	1K 5% 1/10W
Q471	8-729-106-60	TRANSISTOR	2SB1115A	R851	1-216-033-00	METAL CHIP	220 5% 1/10W
Q472	8-729-421-22	TRANSISTOR	UN2211	R852	1-216-033-00	METAL CHIP	220 5% 1/10W
Q473	8-729-019-00	TRANSISTOR	2SD2394-G	R853	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q474	8-729-020-67	TRANSISTOR	XN1A312-TX	R854	1-216-081-00	METAL CHIP	22K 5% 1/10W
Q481	8-729-019-00	TRANSISTOR	2SD2394-G	R855	1-216-049-11	RES,CHIP	1K 5% 1/10W
Q482	8-729-106-60	TRANSISTOR	2SB1115A			< VIBRATOR >	
Q483	8-729-230-49	TRANSISTOR	2SC2712-YG	X401	1-579-280-31	VIBRATOR, CRYSTAL (16.9344MHz)	
Q491	8-729-230-49	TRANSISTOR	2SC2712-YG	X402	1-760-489-11	VIBRATOR, CERAMIC (5MHz)	
Q801	8-729-920-21	TRANSISTOR	DTC314TKH04			*****	
Q802	8-729-920-21	TRANSISTOR	DTC314TKH04				
Q851	8-729-920-21	TRANSISTOR	DTC314TKH04	*	1-659-836-11	DISC IN SW BOARD	
Q852	8-729-920-21	TRANSISTOR	DTC314TKH04			*****	
		< RESISTOR >				< SWITCH >	
R401	1-216-295-00	SHORT	0	SW1	1-572-288-11	SWITCH, PUSH (DISC IN)	
R402	1-216-037-00	METAL CHIP	330	5%	1/10W	SW2	1-572-288-11
R403	1-216-097-00	RES,CHIP	100K	5%	1/10W		*****
R411	1-216-025-00	RES,CHIP	100	5%	1/10W		
R412	1-216-025-00	RES,CHIP	100	5%	1/10W	*	A-3313-770-A
R413	1-216-025-00	RES,CHIP	100	5%	1/10W		KEY BOARD, COMPLETE
R414	1-216-037-00	METAL CHIP	330	5%	1/10W		*****
R431	1-249-437-11	CARBON	47K	5%	1/4W		< CAPACITOR >
R432	1-247-807-11	CARBON	100	5%	1/4W	C701	1-163-037-11
R433	1-247-807-11	CARBON	100	5%	1/4W	C702	1-164-004-11
R434	1-247-807-11	CARBON	100	5%	1/4W	C703	1-163-110-00
R441	1-216-089-00	RES,CHIP	47K	5%	1/10W	C704	1-164-004-11
R442	1-216-097-00	RES,CHIP	100K	5%	1/10W	C705	1-164-004-11
R444	1-249-437-11	CARBON	47K	5%	1/4W		
R445	1-216-089-00	RES,CHIP	47K	5%	1/10W		< CONNECTOR >
R446	1-216-105-00	RES,CHIP	220K	5%	1/10W	CN701	1-770-983-11
							SOCKET, CONNECTOR 8P

KEY

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
CN702	1-784-909-11	CONNECTOR, BOARD TO BOARD 16P				< TRANSISTOR >	
		< DIODE >					
D701	8-719-977-03	DIODE DTZ5.6B		Q701	8-729-230-49	TRANSISTOR 2SC2712-YG	
D706	8-719-404-49	DIODE MA111		Q702	8-729-904-48	TRANSISTOR DTB113EK	
D713	8-719-975-06	LED CL-70G-CD (▲ (CD))		Q703	8-729-904-48	TRANSISTOR DTB113EK	
D714	8-719-975-06	LED CL-70G-CD (CD/MD)		Q704	8-729-904-48	TRANSISTOR DTB113EK	
D715	8-719-975-06	LED CL-70G-CD (TAPE ◀▶)		Q705	8-729-904-48	TRANSISTOR DTB113EK	
		< RESISTOR >					
D716	8-719-975-06	LED CL-70G-CD (TUNER)		R701	1-216-041-00	METAL CHIP 470	5% 1/10W
D730	8-719-975-06	LED CL-70G-CD (TAPE WINDOW)		R702	1-216-075-00	METAL CHIP 12K	5% 1/10W
D731	8-719-975-06	LED CL-70G-CD (CD WINDOW)		R705	1-208-826-11	RES,CHIP 68K	2% 1/10W
D732	8-719-059-80	LED CL-170TY-CD-T (DIGITAL)		R706	1-208-518-61	RES,CHIP 22K	2% 1/10W
D733	8-719-059-80	LED CL-170TY-CD-T (D-BASS)		R707	1-208-462-61	RES,CHIP 10K	2% 1/10W
D734	8-719-059-80	LED CL-170TY-CD-T (TAPE IN)		R708	1-208-453-61	RES,CHIP 4.7K	2% 1/10W
D735	8-719-059-80	LED CL-170TY-CD-T (CD IN)		R715	1-216-045-00	METAL CHIP 680	5% 1/10W
D736	8-719-052-72	LED CL-220HR-C (→)		R716	1-216-045-00	METAL CHIP 680	5% 1/10W
D737	8-719-052-72	LED CL-220HR-C (P MODE)		R717	1-216-045-00	METAL CHIP 680	5% 1/10W
D738	8-719-052-72	LED CL-220HR-C (SET UP)		R718	1-216-045-00	METAL CHIP 680	5% 1/10W
D739	8-719-052-72	LED CL-220HR-C (←)		R719	1-216-045-00	METAL CHIP 680	5% 1/10W
D740	8-719-052-72	LED CL-220HR-C (ENTER)		R720	1-216-045-00	METAL CHIP 680	5% 1/10W
D741	8-719-052-72	LED CL-220HR-C (SHUF)		R721	1-216-045-00	METAL CHIP 680	5% 1/10W
D742	8-719-052-72	LED CL-220HR-C (REP)		R722	1-216-045-00	METAL CHIP 680	5% 1/10W
		< FLUORESCENT INDICATOR >		R723	1-216-045-00	METAL CHIP 680	5% 1/10W
FL701	1-517-779-11	INDICATOR TUBE, FLUORESCENT		R724	1-216-045-00	METAL CHIP 680	5% 1/10W
		< IC >		R725	1-216-045-00	METAL CHIP 680	5% 1/10W
IC701	8-759-528-30	IC LC75750EHS		R726	1-216-045-00	METAL CHIP 680	5% 1/10W
IC702	8-759-267-27	IC BU2092F		R727	1-216-045-00	METAL CHIP 680	5% 1/10W
		< SWITCH >		R728	1-216-045-00	METAL CHIP 680	5% 1/10W
LSW701	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (OFF)		R730	1-216-025-00	RES,CHIP 100	5% 1/10W
LSW702	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (▲ (TAPE))		R731	1-216-025-00	RES,CHIP 100	5% 1/10W
LSW703	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (10)		R732	1-216-192-00	METAL CHIP 560	5% 1/8W
LSW704	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (9)		R733	1-216-192-00	METAL CHIP 560	5% 1/8W
LSW705	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (8)		R734	1-216-192-00	METAL CHIP 560	5% 1/8W
LSW706	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (7)		R735	1-216-192-00	METAL CHIP 560	5% 1/8W
LSW707	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (6)		R736	1-216-192-00	METAL CHIP 560	5% 1/8W
LSW708	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (5)		R737	1-216-192-00	METAL CHIP 560	5% 1/8W
LSW709	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (4)		R738	1-216-192-00	METAL CHIP 560	5% 1/8W
LSW710	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (3)		R739	1-216-192-00	METAL CHIP 560	5% 1/8W
LSW711	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (2)		R740	1-216-647-11	METAL CHIP 680	0.5% 1/10W
LSW712	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (1)		R741	1-216-647-11	METAL CHIP 680	0.5% 1/10W
LSW717	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (AF/TA)		R742	1-216-647-11	METAL CHIP 680	0.5% 1/10W
LSW718	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (SHIFT)		R743	1-208-437-61	RES,CHIP 1K	2% 1/10W
LSW719	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (+ ▶▶▶▶ (SEEK/AMS))		R744	1-208-441-61	RES,CHIP 1.5K	2% 1/10W
LSW720	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (- ◀◀◀◀ (SEEK/AMS))		R745	1-208-441-61	RES,CHIP 1.5K	2% 1/10W
LSW721	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (PTY/FILE)		R746	1-216-659-11	METAL CHIP 2.2K	0.5% 1/10W
LSW722	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (SOUND)		R747	1-208-449-61	RES,CHIP 3.3K	2% 1/10W
LSW723	1-762-618-11	SWITCH, KEY BOARD (WITH LED) (DSPL)		R748	1-208-453-61	RES,CHIP 4.7K	2% 1/10W
				R749	1-216-671-11	METAL CHIP 6.8K	0.5% 1/10W
				R750	1-208-462-61	RES,CHIP 10K	2% 1/10W
				R751	1-216-647-11	METAL CHIP 680	0.5% 1/10W
				R752	1-216-647-11	METAL CHIP 680	0.5% 1/10W
				R753	1-216-647-11	METAL CHIP 680	0.5% 1/10W
				R754	1-208-437-61	RES,CHIP 1K	2% 1/10W

KEY	LIMIT SW	LOAD SW	MAIN
------------	-----------------	----------------	-------------

Ref. No.	Part No.	Description		Remark	Ref. No.	Part No.	Description		Remark	
R755	1-208-441-61	RES.CHIP	1.5K	2%	1/10W	C12	1-164-232-11	CERAMIC CHIP	0.01uF	50V
R756	1-208-441-61	RES.CHIP	1.5K	2%	1/10W	C13	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V
R757	1-216-659-11	METAL CHIP	2.2K	0.5%	1/10W	C31	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V
R758	1-208-449-61	RES.CHIP	3.3K	2%	1/10W	C41	1-137-370-11	FILM	0.01uF	5% 50V
R759	1-208-453-61	RES.CHIP	4.7K	2%	1/10W	C42	1-137-364-11	FILM	0.001uF	5% 50V
R760	1-216-671-11	METAL CHIP	6.8K	0.5%	1/10W	C43	1-115-330-11	FILM	0.22uF	5% 50V
R774	1-216-025-00	RES.CHIP	100	5%	1/10W	C44	1-115-326-11	FILM	0.1uF	5% 50V
R775	1-216-025-00	RES.CHIP	100	5%	1/10W	C45	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
R776	1-216-031-00	METAL CHIP	180	5%	1/10W	C46	1-137-370-11	FILM	0.01uF	5% 50V
R777	1-216-031-00	METAL CHIP	180	5%	1/10W	C47	1-137-366-11	FILM	0.0022uF	5% 50V
R778	1-216-031-00	METAL CHIP	180	5%	1/10W	C48	1-164-232-11	CERAMIC CHIP	0.01uF	50V
		< SWITCH >				C51	1-163-251-11	CERAMIC CHIP	100PF	5% 50V
SW700	1-762-937-11	SWITCH, ROTARY (D-BASS)				C52	1-164-232-11	CERAMIC CHIP	0.01uF	50V
SW701	1-771-027-11	SWITCH, KEYBOARD (WITH LED) (RESET)				C53	1-163-251-11	CERAMIC CHIP	100PF	5% 50V
SW702	1-475-216-11	ENCODER, ROTARY				C54	1-163-251-11	CERAMIC CHIP	100PF	5% 50V
SW713	1-771-027-11	SWITCH, KEYBOARD (WITH LED) (▲ (CD))				C55	1-124-229-00	ELECT	33uF	20% 10V
SW714	1-771-027-11	SWITCH, KEYBOARD (WITH LED) (CD/MD)				C56	1-164-232-11	CERAMIC CHIP	0.01uF	50V
SW715	1-771-027-11	SWITCH, KEYBOARD (WITH LED) (TAPE ◀▶)				C57	1-163-235-11	CERAMIC CHIP	22PF	5% 50V
SW716	1-771-027-11	SWITCH, KEYBOARD (WITH LED) (TUNER)				C58	1-163-241-11	CERAMIC CHIP	39PF	5% 50V
		*****				C59	1-163-005-11	CERAMIC CHIP	470PF	10% 50V
*	1-659-835-12	LIMIT SW BOARD				C60	1-163-005-11	CERAMIC CHIP	470PF	10% 50V
		*****				C71	1-164-232-11	CERAMIC CHIP	0.01uF	50V
		< SWITCH >				C72	1-124-234-00	ELECT	22uF	20% 16V
SW3	1-572-688-11	SWITCH, PUSH (1 KEY) (LIMIT)				C73	1-124-584-00	ELECT	100uF	20% 10V
		*****				C74	1-164-232-11	CERAMIC CHIP	0.01uF	50V
*	1-659-837-11	LOAD SW BOARD				C81	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
		*****				C83	1-163-237-11	CERAMIC CHIP	27PF	5% 50V
		< SWITCH >				C84	1-163-237-11	CERAMIC CHIP	27PF	5% 50V
SW4	1-572-288-11	SWITCH, PUSH (DOWN)				C85	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
		*****				C89	1-163-135-00	CERAMIC CHIP	560PF	5% 50V
*	A-3313-768-A	MAIN BOARD, COMPLETE (INCLUDING SW BOARD)				C90	1-164-505-11	CERAMIC CHIP	2.2uF	16V
		*****				C91	1-163-263-11	CERAMIC CHIP	330PF	5% 50V
*	3-012-509-01	BRACKET (1F)				C92	1-164-004-11	CERAMIC CHIP	0.1uF	10% 25V
		< BUZZER >				C93	1-163-251-11	CERAMIC CHIP	100PF	5% 50V
BZ591	1-504-920-11	BUZZER				C94	1-163-251-11	CERAMIC CHIP	100PF	5% 50V
		< CAPACITOR >				C96	1-164-161-11	CERAMIC CHIP	0.0022uF	10% 100V
C1	1-163-235-11	CERAMIC CHIP	22PF	5%	50V	C101	1-163-263-11	CERAMIC CHIP	330PF	5% 50V
C2	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C102	1-163-263-11	CERAMIC CHIP	330PF	5% 50V
C3	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C103	1-163-251-11	CERAMIC CHIP	100PF	5% 50V
C4	1-124-584-00	ELECT	100uF	20%	10V	C104	1-163-251-11	CERAMIC CHIP	100PF	5% 50V
C5	1-124-584-00	ELECT	100uF	20%	10V	C105	1-163-251-11	CERAMIC CHIP	100PF	5% 50V
C6	1-124-584-00	ELECT	100uF	20%	10V	C106	1-164-232-11	CERAMIC CHIP	0.01uF	50V
C7	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C107	1-126-159-11	ELECT	0.47uF	20% 50V
C8	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C108	1-126-163-11	ELECT	4.7uF	20% 50V
C11	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C152	1-163-020-00	CERAMIC CHIP	0.0082uF	10% 50V
						C153	1-164-489-11	CERAMIC CHIP	0.22uF	10% 16V
						C154	1-164-489-11	CERAMIC CHIP	0.22uF	10% 16V
						C155	1-163-009-11	CERAMIC CHIP	0.001uF	10% 50V
						C163	1-124-257-00	ELECT	2.2uF	20% 50V
						C171	1-126-301-11	ELECT	1uF	20% 50V
						C172	1-126-157-11	ELECT	10uF	20% 16V
						C173	1-115-419-11	CERAMIC CHIP	3300PF	5% 25V
						C174	1-163-037-11	CERAMIC CHIP	0.022uF	10% 25V

MAIN

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
C175	1-126-157-11	ELECT	10uF	20%	16V	C326	1-124-234-00	ELECT	22uF	20%	16V
C176	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V	C351	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C177	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V	C352	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C178	1-126-157-11	ELECT	10uF	20%	16V	C353	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C181	1-126-157-11	ELECT	10uF	20%	16V	C354	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C182	1-126-157-11	ELECT	10uF	20%	16V	C362	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C183	1-164-506-11	CERAMIC CHIP	4.7uF		16V	C363	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C184	1-164-506-11	CERAMIC CHIP	4.7uF		16V	C365	1-163-220-11	CERAMIC CHIP	3PF	0.25PF	50V
C191	1-163-259-11	CERAMIC CHIP	220PF	5%	50V	C371	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C192	1-163-259-11	CERAMIC CHIP	220PF	5%	50V	C372	1-124-584-00	ELECT	100uF	20%	10V
C201	1-163-263-11	CERAMIC CHIP	330PF	5%	50V	C373	1-124-234-00	ELECT	22uF	20%	16V
C202	1-163-263-11	CERAMIC CHIP	330PF	5%	50V	C374	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C203	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C391	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C204	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C392	1-126-157-11	ELECT	10uF	20%	16V
C205	1-163-251-11	CERAMIC CHIP	100PF	5%	50V	C393	1-111-233-11	ELECT	5600uF	20%	16V
C206	1-164-232-11	CERAMIC CHIP	0.01uF		50V	C394	1-164-506-11	CERAMIC CHIP	4.7uF		16V
C207	1-126-159-11	ELECT	0.47uF	20%	50V	C501	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C208	1-126-163-11	ELECT	4.7uF	20%	50V	C502	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C252	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V	C515	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C253	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C516	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C254	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C517	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C255	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C528	1-163-251-11	CERAMIC CHIP	100PF	5%	50V
C263	1-124-257-00	ELECT	2.2uF	20%	50V	C529	1-163-102-11	CERAMIC CHIP	24PF	5%	50V
C271	1-126-301-11	ELECT	1uF	20%	50V	C530	1-163-235-11	CERAMIC CHIP	22PF	5%	50V
C272	1-126-157-11	ELECT	10uF	20%	16V	C531	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C273	1-115-419-11	CERAMIC CHIP	3300PF	5%	25V	C532	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C274	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C533	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C275	1-126-157-11	ELECT	10uF	20%	16V	C541	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C276	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V	C542	1-124-584-00	ELECT	100uF	20%	10V
C277	1-164-492-11	CERAMIC CHIP	0.15uF	10%	16V	C551	1-126-157-11	ELECT	10uF	20%	16V
C278	1-126-157-11	ELECT	10uF	20%	16V	C552	1-126-157-11	ELECT	10uF	20%	16V
C281	1-126-157-11	ELECT	10uF	20%	16V	C561	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C282	1-126-157-11	ELECT	10uF	20%	16V	C562	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V
C283	1-164-506-11	CERAMIC CHIP	4.7uF		16V	C563	1-125-701-11	DOUBLE LAYERS	0.047F		5.5V
C284	1-164-506-11	CERAMIC CHIP	4.7uF		16V	C564	1-124-584-00	ELECT	100uF	20%	10V
C291	1-163-259-11	CERAMIC CHIP	220PF	5%	50V	C565	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V
C292	1-163-259-11	CERAMIC CHIP	220PF	5%	50V	C581	1-163-005-11	CERAMIC CHIP	470PF	10%	50V
C301	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C901	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C302	1-124-584-00	ELECT	100uF	20%	10V	C902	1-115-326-11	FILM	0.1uF	5%	50V
C303	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C903	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C304	1-124-584-00	ELECT	100uF	20%	10V	C904	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C305	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V	C905	1-163-275-11	CERAMIC CHIP	0.001uF	5%	50V
C306	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C906	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C308	1-107-823-11	CERAMIC CHIP	0.47uF	10%	16V	C907	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C309	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V	C908	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C310	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V	C909	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
C311	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C911	1-126-163-11	ELECT	4.7uF	20%	50V
C313	1-126-163-11	ELECT	4.7uF	20%	50V	C921	1-126-157-11	ELECT	10uF	20%	16V
C321	1-126-941-11	ELECT	470uF	20%	25V	C922	1-126-157-11	ELECT	10uF	20%	16V
C322	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C923	1-126-157-11	ELECT	10uF	20%	16V
C323	1-164-004-11	CERAMIC CHIP	0.1uF	10%	25V	C924	1-124-589-11	ELECT	47uF	20%	16V
C324	1-126-157-11	ELECT	10uF	20%	16V	C925	1-124-234-00	ELECT	22uF	20%	16V
C325	1-164-489-11	CERAMIC CHIP	0.22uF	10%	16V	C926	1-164-005-11	CERAMIC CHIP	0.47uF		25V

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
C931	1-124-242-00	ELECT	33uF 20%	25V	D565	8-719-400-20	DIODE MA152WA
C932	1-124-229-00	ELECT	33uF 20%	10V	D566	8-719-977-12	DIODE DTZ6.8B
C933	1-124-229-00	ELECT	33uF 20%	10V	D567	8-719-977-12	DIODE DTZ6.8B
C934	1-126-157-11	ELECT	10uF 20%	16V	D568	8-719-404-49	DIODE MA111
C935	1-163-037-11	CERAMIC CHIP	0.022uF 10%	25V	D569	8-719-067-56	DIODE MA112-TX
C936	1-126-157-11	ELECT	10uF 20%	16V	D571	8-719-977-12	DIODE DTZ6.8B
C937	1-163-251-11	CERAMIC CHIP	100PF 5%	50V	D581	8-719-977-12	DIODE DTZ6.8B
C938	1-124-234-00	ELECT	22uF 20%	16V	D582	8-719-977-12	DIODE DTZ6.8B
C939	1-126-157-11	ELECT	10uF 20%	16V	D901	8-719-049-38	DIODE 1N5404TU
C941	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	D902	8-719-977-04	DIODE DTZ5.6C
C942	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	D903	8-719-048-98	DIODE RB160L-40TE25
C943	1-126-157-11	ELECT	10uF 20%	16V	D904	8-719-048-98	DIODE RB160L-40TE25
C951	1-163-037-11	CERAMIC CHIP	0.022uF 10%	25V	D905	8-719-057-80	DIODE MA8160-M-TX
C954	1-164-004-11	CERAMIC CHIP	0.1uF 10%	25V	D906	8-719-057-80	DIODE MA8160-M-TX
C971	1-126-163-11	ELECT	4.7uF 20%	50V	D907	8-719-801-78	DIODE 1SS184
< CONNECTOR >							
CN301	1-766-260-11	CONNECTOR, FFC/FPC (ZIF) 7P			D908	8-719-422-76	DIODE MA8075-M
CN302	1-778-965-21	CONNECTOR 12P			D910	8-719-048-98	DIODE RB160L-40TE25
CN303	1-779-806-21	CONNECTOR 8P			D921	8-719-404-49	DIODE MA111
CN304	1-774-698-11	JACK, PIN 2P (BUS AUDIO IN)			D923	8-719-017-91	DIODE MA8160
CN321	1-566-010-11	PIN, CONNECTOR (PC BOARD) 13P			D924	8-719-404-49	DIODE MA111
CN501	1-784-908-11	CONNECTOR, BOARD TO BOARD 16P			D941	8-719-067-56	DIODE MA112-TX
CN900	1-774-701-11	PIN, CONNECTOR 16P			D951	8-719-057-80	DIODE MA8160-M-TX
* CN901	1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P			D952	8-719-057-80	DIODE MA8160-M-TX
CN951	1-580-907-31	PLUG, CONNECTOR (BUS CONTROL IN)			D953	8-719-057-80	DIODE MA8160-M-TX
< DISCHARGE GAP >							
CP1	1-519-504-11	GAP, DISCHARGE			D954	8-719-017-62	DIODE MA8068-L-TX
< DIODE >							
D1	8-719-040-04	DIODE MA721WK-(TX)			D955	8-719-017-91	DIODE MA8160
D71	8-719-977-03	DIODE DTZ5.6B			D956	8-719-048-98	DIODE RB160L-40TE25
D181	8-719-421-36	DIODE MA8036-L			D971	8-719-801-78	DIODE 1SS184
D191	8-719-048-98	DIODE RB160L-40TE25			D972	8-719-105-99	DIODE RD6.2M-B1
D192	8-719-048-98	DIODE RB160L-40TE25			< FUSE >		
D193	8-719-048-98	DIODE RB160L-40TE25			F901	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A
D194	8-719-048-98	DIODE RB160L-40TE25			< IC >		
D281	8-719-421-36	DIODE MA8036-L			IC41	8-759-184-64	IC TC4W66FU
D291	8-719-048-98	DIODE RB160L-40TE25			IC51	8-759-448-85	IC BU2624FV-E2
D292	8-719-048-98	DIODE RB160L-40TE25			IC81	8-759-492-59	IC SAA6588T-118
D293	8-719-048-98	DIODE RB160L-40TE25			IC301	8-752-079-79	IC CXA2510AQ-T4
D294	8-719-048-98	DIODE RB160L-40TE25			IC302	8-759-487-82	IC LC75374E
D301	8-719-404-49	DIODE MA111			IC303	8-759-391-88	IC BU4066BCFV-E2
D321	8-719-200-82	DIODE 11ES2			IC306	8-759-490-48	IC HA13158
D322	8-719-422-97	DIODE MA8091-M			IC321	8-759-823-87	IC LB1638M
D323	8-719-404-49	DIODE MA111			IC501	8-759-537-66	IC MB90574PFV-G-118-BND
D324	8-719-404-49	DIODE MA111			IC561	8-759-461-86	IC RH5VL40AA-T1
D361	8-719-404-49	DIODE MA111			< JACK >		
D561	8-719-404-49	DIODE MA111			J1	1-764-808-14	JACK (ANTENNA)
D562	8-719-404-49	DIODE MA111			J501	1-566-822-41	JACK (REMOTE IN)
D563	8-719-067-56	DIODE MA112-TX					
D564	8-719-067-56	DIODE MA112-TX					

MAIN

Ref. No.	Part No.	Description	Remark
< JUMPER RESISTOR >			
JR3	1-216-295-00	SHORT	0
JR5	1-216-295-00	SHORT	0
< COIL >			
L51	1-410-513-11	INDUCTOR	22uH
L81	1-410-513-11	INDUCTOR	22uH
L500	1-410-509-11	INDUCTOR	10uH
L901	1-411-669-12	COIL, CHOKE	
< EARTH TERMINAL >			
* LUG1	1-537-738-21	TERMINAL, EARTH	
* LUG2	1-537-738-21	TERMINAL, EARTH	
* LUG3	1-537-738-21	TERMINAL, EARTH	
< THERMISTOR (POSITIVE) >			
PS951	1-801-792-21	THERMISTOR, POSITIVE	
< TRANSISTOR >			
Q31	8-729-230-49	TRANSISTOR	2SC2712-YG
Q41	8-729-021-94	FET	2SK1657-T1B
Q61	8-729-421-22	TRANSISTOR	UN2211
Q71	8-729-230-49	TRANSISTOR	2SC2712-YG
Q81	8-729-020-67	TRANSISTOR	XN1A312-TX
Q82	8-729-230-49	TRANSISTOR	2SC2712-YG
Q151	8-729-920-21	TRANSISTOR	DTC314TKH04
Q181	8-729-920-21	TRANSISTOR	DTC314TKH04
Q182	8-729-920-21	TRANSISTOR	DTC314TKH04
Q251	8-729-920-21	TRANSISTOR	DTC314TKH04
Q281	8-729-920-21	TRANSISTOR	DTC314TKH04
Q282	8-729-920-21	TRANSISTOR	DTC314TKH04
Q321	8-729-807-12	TRANSISTOR	2SD1802-S
Q322	8-729-424-08	TRANSISTOR	UN2111
Q323	8-729-421-22	TRANSISTOR	UN2211
Q324	8-729-106-60	TRANSISTOR	2SB1115A
Q325	8-729-421-22	TRANSISTOR	UN2211
Q351	8-729-421-22	TRANSISTOR	UN2211
Q352	8-729-230-49	TRANSISTOR	2SC2712-YG
Q561	8-729-424-08	TRANSISTOR	UN2111
Q562	8-729-424-08	TRANSISTOR	UN2111
Q591	8-729-421-22	TRANSISTOR	UN2211
Q901	8-729-230-49	TRANSISTOR	2SC2712-YG
Q902	8-729-230-49	TRANSISTOR	2SC2712-YG
Q903	8-729-021-93	TRANSISTOR	UPA502T-T1
Q921	8-729-424-08	TRANSISTOR	UN2111
Q922	8-729-421-22	TRANSISTOR	UN2211
Q923	8-729-421-22	TRANSISTOR	UN2211
Q924	8-729-424-12	TRANSISTOR	UN2112
Q951	8-729-216-22	TRANSISTOR	2SA1162-G
Q952	8-729-421-22	TRANSISTOR	UN2211
Q971	8-729-230-49	TRANSISTOR	2SC2712-YG

Ref. No.	Part No.	Description	Remark
< RESISTOR >			
R1	1-216-295-00	SHORT	0
R2	1-216-049-11	RES,CHIP	1K 5% 1/10W
R3	1-216-037-00	METAL CHIP	330 5% 1/10W
R11	1-216-073-00	METAL CHIP	10K 5% 1/10W
R12	1-216-065-00	RES,CHIP	4.7K 5% 1/10W
R13	1-216-073-00	METAL CHIP	10K 5% 1/10W
R14	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
R15	1-216-037-00	METAL CHIP	330 5% 1/10W
R16	1-216-298-00	METAL CHIP	2.2 5% 1/10W
R17	1-216-298-00	METAL CHIP	2.2 5% 1/10W
R18	1-216-073-00	METAL CHIP	10K 5% 1/10W
R31	1-216-119-00	METAL CHIP	820K 5% 1/10W
R32	1-216-073-00	METAL CHIP	10K 5% 1/10W
R41	1-216-073-00	METAL CHIP	10K 5% 1/10W
R42	1-216-065-00	RES,CHIP	4.7K 5% 1/10W
R43	1-216-089-00	RES,CHIP	47K 5% 1/10W
R44	1-216-089-00	RES,CHIP	47K 5% 1/10W
R45	1-216-049-11	RES,CHIP	1K 5% 1/10W
R46	1-216-081-00	METAL CHIP	22K 5% 1/10W
R51	1-216-295-00	SHORT	0
R52	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R53	1-216-073-00	METAL CHIP	10K 5% 1/10W
R71	1-216-057-00	METAL CHIP	2.2K 5% 1/10W
R81	1-216-113-00	METAL CHIP	470K 5% 1/10W
R82	1-216-049-11	RES,CHIP	1K 5% 1/10W
R83	1-216-071-00	METAL CHIP	8.2K 5% 1/10W
R85	1-216-041-00	METAL CHIP	470 5% 1/10W
R86	1-216-035-00	METAL CHIP	270 5% 1/10W
R87	1-216-035-00	METAL CHIP	270 5% 1/10W
R88	1-216-001-00	METAL CHIP	10 5% 1/10W
R89	1-216-097-00	RES,CHIP	100K 5% 1/10W
R90	1-216-097-00	RES,CHIP	100K 5% 1/10W
R91	1-216-001-00	METAL CHIP	10 5% 1/10W
R101	1-208-534-61	RES,CHIP	100K 2% 1/10W
R102	1-208-534-61	RES,CHIP	100K 2% 1/10W
R103	1-216-027-00	METAL CHIP	120 5% 1/10W
R104	1-208-812-11	RES,CHIP	18K 2% 1/10W
R105	1-216-677-11	METAL CHIP	12K 0.5% 1/10W
R106	1-218-764-11	RES,CHIP	330K 2% 1/10W
R107	1-216-077-00	METAL CHIP	15K 5% 1/10W
R150	1-216-295-00	SHORT	0
R151	1-216-069-00	METAL CHIP	6.8K 5% 1/10W
R152	1-216-081-00	METAL CHIP	22K 5% 1/10W
R153	1-216-097-00	RES,CHIP	100K 5% 1/10W
R167	1-216-073-00	METAL CHIP	10K 5% 1/10W
R168	1-216-049-11	RES,CHIP	1K 5% 1/10W
R171	1-208-449-41	RES,CHIP	3.3K 2% 1/10W
R181	1-216-033-00	METAL CHIP	220 5% 1/10W
R184	1-216-033-00	METAL CHIP	220 5% 1/10W
R185	1-216-033-00	METAL CHIP	220 5% 1/10W
R186	1-216-081-00	METAL CHIP	22K 5% 1/10W

Ref. No.	Part No.	Description			Remark	Ref. No.	Part No.	Description			Remark
R187	1-216-081-00	METAL CHIP	22K	5%	1/10W	R509	1-216-025-00	RES,CHIP	100	5%	1/10W
R188	1-216-033-00	METAL CHIP	220	5%	1/10W	R510	1-216-025-00	RES,CHIP	100	5%	1/10W
R191	1-216-085-00	METAL CHIP	33K	5%	1/10W	R511	1-216-025-00	RES,CHIP	100	5%	1/10W
R192	1-216-085-00	METAL CHIP	33K	5%	1/10W	R512	1-216-025-00	RES,CHIP	100	5%	1/10W
R201	1-208-534-61	RES,CHIP	100K	2%	1/10W	R515	1-216-089-00	RES,CHIP	47K	5%	1/10W
R202	1-208-534-61	RES,CHIP	100K	2%	1/10W	R516	1-216-097-00	RES,CHIP	100K	5%	1/10W
R203	1-216-027-00	METAL CHIP	120	5%	1/10W	R517	1-216-097-00	RES,CHIP	100K	5%	1/10W
R204	1-208-812-11	RES,CHIP	18K	2%	1/10W	R518	1-216-687-11	METAL CHIP	33K	0.5%	1/10W
R205	1-216-677-11	METAL CHIP	12K	0.5%	1/10W	R519	1-216-295-00	SHORT	0 (AEP,UK)		
R206	1-218-764-11	RES,CHIP	330K	2%	1/10W	R520	1-216-097-00	RES,CHIP	100K	5%	1/10W (G)
R207	1-216-077-00	METAL CHIP	15K	5%	1/10W						
R250	1-216-295-00	SHORT	0			R521	1-216-295-00	SHORT	0		
R251	1-216-069-00	METAL CHIP	6.8K	5%	1/10W	R525	1-216-105-00	RES,CHIP	220K	5%	1/10W
R252	1-216-081-00	METAL CHIP	22K	5%	1/10W	R526	1-216-295-00	SHORT	0		
R253	1-216-097-00	RES,CHIP	100K	5%	1/10W	R527	1-216-089-00	RES,CHIP	47K	5%	1/10W
						R528	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R267	1-216-073-00	METAL CHIP	10K	5%	1/10W						
R268	1-216-049-11	RES,CHIP	1K	5%	1/10W	R529	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R271	1-208-449-41	RES,CHIP	3.3K	2%	1/10W	R530	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R281	1-216-033-00	METAL CHIP	220	5%	1/10W	R531	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R284	1-216-033-00	METAL CHIP	220	5%	1/10W	R532	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
						R533	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R285	1-216-033-00	METAL CHIP	220	5%	1/10W						
R286	1-216-081-00	METAL CHIP	22K	5%	1/10W	R534	1-216-295-00	SHORT	0		
R287	1-216-081-00	METAL CHIP	22K	5%	1/10W	R535	1-216-295-00	SHORT	0		
R288	1-216-033-00	METAL CHIP	220	5%	1/10W	R536	1-216-295-00	SHORT	0		
R291	1-216-085-00	METAL CHIP	33K	5%	1/10W	R537	1-216-295-00	SHORT	0		
						R538	1-216-097-00	RES,CHIP	100K	5%	1/10W
R292	1-216-085-00	METAL CHIP	33K	5%	1/10W						
R301	1-216-057-00	METAL CHIP	2.2K	5%	1/10W	R539	1-216-049-11	RES,CHIP	1K	5%	1/10W
R302	1-208-449-41	RES,CHIP	3.3K	2%	1/10W	R541	1-216-295-00	SHORT	0		
R303	1-216-113-00	METAL CHIP	470K	5%	1/10W	R542	1-216-097-00	RES,CHIP	100K	5%	1/10W
R304	1-208-812-11	RES,CHIP	18K	2%	1/10W	R543	1-216-105-00	RES,CHIP	220K	5%	1/10W
						R544	1-216-089-00	RES,CHIP	47K	5%	1/10W
R305	1-216-061-00	METAL CHIP	3.3K	5%	1/10W						
R320	1-216-150-00	RES,CHIP	10	5%	1/8W	R545	1-216-097-00	RES,CHIP	100K	5%	1/10W
R321	1-216-049-11	RES,CHIP	1K	5%	1/10W	R546	1-216-097-00	RES,CHIP	100K	5%	1/10W
R322	1-216-150-00	RES,CHIP	10	5%	1/8W	R547	1-216-097-00	RES,CHIP	100K	5%	1/10W
R323	1-216-150-00	RES,CHIP	10	5%	1/8W	R548	1-216-097-00	RES,CHIP	100K	5%	1/10W
						R549	1-216-097-00	RES,CHIP	100K	5%	1/10W
R324	1-216-150-00	RES,CHIP	10	5%	1/8W						
R325	1-216-150-00	RES,CHIP	10	5%	1/8W	R550	1-216-097-00	RES,CHIP	100K	5%	1/10W
R326	1-216-065-00	RES,CHIP	4.7K	5%	1/10W	R551	1-216-295-00	SHORT	0		
R327	1-216-073-00	METAL CHIP	10K	5%	1/10W	R552	1-216-295-00	SHORT	0		
R351	1-216-070-00	METAL CHIP	7.5K	5%	1/10W	R553	1-216-025-00	RES,CHIP	100	5%	1/10W
						R554	1-216-025-00	RES,CHIP	100	5%	1/10W
R352	1-216-077-00	METAL CHIP	15K	5%	1/10W						
R353	1-216-089-00	RES,CHIP	47K	5%	1/10W	R556	1-216-097-00	RES,CHIP	100K	5%	1/10W
R354	1-216-089-00	RES,CHIP	47K	5%	1/10W	R558	1-216-049-11	RES,CHIP	1K	5%	1/10W
R355	1-216-089-00	RES,CHIP	47K	5%	1/10W	R559	1-216-049-11	RES,CHIP	1K	5%	1/10W
R356	1-216-089-00	RES,CHIP	47K	5%	1/10W	R561	1-216-089-00	RES,CHIP	47K	5%	1/10W
						R562	1-216-097-00	RES,CHIP	100K	5%	1/10W
R501	1-216-049-11	RES,CHIP	1K	5%	1/10W						
R502	1-216-049-11	RES,CHIP	1K	5%	1/10W	R563	1-216-097-00	RES,CHIP	100K	5%	1/10W
R503	1-216-049-11	RES,CHIP	1K	5%	1/10W	R564	1-216-675-11	METAL CHIP	10K	0.5%	1/10W
R504	1-216-037-00	METAL CHIP	330	5%	1/10W	R565	1-216-675-11	METAL CHIP	10K	0.5%	1/10W
R505	1-216-049-11	RES,CHIP	1K	5%	1/10W	R566	1-216-025-00	RES,CHIP	100	5%	1/10W
						R567	1-216-025-00	RES,CHIP	100	5%	1/10W
R506	1-216-049-11	RES,CHIP	1K	5%	1/10W						
R507	1-216-049-11	RES,CHIP	1K	5%	1/10W	R581	1-216-025-00	RES,CHIP	100	5%	1/10W
R508	1-216-097-00	RES,CHIP	100K	5%	1/10W	R582	1-216-025-00	RES,CHIP	100	5%	1/10W

MAIN

SERVO

Ref. No.	Part No.	Description	Remark
R583	1-216-675-11	METAL CHIP 10K	0.5% 1/10W
R584	1-216-675-11	METAL CHIP 10K	0.5% 1/10W
R591	1-216-073-00	METAL CHIP 10K	5% 1/10W
R901	1-216-025-00	RES,CHIP 100	5% 1/10W
R902	1-216-206-00	RES,CHIP 2.2K	5% 1/8W
R903	1-216-085-00	METAL CHIP 33K	5% 1/10W
R904	1-216-073-00	METAL CHIP 10K	5% 1/10W
R905	1-216-073-00	METAL CHIP 10K	5% 1/10W
R911	1-216-089-00	RES,CHIP 47K	5% 1/10W
R912	1-216-089-00	RES,CHIP 47K	5% 1/10W
R913	1-216-085-00	METAL CHIP 33K	5% 1/10W
R921	1-216-041-00	METAL CHIP 470	5% 1/10W
R922	1-216-081-00	METAL CHIP 22K	5% 1/10W
R923	1-216-049-11	RES,CHIP 1K	5% 1/10W
R924	1-216-089-00	RES,CHIP 47K	5% 1/10W
R925	1-216-075-00	METAL CHIP 12K	5% 1/10W
R926	1-216-017-00	RES,CHIP 47	5% 1/10W
R927	1-216-025-00	RES,CHIP 100	5% 1/10W
R928	1-216-295-00	SHORT 0	
R941	1-216-295-00	SHORT 0	
R951	1-208-462-41	RES,CHIP 10K	2% 1/10W
R952	1-216-025-00	RES,CHIP 100	5% 1/10W
R953	1-216-025-00	RES,CHIP 100	5% 1/10W
R954	1-216-089-00	RES,CHIP 47K	5% 1/10W
R955	1-216-073-00	METAL CHIP 10K	5% 1/10W
R956	1-216-224-00	RES,CHIP 12K	5% 1/8W
R958	1-216-295-00	SHORT 0	
R959	1-216-150-00	RES,CHIP 10	5% 1/8W
R971	1-216-206-00	RES,CHIP 2.2K	5% 1/8W
R972	1-216-075-00	METAL CHIP 12K	5% 1/10W
R973	1-216-081-00	METAL CHIP 22K	5% 1/10W
R974	1-216-081-00	METAL CHIP 22K	5% 1/10W
		< VARIABLE RESISTOR >	
RV31	1-238-605-31	RES, ADJ, CARBON 470K	
RV101	1-238-600-11	RES, ADJ, CARBON 10K	
RV201	1-238-600-11	RES, ADJ, CARBON 10K	
		< SWITCH >	
S501	1-571-478-11	SWITCH, SLIDE (POWER SELECT)	
		< TUNER >	
TU1	A-3282-029-A	TUNER UNIT (TUX-006/2(E))	
		< VIBRATOR >	
X51	1-567-848-11	VIBRATOR, CRYSTAL (7.2MHz)	
X81	1-760-556-31	VIBRATOR, CRYSTAL (4.332MHz)	
X501	1-567-098-41	VIBRATOR, CRYSTAL (32.768kHz)	
X502	1-767-833-21	VIBRATOR, CERAMIC (3.68MHz)	

Ref. No.	Part No.	Description	Remark
*	A-3309-227-A	SERVO BOARD, COMPLETE	

		< CAPACITOR >	
C1	1-107-823-11	CERAMIC CHIP 0.47uF	10% 16V
C2	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C3	1-135-145-11	TANTALUM CHIP 0.47uF	10% 35V
C4	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C5	1-164-182-11	CERAMIC CHIP 0.0033uF	10% 50V
C6	1-163-011-11	CERAMIC CHIP 0.0015uF	10% 50V
C7	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C9	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C10	1-126-206-11	ELECT CHIP 100uF	20% 6.3V
C11	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C12	1-163-227-11	CERAMIC CHIP 10PF	0.5PF 50V
C13	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C14	1-163-989-11	CERAMIC CHIP 0.033uF	10% 25V
C15	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C16	1-163-989-11	CERAMIC CHIP 0.033uF	10% 25V
C17	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C18	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C19	1-163-037-11	CERAMIC CHIP 0.022uF	10% 25V
C20	1-107-823-11	CERAMIC CHIP 0.47uF	10% 16V
C21	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C22	1-163-251-11	CERAMIC CHIP 100PF	5% 50V
C23	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C24	1-163-259-11	CERAMIC CHIP 220PF	5% 50V
C25	1-107-823-11	CERAMIC CHIP 0.47uF	10% 16V
C26	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C27	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C28	1-163-023-00	CERAMIC CHIP 0.015uF	5% 50V
C29	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C30	1-126-603-11	ELECT CHIP 4.7uF	20% 35V
C31	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C32	1-163-023-00	CERAMIC CHIP 0.015uF	5% 50V
C33	1-124-779-00	ELECT CHIP 10uF	20% 16V
C34	1-109-982-11	CERAMIC CHIP 1uF	10% 10V
C35	1-164-232-11	CERAMIC CHIP 0.01uF	50V
C36	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C37	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C38	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
C39	1-126-204-11	ELECT CHIP 47uF	20% 16V
C40	1-164-004-11	CERAMIC CHIP 0.1uF	10% 25V
		< CONNECTOR >	
CN1	1-764-616-12	HOUSING, CONNECTOR (PC BOARD) 30P	
CN2	1-565-728-11	CONNECTOR, FPC 17P	
CN3	1-770-347-21	CONNECTOR, FPC 6P	
		< IC >	
IC1	8-752-372-94	IC CXD2507AQ	
IC2	8-752-074-34	IC CXA1782BQ	
IC3	8-759-354-16	IC BA6796FP-T1	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
< JUMPER RESISTOR >				< TRANSISTOR >			
JR1	1-216-296-00	SHORT	0	Q1	8-729-904-60	TRANSISTOR DTB113ZK	
JR2	1-216-296-00	SHORT	0	Q2	8-729-904-86	TRANSISTOR 2SB1197K-Q	
JR3	1-216-296-00	SHORT	0	< RESISTOR >			
JR4	1-216-296-00	SHORT	0	R1	1-216-073-00	METAL CHIP	10K 5% 1/10W
JR5	1-216-296-00	SHORT	0	R2	1-216-097-00	RES,CHIP	100K 5% 1/10W
JR6	1-216-296-00	SHORT	0	R3	1-216-121-00	RES,CHIP	1M 5% 1/10W
JR7	1-216-296-00	SHORT	0	R4	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
JR8	1-216-296-00	SHORT	0	R5	1-216-061-00	METAL CHIP	3.3K 5% 1/10W
JR9	1-216-296-00	SHORT	0	R6	1-216-073-00	METAL CHIP	10K 5% 1/10W
JR10	1-216-296-00	SHORT	0	R7	1-216-009-00	METAL CHIP	22 5% 1/10W
JR11	1-216-296-00	SHORT	0	R8	1-216-119-00	METAL CHIP	820K 5% 1/10W
JR12	1-216-296-00	SHORT	0	R9	1-216-119-00	METAL CHIP	820K 5% 1/10W
JR13	1-216-296-00	SHORT	0	R10	1-216-073-00	METAL CHIP	10K 5% 1/10W
JR14	1-216-296-00	SHORT	0	R11	1-216-073-00	METAL CHIP	10K 5% 1/10W
JR15	1-216-296-00	SHORT	0	R14	1-216-085-00	METAL CHIP	33K 5% 1/10W
JR16	1-216-296-00	SHORT	0	R15	1-216-085-00	METAL CHIP	33K 5% 1/10W
JR17	1-216-296-00	SHORT	0	R16	1-216-077-00	METAL CHIP	15K 5% 1/10W
JR18	1-216-296-00	SHORT	0	R17	1-216-081-00	METAL CHIP	22K 5% 1/10W
JR19	1-216-296-00	SHORT	0	R19	1-216-079-00	METAL CHIP	18K 5% 1/10W
JR20	1-216-296-00	SHORT	0	R20	1-216-105-00	RES,CHIP	220K 5% 1/10W
JR21	1-216-296-00	SHORT	0	R21	1-216-105-00	RES,CHIP	220K 5% 1/10W
JR22	1-216-296-00	SHORT	0	R22	1-216-085-00	METAL CHIP	33K 5% 1/10W
JR23	1-216-296-00	SHORT	0	R23	1-216-121-00	RES,CHIP	1M 5% 1/10W
JR24	1-216-296-00	SHORT	0	R24	1-216-073-00	METAL CHIP	10K 5% 1/10W
JR25	1-216-296-00	SHORT	0	R27	1-216-295-00	SHORT	0
JR26	1-216-296-00	SHORT	0	R28	1-216-101-00	METAL CHIP	150K 5% 1/10W
JR27	1-216-296-00	SHORT	0	R29	1-216-097-00	RES,CHIP	100K 5% 1/10W
JR28	1-216-296-00	SHORT	0	R30	1-216-097-00	RES,CHIP	100K 5% 1/10W
JR29	1-216-296-00	SHORT	0	R31	1-216-081-00	METAL CHIP	22K 5% 1/10W
JR30	1-216-296-00	SHORT	0	R32	1-216-109-00	METAL CHIP	330K 5% 1/10W
JR31	1-216-296-00	SHORT	0	R33	1-216-105-00	RES,CHIP	220K 5% 1/10W
JR32	1-216-296-00	SHORT	0	R34	1-216-009-00	METAL CHIP	22 5% 1/10W
JR33	1-216-296-00	SHORT	0	R35	1 216 065 00	RES,CHIP	4.7K 5% 1/10W
JR34	1 216 296 00	SHORT	0	R36	1-216-097-00	RES,CHIP	100K 5% 1/10W
JR35	1-216-296-00	SHORT	0	R37	1-216-117-00	METAL CHIP	680K 5% 1/10W
JR36	1-216-296-00	SHORT	0	R38	1-216-109-00	METAL CHIP	330K 5% 1/10W
JR37	1-216-296-00	SHORT	0	R39	1-216-101-00	METAL CHIP	150K 5% 1/10W
JR38	1-216-296-00	SHORT	0	R40	1-216-114-00	RES,CHIP	510K 5% 1/10W
JR39	1-216-296-00	SHORT	0	R41	1-216-093-00	METAL CHIP	68K 5% 1/10W
JR40	1-216-296-00	SHORT	0	R42	1-216-103-00	METAL CHIP	180K 5% 1/10W
JR41	1-216-296-00	SHORT	0	R43	1-216-097-00	RES,CHIP	100K 5% 1/10W
JR43	1-216-296-00	SHORT	0	R44	1-216-085-00	METAL CHIP	33K 5% 1/10W
JR44	1-216-296-00	SHORT	0	R45	1-216-081-00	METAL CHIP	22K 5% 1/10W
JR45	1-216-296-00	SHORT	0	R46	1-216-097-00	RES,CHIP	100K 5% 1/10W
JR46	1-216-296-00	SHORT	0	R47	1-216-105-00	RES,CHIP	220K 5% 1/10W
< COIL >				R48	1-216-073-00	METAL CHIP	10K 5% 1/10W
L1	1-412-058-11	INDUCTOR CHIP	10uH	R49	1-216-065-00	RES,CHIP	4.7K 5% 1/10W
L2	1-412-058-11	INDUCTOR CHIP	10uH	R50	1-216-065-00	RES,CHIP	4.7K 5% 1/10W
L3	1-412-058-11	INDUCTOR CHIP	10uH	R51	1-216-295-00	SHORT	0

WX-C570R

SERVO **SUB** **SW**

Ref. No.	Part No.	Description	Remark
		< VARIABLE RESISTOR >	
RV1	1-238-091-11	RES, ADJ, CERMET 22K	
RV4	1-238-091-11	RES, ADJ, CERMET 22K	

*	1-659-834-11	SUB BOARD *****	
		< CONNECTOR >	
CN1	1-770-347-21	CONNECTOR, FPC 6P	

		SW BOARD (SUPPLIED WITH MAIN BOARD, COMPLETE)	


		< DIODE >	
D1000	8-719-404-49	DIODE MA111	
		< TRANSISTOR >	
Q1001	8-729-424-18	TRANSISTOR UN2113	
		< RESISTOR >	
R1000	1-216-295-00	SHORT 0	

		MISCELLANEOUS *****	
2	1-776-527-71	CORD (WITH CONNECTOR) (ISO) (POWER)	
257	1-659-880-11	MOTOR FLEXIBLE BOARD	
△ 260	8-820-010-06	PICK-UP, OPTICAL KSS-521A/K1RP	
262	1-659-881-11	PICK-UP FLEXIBLE BOARD	
F901	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
HP901	1-500-157-21	HEAD, MAGNETIC (PLAYBACK)	
M901	X-3371-664-2	MOTOR ASSY (SPINDLE)	
M902	A-3291-674-A	MOTOR ASSY, SLED	
M903	A-3291-676-A	MOTOR SUB ASSY, LOADING	
M904	A-3291-665-A	MOTOR ASSY, MAIN (CAPSTAN/REEL)	

		ACCESSORIES & PACKING MATERIALS *****	
	3-862-805-11	MANUAL, INSTRUCTION (ENGLISH,SPANISH, PORTUGUESE,SWEDISH)	
	3-862-806-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH,PORTUGUESE,SWEDISH)	
	X-3374-605-2	COVER ASSY, FRONT	

Ref. No.	Part No.	Description	Remark
		***** HARDWARE LIST *****	
#1	7-685-792-09	SCREW +PTT 2.6X6 (S)	
#2	7-685-794-09	SCREW +PTT 2.6X10 (S)	
#3	7-685-105-19	TPG +P 2X8, TYPE 2, NON-SLIT	
#4	7-685-796-09	SCREW +PTT 2.6X14 (S)	
#5	7-627-850-28	SCREW, PRECISION +P 1.4X3	
#6	7-627-000-00	SCREW, PRECISION +P 1.7X2.2 TYPE 3	
#7	7-628-253-00	SCREW +PS 2X4	
#8	7-627-553-37	SCREW, PRECISION +P 2X3 TYPE 3	
#9	7-627-553-17	SCREW, PRECISION +P 2X2 TYPE 3	
#10	7-624-104-04	STOP RING 2.0, TYPE -E	

		PARTS FOR INSTALLATION AND CONNECTIONS *****	
351	X-3375-549-1	SCREW ASSY (6)	
352	3-936-590-01	FRAME (N), ORNAMENT	
353	1-776-527-71	CORD (WITH CONNECTOR) (ISO) (POWER)	
354	1-465-459-21	ADAPTOR, ANTENNA	

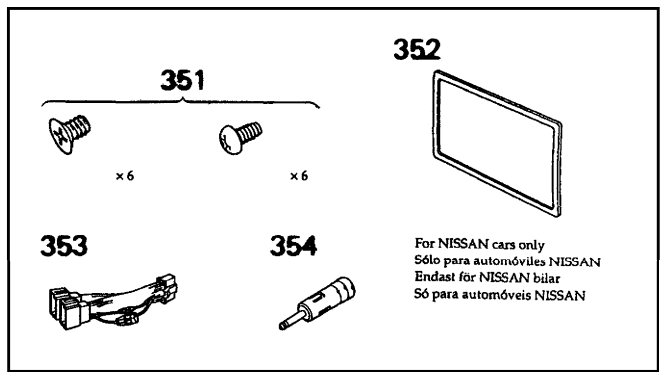

The components identified by mark △ or dotted line with mark. △ are critical for safety. Replace only with part number specified.