


Service Manual

Simplified



MASH*
multi-stage noise shaping

Compact Disc Changer
SL-PD888

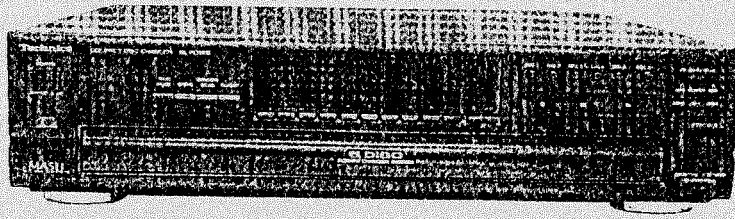

Colour
(K) Black Type

Area		
Suffix for Model No.	Area	Colour
(P)	U. S. A.	(K)
(PC)	Canada	

* MASH is a trademark of NTT.

Please file and use this Service Manual together with the Service Manual for Model No. SL-PD688 (P,PC) Order No. MD97 with SL-PD687 (P, PC) Order No. AD9501003C1 and AD9701002S0.

Note: This Simplified Service Manual is provided to indicate the main difference between the original Model No. SL-PD688 (P, PC) and the subsequent Model No. SL-PD888 (P, PC).

⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Technics®

© 1997 Matsushita Electronic (S) Pte. Ltd.
All rights reserved. Unauthorized copying and distribution is a violation of law.

■ Changes In Replacement Parts List

Notes: * Mentioned in this parts list is only those different from Model No. SL-PD688 (P,PC).
 * [M] Indicates in the Remarks columns indicates parts supplied by MESA.

Ref. No.	Description	Change of Parts Number		Remarks
		SL-PD688P/PC-K	→ SL-PD888P/PC-K	
CABINET AND CHASSIS				
26	REAR PANEL	RGR0246A-P [M]	RGR0246A-T [M]	Changed
26	REAR PANEL	RGR0246A-Q [M]	RGR0246A-U [M]	Changed
37	FRONT PANEL ASSY	RFKGLPD688PK [M]	RFKGLPD888PK [M]	Changed
37-1	FRONT ORNAMENT PLATE	RGK0611-K [M]	RGK0611C-K [M]	Changed
SWITCHES				
S605	SW, ID SCAN	----	EVQ21405R [M]	Added
S606	SW, EDIT GUIDE	----	EVQ21405R [M]	Added
ACCESSORIES				
A1	O/I BOOK ASSY (PC)	RFKSPD688PCK [M]	RFKSPD888PCK [M]	Changed
A1	O/I BOOK ASSY (P)	RQT4360-P [M]	RFKSPD888PK [M]	Changed
A2	REMOTE CONTROL	----	EUR643806 [M]	Added
A2-1	R/C BATTERY COVER	----	UR64EC1638 [M]	Added
PACKING MATERIALS				
P1	PACKING CASE	RPG3846 [M]	RPG3848 [M]	Changed

■ Change In Replacement Parts List

Notes: * Mentioned in this parts list is the complete replacement parts list for Model No. SL-PD688 (P,PC) with reference to model no. SL-PD687 (P,PC).
 Important safety notice:
 Components identified by Δ mark have special characteristics important for safety.
 Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low noise (resistors), etc are used.
 When replacing any of these components, be sure to use only manufacturer's specified parts shown in the parts list.
 * [M] Indicates in the Remarks columns indicates parts supplied by MESA.

Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
CABINET AND CHASSIS				CABINET AND CHASSIS				INTEGRATED CIRCUITS			
1	RKM0339-K1	TOP CABINET	[M]	35	RMR0624-W	CLAMPER	[M]	IC11	LM2840T5M	IC, REGULATOR	[M]
2	SNE2129-3	SCREW	[M]	36	RMN0185	FL HOLDER	[M]	IC401	UPD78044A179	IC, MICROCOMPUTER	[M]
3	XTBS3+8JFZ1	SCREW	[M]	37-1	RGK0611-K	FRONTORNAMENTPLATE	[M]	IC501	BA8247N	IC, MOTOR DRIVER	[M]
4	RDG0267	TRAY REDUCTION GEAR	[M]	38	RGU1016-K	MAIN BUTTON	[M]	IC601	RCDHC-278N	IC, REMOCON SENSOR	[M]
5	RDG0268	LOCK GEAR	[M]	39	RGU1018-K	10-KEY BUTTON	[M]	IC701	AN88375BE1	IC, HEAD AMP	[M]
6	RDG0269-3	OPEN/CLOSE GEAR	[M]	40	RGU1015-K	POWER BUTTON	[M]	IC702	MN862741RPA	IC, DIGITAL LSI	[M]
7	RDY0031	BELT	[M]	41	RGU1017-K	SUB-BUTTON	[M]	IC703	AN780NSBE2	IC, MOTOR DRIVE	[M]
8	RFKPLPD667PA	TRAY MOTOR ASSY	[M]	42	RMG0200	SHUTTER RUBBER	[M]	IC801	BA4558FDXE2	IC, OP AMP	[M]
9	RMN0254	LED HOLDER	[M]	43	XTBS26+8J	SCREW	[M]				
10	RMN0255	SENSOR HOLDER	[M]	44	XTB3+10JFZ	SCREW	[M]				
11	RMN0263	MOTOR HOLDER	[M]	45	XTB3+20J	SCREW	[M]				
12	REZ0648	14P FFC	[M]	46	XTB3+8JFZ	SCREW	[M]				
13	RFKPLPD1000E	TRAY ASSY	[M]	101	ROG0270	SPEEDREDUCTIONGEAR	[M]	Q11	BA1A4PTA	TRANSISTOR	[M]
13-1	RMF0182	TRAY FELT	[M]	102	ROG0271	DRIVE GEAR A	[M]	Q12	BN1A4PTA	TRANSISTOR	[M]
13-2	RMG0200	SHUTTER RUBBER	[M]	103	ROG0272	DRIVE GEAR B	[M]	Q15	2SD2137PQTA	TRANSISTOR	[M]
13-3	RMR0546-W	ROLLER	[M]	104	RDX0025	DRIVE CAM	[M]	Q31	2SB1238Q	TRANSISTOR	[M]
14	RGTO019	ROTARY TRAY	[M]	105	RDP0050	PULLEY GEAR	[M]	Q32	2SD1302STA	TRANSISTOR	[M]
15	RHYW81001-1	WASHER	[M]	106	RFKPLPD667PB	LOADING MOTOR ASSY	[M]	Q33	2SD1302STA	TRANSISTOR	[M]
16	RMBO365	TRAY SPRING	[M]	107	RHD26019	SCREW	[M]	Q41	2SD1862QTV2	TRANSISTOR	[M]
17	RME0152-3	LOCK GEAR SPRING	[M]	108	RMG0268-K	BELT	[M]	Q401	2SC2785FETA	TRANSISTOR	[M]
18	RMS0123-1	RIVET	[M]	109	RML0334	CHANGE LEVER	[M]	Q461	BA1A4ZTA	TRANSISTOR	[M]
19	XTB3+10G	SCREW	[M]	110	RMM0117	SLIDE PLATE 1	[M]	Q482	BA1A4ZTA	TRANSISTOR	[M]
20	XTWS3+10T	SCREW	[M]	111	RMM0118	SLIDE PLATE 2	[M]	Q501	PT381	TRANSISTOR	[M]
21	XWE3D13	WASHER	[M]	112	RMR0746-W	STRENGTHENING PLATE	[M]	Q701	2SA1037AKSTX	TRANSISTOR	[M]
23	REE0636	23P FFC	[M]	113	RRKPLPD667PB	MECHANISM BASE ASSY	[M]	Q702	DTC114YKA146	TRANSISTOR	[M]
24	REE0636-1	FFC WIRE	[M]	114	RXQ0346-1	SLIDER ASSY	[M]	Q801	2SD1302STA	TRANSISTOR	[M]
25	REE0637-1	FFC WIRE	[M]	115	XTB3+10JFZ	SCREW	[M]	Q802	2SD1302STA	TRANSISTOR	[M]
26	RGR0246A-P	REAR PANEL	[M/P]	116	RAE0150Z	TRAVERSE DECK	[M]	Q851	BN1F4MTA	TRANSISTOR	[M]
26	RGR0246A-Q	REAR PANEL	[M/PC]	116-1	SHGD113-1	FLOATING CUSHION	[M]	Q852	BA1F4MTA	TRANSISTOR	[M]
27	RFKJLPD688PK	BOTTOM CHASSIS ASSY	[M]	116-2	SNS038	TRYMOTORASSYSREW	[M]				
28	RMR0748-W	CABLE HOLDER	[M]	117	RME0109	FLOATING SPRING B	[M]				
29	RMR0742-K	BASE GUIDE (L)	[M]	118	RME0142	FLOATING SPRING A	[M]				
30	RMR0743-K	BASE GUIDE (R)	[M]	119	RMR0698-K	TRY CHASSIS	[M]	D11	RL1N4003N02	DIODE	[M]
31	RMR0765-W1	TRANSFORMER BASE	[M]	120	RMS0123-1	FIXED PIN B	[M]	D12	RL1N4003N02	DIODE	[M]
32	RHM245ZA	MAGNET	[M]	121	RMS0350	FIXED PIN A	[M]	D13	RL1N4003N02	DIODE	[M]
33	RMR0334	FIXED PLATE	[M]	123	RMX0094	TRAY GUIDE	[M]	D14	RL1N4003N02	DIODE	[M]
34	RMR0744-W	CLAMP PLATE	[M]	124	XTN2+6G	PCB SCREW	[M]	D15	MTZJ9P1CTA	DIODE	[M]
								D16	RL1N4003N02	DIODE	[M]

Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks	Ref No.	Part No.	Part Name & Description	Remarks
D17	1SS254TA	DIODE	[M]	S618	EVQ21405R	SW, F.SEARCH	[M]	X701	RSX216M9M01T	CERAMIC OSC	[M]
D21	RL1N4003N02	DIODE	[M]	S619	EVQ21405R	SW, F.SKIP	[M]				
D22	RL1N4003N02	DIODE	[M]	S620	EVQ21405R	SW, F.SKIP	[M]			DISPLAY TUBE	
D23	MTZJ9R1CTA	DIODE	[M]	S621	EVQ21405R	SW, OPENCLOSE	[M]				
D24	MTZJ9R1CTA	DIODE	[M]	S631	EVQ21405R	SW, POWER	[M]	FL601	RSL0170-F	FL DISPLAY	[M]
D31	RL1N4003N02	DIODE	[M]	S651	EVQ21405R	SW, NUMERIC 1	[M]				
D32	RL1N4003N02	DIODE	[M]	S652	EVQ21405R	SW, NUMERIC 1	[M]			JACKS	
D33	MA4270MTA	DIODE	[M]	S653	EVQ21405R	SW, NUMERIC 3	[M]				
D34	MTZJ9R1CTA	DIODE	[M]	S654	EVQ21405R	SW, NUMERIC 4	[M]	JK11	SJSD16-1	JK, AC INLET	[M] △
D41	MTZJ9R2CTA	DIODE	[M]	S655	EVQ21405R	SW, NUMERIC 5	[M]	JKB01	RJH3201N	JK, RCA	[M]
D42	1SS254TA	DIODE	[M]	S656	EVQ21405R	SW, NUMERIC 6	[M]				
D43	1SS254TA	DIODE	[M]	S657	EVQ21405R	SW, NUMERIC 7	[M]			FLAT CABLES	
D51	1SS254TA	DIODE	[M]	S658	EVQ21405R	SW, NUMERIC 8	[M]				
D52	1SS254TA	DIODE	[M]	S659	EVQ21405R	SW, NUMERIC 9	[M]	FC502	RWJ4406087KK	6 PIN FLAT CABLE	[M]
D53	MTZJ9R1BTA	DIODE	[M]	S660	EVQ21405R	SW, NUMERIC 10	[M]	FC503	RWJ4403102KK	3 PIN FLAT CABLE	[M]
D54	1SS254TA	DIODE	[M]	S661	EVQ21405R	SW, NUMERIC >10	[M]				
D401	1SS254TA	DIODE	[M]	S682	EVQ21405R	SW, NUMERIC 0	[M]			PACKING MATERIALS	
D402	1SS254TA	DIODE	[M]	S701	RSH1A043-J	SW, REST	[M]				
D403	1SS254TA	DIODE	[M]					P1	RPG3846	PACKING CASE	[M]
D404	1SS254TA	DIODE	[M]					P2	RPN0760	POLYFOAM	[M]
D405	1SS254TA	DIODE	[M]					P4	RPF0139	BAG	[M]
D406	1SS254TA	DIODE	[M]	CN11	RJS1A1101T1	TAPING CONNECTOR	[M]	P5	RPFX0005	MIRAMAT BAG	[M]
D461	MTZJ9R8CTA	DIODE	[M]	CN14	RJS1A1101T1	TAPING CONNECTOR	[M]				
D482	MTZJ9R8BTA	DIODE	[M]	CN16	RJS1A1101T1	TAPING CONNECTOR	[M]			ACCESSORIES	
D501	GL380	DIODE	[M]	CN17	RJS1A1101T1	TAPING CONNECTOR	[M]	A1	RKSPD688PCK	ON BOOK ASSY	[M]PC
D502	RSQGP1533V	DIODE	[M]	CN18	RJS1A1101T1	TAPING CONNECTOR	[M]	A1	RQT4360-P	ON BOOK	[M]P
D551	SG-206S	DIODE	[M]	CN19	RJS1A1101T1	TAPING CONNECTOR	[M]	A4	SJA172	AC CORD	[M] △
D801	1SS254TA	DIODE	[M]	CN20	RJS1A1101T1	TAPING CONNECTOR	[M]	A5	RJL2P004B08	STEREOCONNECTORCAB	[M]
D802	1SS254TA	DIODE	[M]	CN21	RJS1A1101T1	TAPING CONNECTOR	[M]				
				CN301	RJS1A9423	FFC CONNECTOR	[M]				
				CN401	RJS1A9423	FFC CONNECTOR	[M]				
				CN402	RJS1A9423	FFC CONNECTOR	[M]				
				CN403	RJS1A6814-J	FF CONNECTOR	[M]				
S551	RSH1A005	SW, OPENCLOSE	[M]	CN404	RJS1A6806T1	TAPING CONNECTOR	[M]				
S601	EVQ21405R	SW, TIME MODE	[M]	CN501	RJS1A6714-Q	14 PIN CONNECTOR	[M]				
S602	EVQ21405R	SW, SPIRAL	[M]	CN551	RJS2A1506	6 PIN CONNECTOR	[M]				
S603	EVQ21405R	SW, RANDOM MODE	[M]	CN801	RJS1A6223-1	23P CONNECTOR	[M]				
S604	EVQ21405R	SW, REPEAT	[M]	CN802	RJS1A6223-1	23P CONNECTOR	[M]				
S607	EVQ21405R	SW, STOP	[M]	CN701	RJS2A6016	16 PIN FFC CONNECTOR	[M]				
S608	EVQ21405R	SW, PAUSE	[M]	CN702	RJS1A6723-1Q	23 PIN FFC CONNECTOR	[M]				
S609	EVQ21405R	SW, PLAY	[M]								
S610	EVQ21405R	SW, DISC 1	[M]								
S611	EVQ21405R	SW, DISC 2	[M]							POWER TRANSFORMER	
S612	EVQ21405R	SW, DISC 3	[M]								
S613	EVQ21405R	SW, DISC 4	[M]	PT11	RTP1K4C019-X	POWER TRANSFORMER	[M] △				
S614	EVQ21405R	SW, DISC 5	[M]								
S615	EVQ21405R	SW, DISC SKIP	[M]							OSCILLATORS	
S616	EVQ21405R	SW, PROGRAM MODE	[M]								
S617	EVQ21405R	SW, F.SEARCH	[M]	X401	RSXV4M23M01T	CRYSTAL RESONATOR	[M]				

Resistors & Capacitors

Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks	Ref No.	Part No.	Values & Remarks
	RESISTORS		R718	ERJ6GEYJ101A	100 1/10W[M]	C17	ECEAJKA101B	100 6.3V [M]	C733	ECUZ1E104MBN	0.1 25V [M]
			R721	ERJ6GEYJ101A	100 1/10W[M]	C20	ECBT1E103ZF5	0.01 25V [M]	C734	ECEAJKA221I	220 10V [M]
R11	ERDS2TJ151T	150 1/4W [M]	R722	ERJ6GEYJ563A	56K 1/10W[M]	C21	RCA1EM1018T	100P 25V [M]	C735	ECUZ1E104ZFN	0.1 25V [M]
R12	ERDS2TJ151T	150 1/4W [M]	R723	ERJ6GEYJ182A	1.8K 1/10W[M]	C22	RCA1EM1018T	100P 25V [M]	C738	ECUZ1E104ZFN	0.1 25V [M]
R21	ERDS2TJ102T	1K 1/4W [M]	R724	ERJ6GEYJ333A	33K 1/10W[M]	C30	ECBT1E103ZF5	0.01 25V [M]	C737	ECUZ1E104ZFN	0.1 25V [M]
R22	ERDS2TJ102T	1K 1/4W [M]	R725	ERJ6GEYJ122A	1.2K 1/10W[M]	C31	ECA1HM470B	47 50V [M]	C738	ECUZ1E104MBN	0.1 25V [M]
R31	ERDS2TJ123T	12K 1/4W [M]	R726	ERJ6GEYJ473A	47K 1/10W[M]	C32	ECA1HM470B	47 50V [M]	C739	ECUZ1H102KBN	1000P 50V [M]
R32	ERDS2TJ103T	10K 1/4W [M]	R727	ERJ6GEYJ682A	6.8K 1/10W[M]	C33	ECBT1H102KB5	1000P 50V [M]	C742	ECUZ1E104ZFN	0.1 25V [M]
R33	ERDS2TJ103T	10K 1/4W [M]	R728	ERJ6GEYJ682A	6.8K 1/10W[M]	C41	ECBT1H102KB5	1000P 50V [M]	C743	ECUZ1E104ZFN	0.1 25V [M]
R41	ERDS2TJ471T	470 1/4W [M]	R729	ERJ6GEYJ562A	5.6K 1/10W[M]	C42	ECEAJKA101B	100 6.3V [M]	C744	ECUZ1E123KBN	0.012 25V [M]
R42	ERDS2TJ8R2T	8.2 1/4W [M]	R731	ERJ6GEYJ822A	8.2K 1/10W[M]	C301	ECBT1C103N55	0.01 16V [M]	C745	ECUZ1H102KBN	1000P 50V [M]
R51	ERDS2TJ122T	1.2K 1/4W [M]	R735	ERJ6GEYJ101A	100 1/10W[M]	C401	ECBT1C103N55	0.01 16V [M]	C747	ECUV1H221KBN	220P 50V [M]
R52	ERDS2TJ122T	1.2K 1/4W [M]	R736	ERJ6GEYJ101A	100 1/10W[M]	C402	ECAJMJ471B	470 6.3V [M]	C749	ECUZ1H222KBN	2200P 50V [M]
R401	ERDS2TJ472T	4.7K 1/4W [M]	R738	ERJ6GEYJ223A	22K 1/10W[M]	C403	ECEA1HKA010B	1 50V [M]	C750	ECUZ1E104MBN	0.1 25V [M]
R402	ERDS2TJ472T	4.7K 1/4W [M]	R744	ERJ6GEYJ104A	100K 1/10W[M]	C404	ECEA1EKA4R7B	4.7 25V [M]	C751	ECUZ1E104MBN	0.1 25V [M]
R403	ERDS2TJ472T	4.7K 1/4W [M]	R745	ERJ6GEYJ155A	1.5M 1/10W[M]	C405	ECBT1C103N55	0.01 16V [M]	C753	ECUZ1H471KBN	470P 50V [M]
R404	ERDS2TJ472T	4.7K 1/4W [M]	R748	ERJ6GEYJ182A	1.8K 1/10W[M]	C406	ECEA1HKA010B	1 50V [M]	C755	ECUZ1H102KBN	1000P 50V [M]
R405	ERDS2TJ472T	4.7K 1/4W [M]	R749	ERJ6GEYJ682A	6.8K 1/10W[M]	C407	ECBT1H391KBS	390P 50V [M]	C758	ECUZ1H102KBN	1000P 50V [M]
R406	ERDS2TJ472T	4.7K 1/4W [M]	R752	ERJ6GEYJ220A	22 1/8W [M]	C421	ECBT1C103N55	0.01 16V [M]	C757	ECUZ1H102KBN	1000P 50V [M]
R407	ERDS2TJ472T	4.7K 1/4W [M]	R753	ERJ6GEYJ102A	1K 1/10W[M]	C481	ECEA1AU470B	47 10V [M]	C762	ECUZ1H471KBN	470P 50V [M]
R409	ERDS2TJ102T	1K 1/4W [M]	R803	ERDS2TJ224T	220K 1/4W [M]	C482	ECBT1C103N55	0.01 16V [M]	C801	ECEA1KA470B	47 10V [M]
R410	ERDS2TJ103T	10K 1/4W [M]	R804	ERDS2TJ224T	220K 1/4W [M]	C801	ECFR1E104ZF5	0.1 25V [M]	C802	ECEA1KA470B	47 10V [M]
R411	ERDS2TJ472T	4.7K 1/4W [M]	R805	ERDS2TJ822T	8.2K 1/4W [M]	C701	ECEAJKA330I	33 6.3V [M]	C803	ECEA1CKA100B	10 16V [M]
R412	ERDS2TJ223T	22K 1/4W [M]	R806	ERDS2TJ822T	8.2K 1/4W [M]	C702	ECUZ1E104MBN	0.1 25V [M]	C804	ECEA1CKA100B	10 16V [M]
R413	ERDS2TJ103T	10K 1/4W [M]	R807	ERDS2TJ123T	12K 1/4W [M]	C703	ECEAJKA101I	100 6.3V [M]	C805	ECCR1H391J5	390P 50V [M]
R414	ERDS2TJ471T	470 1/4W [M]	R808	ERDS2TJ123T	12K 1/4W [M]	C704	ECUZ1E104MBN	0.1 25V [M]	C808	ECCR1H391J5	390P 50V [M]
R415	ERDS2TJ103T	10K 1/4W [M]	R809	ERDS2TJ333T	33K 1/4W [M]	C706	ECUZ1H27KBN	2700P 50V [M]	C807	ECCR1H391J5	390P 50V [M]
R416	ERDS2TJ102T	1K 1/4W [M]	R810	ERDS2TJ333T	33K 1/4W [M]	C707	ECUZ1E27KBN	0.027 25V [M]	C808	ECCR1H391J5	390P 50V [M]
R420	ERDS2TJ331T	330 1/4W [M]	R811	ERDS2TJ333T	33K 1/4W [M]	C708	ECUZ1H392KBN	3900P 50V [M]	C809	ECEAJKA470B	47 6.3V [M]
R421	ERDS2TJ472T	4.7K 1/4W [M]	R812	ERDS2TJ333T	33K 1/4W [M]	C709	ECUZ1E563KBN	0.056 25V [M]	C810	ECEAJKA470B	47 6.3V [M]
R461	ERDS2TJ271T	270 1/4W [M]	R813	ERDS2TJ102T	1K 1/4W [M]	C710	ECUV1H151KCN	150P 50V [M]	C811	ECBT1H102KB5	1000P 50V [M]
R462	ERDS2TJ221T	220 1/4W [M]	R814	ERDS2TJ102T	1K 1/4W [M]	C711	ECUZ1E104ZFN	0.1 25V [M]	C812	ECBT1H102KB5	1000P 50V [M]
R701	ERJ6GEYJ4R7A	4.7 1/10W [M]	R815	ERDS2TJ102T	1K 1/4W [M]	C712	ECUZ1E104ZFN	0.1 25V [M]			
R702	ERJ6GEYJ822A	8.2K 1/10W [M]	R816	ERDS2TJ102T	1K 1/4W [M]	C713	ECUZ1E104MBN	0.1 25V [M]			TEST JUMPER
R703	ERJ6GEYJ823A	82K 1/10W [M]	R817	ERDS2TJ473T	47K 1/4W [M]	C714	ECEAJKA101I	100 6.3V [M]			
R704	ERJ6GEYJ102A	1K 1/10W [M]	R818	ERDS2TJ473T	47K 1/4W [M]	C715	ECUZ1H182KBN	1800P 50V [M]	TJ701	EYF8CU	JUMPER [M]
R705	ERJ6GEYJ124A	120K 1/10W [M]	R819	ERDS2TJ100T	10 1/4W [M]	C716	ECUZ1H821KBN	820P 50V [M]			
R706	ERJ6GEYJ102A	1K 1/10W [M]	R820	ERDS2TJ100T	10 1/4W [M]	C717	ECUZ1E104ZFN	0.1 25V [M]			
R707	ERJ6GEYJ474A	470K 1/10W [M]	R851	ERDS2TJ122T	1.2K 1/4W [M]	C718	ECUZ1C224KBN	0.22 16V [M]			
R708	ERJ6GEYJ154A	150K 1/10W [M]				C721	ECUZ1H150JCN	15P 50V [M]			
R709	ERJ6GEYJ473A	47K 1/10W [M]				C722	ECUZ1H150JCN	15P 50V [M]			
R710	ERJ6GEYJ103A	10K 1/10W [M]				C723	ECEAJKA221I	220 10V [M]			

Service Manual

ORDER NO. AD9701002S0
A6

Supplement

MASH[®]
multi-stage noise shaping

※ MASH is a trademark of NTT.

COMPACT
disc
DIGITAL AUDIO



Compact Disc Changer
SL-PD349
SL-PD687
SL-PD887

• Please file and use this supplement manual together with the service manual for the Model No. (Order No.):

SL-PD349P-K AD9404110A1
SL-PD687E/EB/EG/GC/GN-K AD9502043C8
SL-PD887E/EB/EG-K AD9502066A2
SL-PD887GC/GN-K AD9502067A3

HOW TO IDENTIFY THE UNITS WITH NEW CD UNITS

- The changes can be identified by their nameplate printed on the rear side of the unit.
- The shape changes between the former and new units are illustrated as shown in Fig. 1 and Fig. 2.

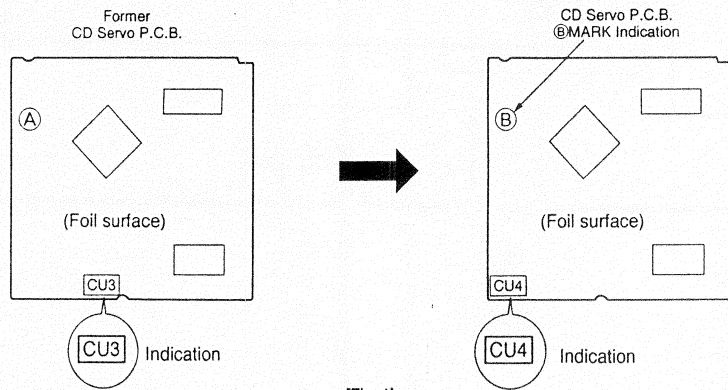

[Fig. 1]


⚠ WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Technics[®]

© 1997 Matsushita Electric Industrial Co., Ltd.
All rights reserved. Unauthorized copying and distribution is a violation of law.

SL-PD349/PD687/PD887

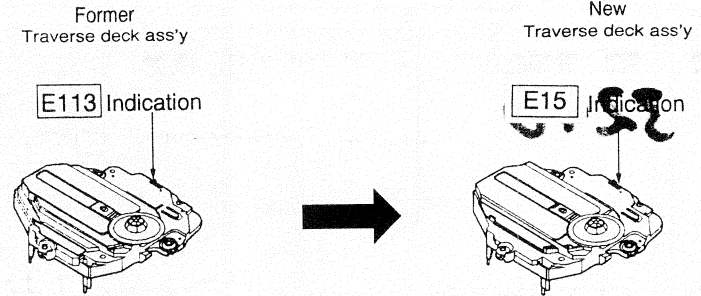

[Fig. 2]


NEW/FORMER COMPATIBILITY

In regard Traverse deck ass'y and CD Servo P.C.B., New and Former are not compatible with each other. When repairing, make sure of the New/Former compatibility and use proper parts.

In accordance with the above-stated change, several CD unit parts have been changed. For the changer parts, refer to page 5.

PRINTED CIRCUIT BOARD (NEW)



A SERVO P.C.B.

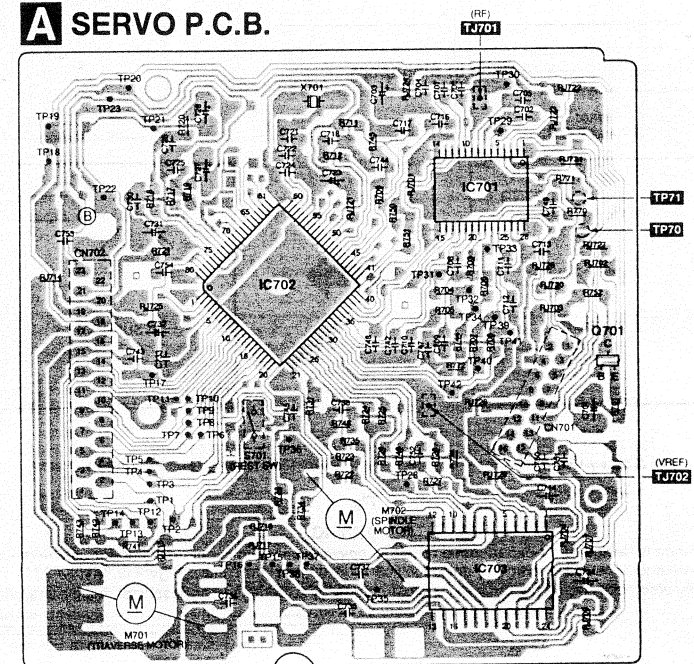

**SCHEMATIC
DIAGRAM (NEW)**

A SERVO CIRCUIT

Δ OPTICAL PICKUP CIRCUIT

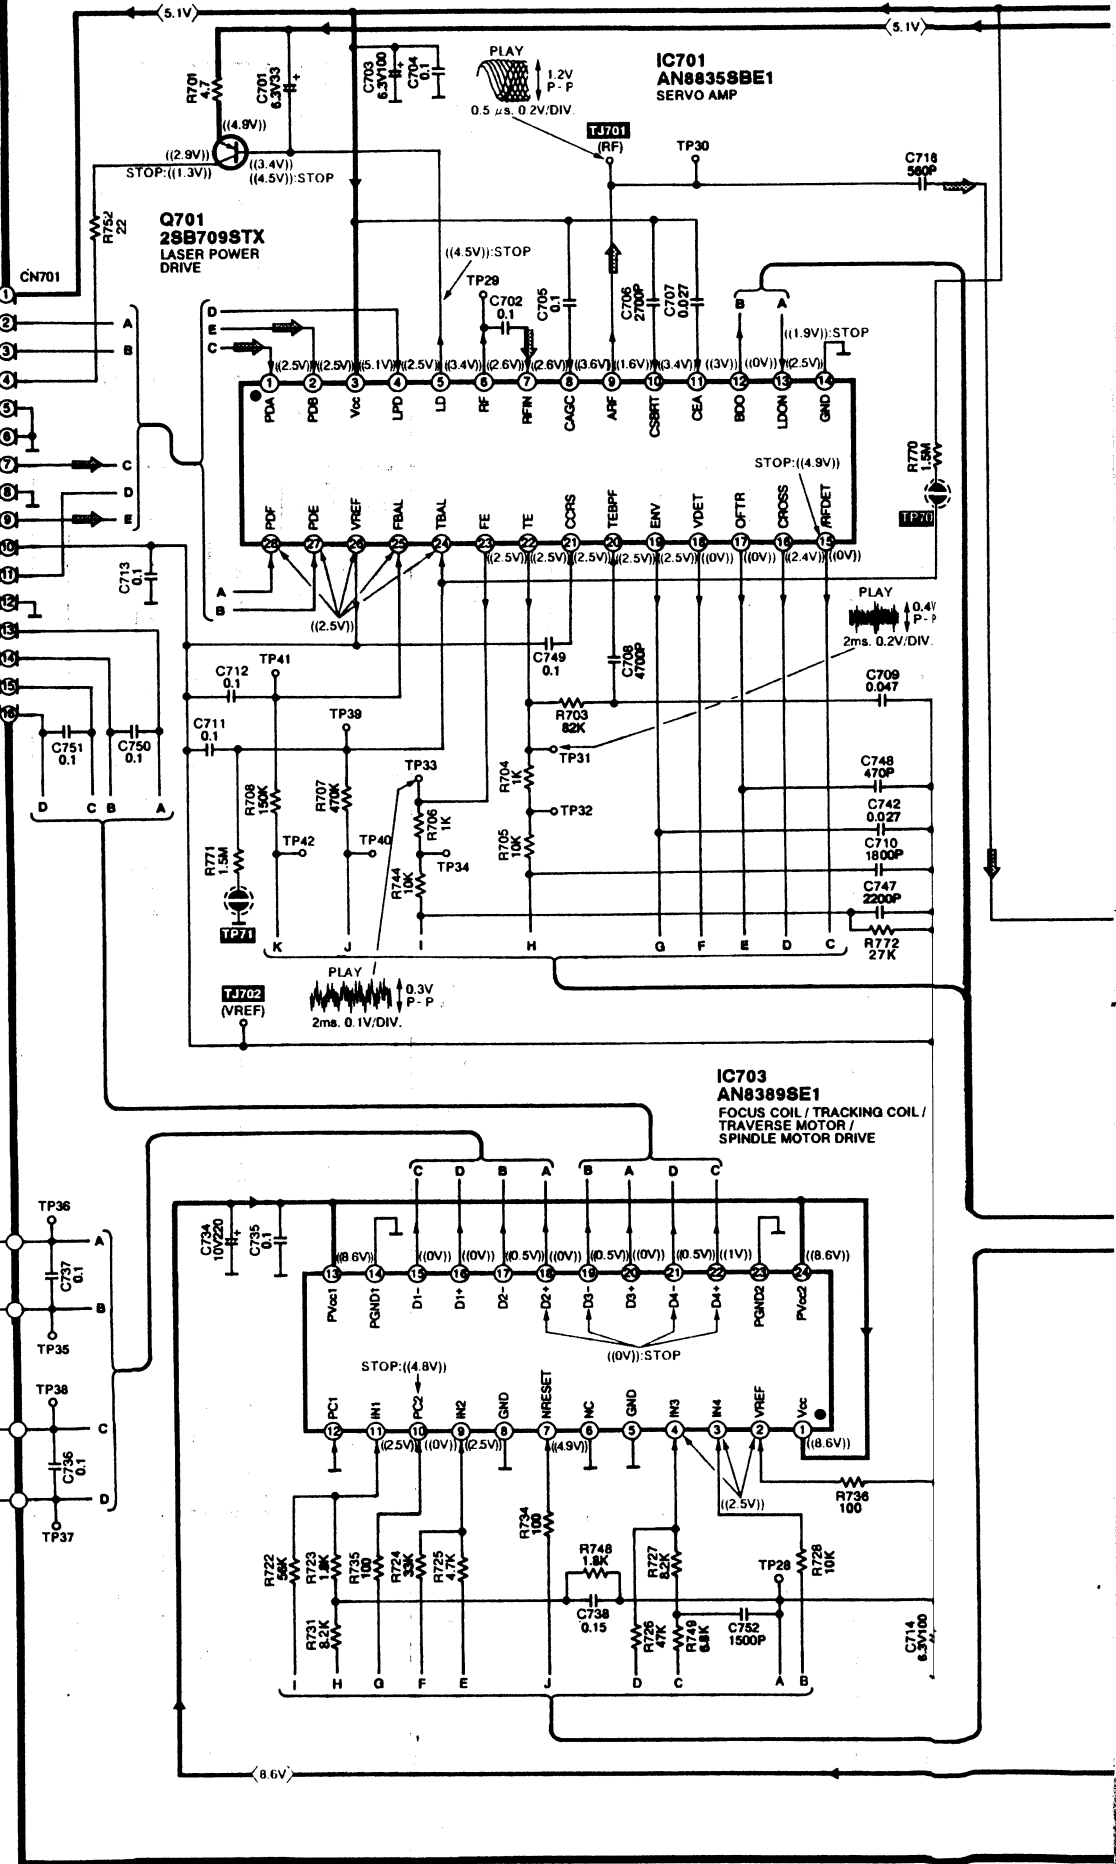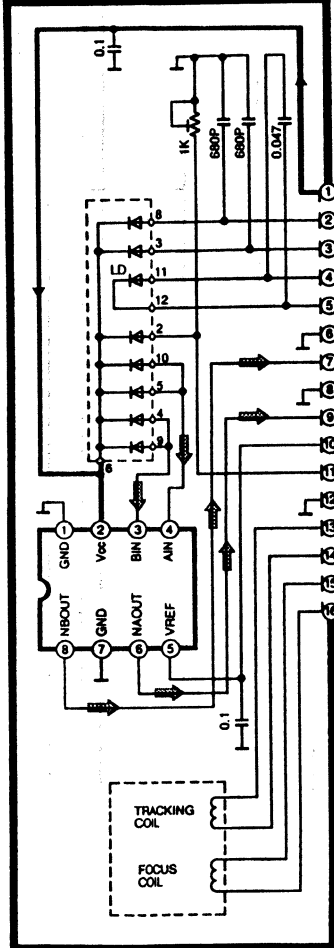

M702
SPINDLE
MOTOR

M701
TRAVERSE
MOTOR

MEMO

CD REPLACEMENT PARTS LIST (NEW)

Note 1 in the Remarks column show the changed parts.

Note 1: New and Former are not compatible. Use proper parts as required.


Notes: *Warning: This product uses a laser diode. Refer to caution statements on page 3.

*ACHTUNG: Die Lasereinheit nicht zerlegen.

Die Lasereinheit darf nur gegen eine vom Hersteller spezifizierte Einheit ausgetauscht werden.

* [M] indicates in Remarks column parts that are supplied by MESA.

Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS	
116	RE20150Z	TRAVERSE UNIT	[M] Note 1
116-1	SHGD112	FLOATING RUBBER(A)	[M]
116-2	SHGD113-1	FLOATING RUBBER(B)	[M]
116-3	SNSD38	SCREW	[M]
117	FMED109	FLOATING SPRING A	[M]
118	FMED142	FLOATING SPRING B	[M]
119	FMRD698-K	TRAVERSE CHASSIS	[M]
120	FMSS123-1	FIXED PIN A	[M]
121	FMSS350	FIXED PIN B	[M]
122	KTV2+6G	SCREW	[M]
123	FMGD094	TRAY HOLDER	[M]
124	KTN2+6G	SCREW	[M]
		INTEGRATED CIRCUIT(S)	
IC701	AN8835SBE1	I. C. SERVO AMP	[M] Note 1
IC702	MN662740RML	I. C. SERVO/DIGITAL PROCESSOR	[M] Note 1
IC703	AN8389SE1	I. C. COIL/MOTOR DRIVE	[M]
		TRANSISTOR(S)	
Q701	2SB709S	TRANSISTOR	[M]
		OSCILLATOR(S)	
X701	RSXZ16M3M01T	OSCILLATOR (16.9344 MHz)	[M]
		SWITCH(ES)	
S701	RSMD006-P	SW. REST	[M]
		CONNECTOR(S)	
CN701	RJU035T016	CONNECTOR (16P)	[M]
CN702	RJS1A6723-1Q	CONNECTOR (23P)	[M]

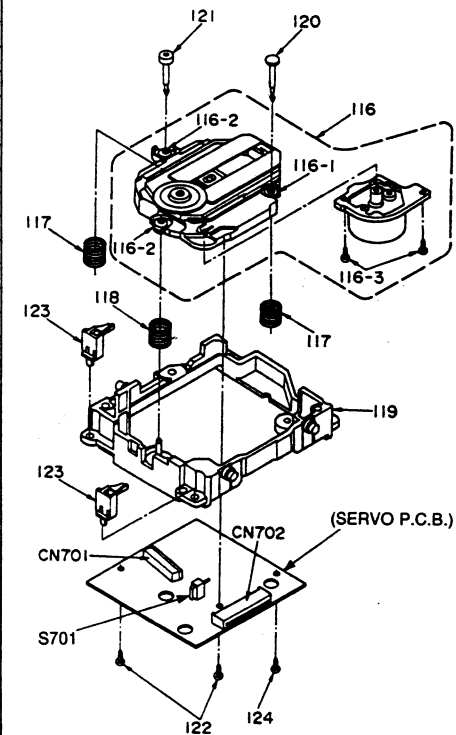

RESISTORS & CAPACITORS (NEW)

Notes: * Capacity values are in microfarads (uF) unless specified otherwise, P-Pico-farads (pF) F-Farads (F)
 * Resistance values are in ohms, unless specified otherwise, 1K=1,000 (OHM), 1M=1,000K (OHM)
 * (M) indicates in Remarks column parts that are supplied by MESA.

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
		<SERVO P. C. B. >	C704	ECU2NE104MBN	25V 0.1U (M)	RJ704	ERJ8GEY0R00A	CHIP JUMPER (M)
		RESISTORS	C705	ECU2NE104MBN	25V 0.1U (M)	RJ707	ERJ8GEY0R00A	CHIP JUMPER (M)
R701	ERJ8GEYJ4R7V	1/10W 4.7 (M)	C706	ECUV1H272KBN	50V 2700P (M)	RJ709	ERJ8GEY0R00A	CHIP JUMPER (M)
R703	ERJ8GEYJ823	1/10W 82K (M)	C707	ECUV1E273KBN	25V 0.027U (M)	RJ714	ERJ8GEY0R00A	CHIP JUMPER (M)
R704	ERJ8GEYJ102A	1/10W 1K (M)	C708	ECUE1H472KBN	50V 4700P (M)	RJ715	ERJ8GEY0R00A	CHIP JUMPER (M)
R705	ERJ8GEYJ103V	1/10W 10K (M)	C709	ECUE1C473KBN	16V 0.047U (M)	RJ716	ERJ8GEY0R00A	CHIP JUMPER (M)
R706	ERJ8GEYJ102A	1/10W 1K (M)	C710	ECUV1H182KBN	50V 1800P (M)	RJ717	ERJ8GEY0R00A	CHIP JUMPER (M)
R707	ERJ8GEYJ474V	1/10W 470K (M)	C711	ECUWNE104ZFN	25V 0.1U (M)	RJ721	ERJ8GEY0R00A	CHIP JUMPER (M)
R708	ERJ8GEYJ154V	1/10W 150K (M)	C712	ECUWNE104ZFN	25V 0.1U (M)	RJ722	ERJ8GEY0R00A	CHIP JUMPER (M)
R709	ERJ8GEYJ683V	1/10W 68K (M)	C713	ECUV1C104MBN	16V 0.1U (M)	RJ723	ERJ8GEY0R00A	CHIP JUMPER (M)
R711	ERJ8GEYJ154V	1/10W 150K (M)	C714	ECEADJKA1011	6.3V 100U (M)	RJ724	ERJ8GEY0R00A	CHIP JUMPER (M)
R712	ERJ8GEYJ211V	1/10W 220 (M)	C716	ECUE1H561KBN	50V 560P (M)	RJ725	ERJ8GEY0R00A	CHIP JUMPER (M)
R717	ERJ8GEYJ102A	1/10W 1K (M)	C717	ECUWNE104ZFN	25V 0.1U (M)	RJ726	ERJ8GEY0R00A	CHIP JUMPER (M)
R718	ERJ8GEYJ102A	1/10W 1K (M)	C718	ECUWNC224KBN	16V 0.22U (M)	RJ727	ERJ8GEY0R00A	CHIP JUMPER (M)
R719	ERJ8GEYJ102A	1/10W 1K (M)	C721	ECUV1H150JCN	50V 15P (M)	RJ728	ERJ8GEY0R00A	CHIP JUMPER (M)
R720	ERJ8GEYJ102A	1/10W 1K (M)	C722	ECUV1H150JCN	50V 15P (M)	RJ729	ERJ8GEY0R00A	CHIP JUMPER (M)
R721	ERJ8GEYJ101V	1/10W 100 (M)	C723	ECEAJKA2211	10V 220U (M)	RJ730	ERJ8GEY0R00A	CHIP JUMPER (M)
R722	ERJ8GEYJ563V	1/10W 56K (M)	C724	ECUV1C104MBN	16V 0.1U (M)	RJ731	ERJ8GEY0R00A	CHIP JUMPER (M)
R723	ERJ8GEYJ182V	1/10W 1.8K (M)	C725	ECUE1H102KBN	50V 1000P (M)			TEST JUMPERS
R724	ERJ8GEYJ333V	1/10W 33K (M)	C726	ECUE1H102KBN	50V 1000P (M)			
R725	ERJ8GEYJ472V	1/10W 4.7K (M)	C727	ECEAJHPK0101	50V 1U (M)			
R726	ERJ8GEYJ473V	1/10W 47K (M)	C728	ECEAJHPK0101	50V 1U (M)	TJ701	EYF8CU	TEST JUMPERS (M)
R727	ERJ8GEYJ822V	1/10W 8.2K (M)	C730	ECUWNE104ZFN	25V 0.1U (M)	TJ702	EYF8CU	TEST JUMPERS (M)
R728	ERJ8GEYJ103V	1/10W 10K (M)	C731	ECEADJKA2211	6.3V 220U (M)			
R731	ERJ8GEYJ822V	1/10W 8.2K (M)	C732	ECEADJKA2211	6.3V 220U (M)			
R734	ERJ8GEYJ101V	1/10W 100 (M)	C733	ECU2NE104MBN	25V 0.1U (M)			
R735	ERJ8GEYJ101V	1/10W 100 (M)	C734	ECEAJKA2211	10V 220U (M)			
R736	ERJ8GEYJ101V	1/10W 100 (M)	C735	ECUWNE104ZFN	25V 0.1U (M)			
R738	ERJ8GEYJ223V	1/10W 22K (M)	C736	ECUWNE104ZFN	25V 0.1U (M)			
R741	ERJ8GEYJ562V	1/10W 5.6K (M)	C737	ECUWNE104ZFN	25V 0.1U (M)			
R742	ERJ8GEYJ562V	1/10W 5.6K (M)	C738	ECUV1C154KBN	16V 0.15U (M)			
R743	ERJ8GEYJ562V	1/10W 5.6K (M)	C742	ECUV1E273KBN	25V 0.027U (M)			
R744	ERJ8GEYJ103V	1/10W 10K (M)	C743	ECUWNE104ZFN	25V 0.1U (M)			
R745	ERJ8GEYJ155V	1/10W 1.5M (M)	C744	ECUE1E822KBN	25V 8200P (M)			
R748	ERJ8GEYJ182V	1/10W 1.8K (M)	C745	ECUE1C473KBN	16V 0.047U (M)			
R749	ERJ8GEYJ682V	1/10W 6.8K (M)	C747	ECUE1H222KBN	50V 2200P (M)			
R750	ERJ8GEYJ473V	1/10W 47K (M)	C748	ECUV1H471KBN	50V 470P (M)			
R751	ERJ8GEYJ473V	1/10W 47K (M)	C749	ECU2NE104MBN	25V 0.1U (M)			
R752	ERJ8GEYJ220V	1/10W 22 (M)	C750	ECUV1C104MBN	16V 0.1U (M)			
R770	ERJ8GEYJ155V	1/10W 1.5M (M)	C751	ECU2NE104MBN	25V 0.1U (M)			
R771	ERJ8GEYJ155V	1/10W 1.5M (M)	C752	ECUE1H152KBN	50V 1500P (M)			
R772	ERJ8GEYJ273V	1/10W 27K (M)	C753	ECUV1H471KBN	50V 470P (M)			
		CAPACITORS	C754	ECUE1H471KBN	50V 470P (M)			
					CHIP JUMPER(S)			
C701	ECEADJKA3301	6.3V 33U (M)	RJ701	ERJ8GEY0R00A	CHIP JUMPER (M)			
C702	ECU2NE104MBN	25V 0.1U (M)	RJ702	ERJ8GEY0R00A	CHIP JUMPER (M)			
C703	ECEADJKA1011	6.3V 100U (M)	RJ703	ERJ8GEY0R00A	CHIP JUMPER (M)			

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

PRECAUTION OF LASER DIODE

CAUTION: This product utilizes a laser diode with the unit turned "on", invisible laser radiation is emitted from the pickup lens.
 Wave length: 780nm
 Maximum output radiation power from pickup: 100µW/VDE

Laser radiation from the pickup lens is safety level, but be sure the followings:

1. Do not disassemble the optical pickup unit, since radiation from exposed laser diode is dangerous.
2. Do not adjust the variable resistor on the pickup unit. It was already adjusted.
3. Do not look at the focus lens using optical instruments.
4. Recommend not to look at pickup lens for a long time.

ACHTUNG: Dieses Produkt enthält eine Laserdiode. Im eingeschalteten Zustand wird unsichtbare Laserstrahlung von der Lasereinheit abgestrahlt.

Wellenlänge: 780nm

Maximale Strahlungsleistung der Lasereinheit: 100µW/VDE


Die Strahlung an der Lasereinheit ist ungefährlich, wenn folgende Punkte beachtet werden:

1. Die Lasereinheit nicht zerlegen, da die Strahlung an der freigelegten Laserdiode gefährlich ist.
2. Den werkseitig justierten Einstellregler der Lasereinheit nicht verstellen.
3. Nicht mit optischen Instrumenten in die Fokussierlinse blicken.
4. Nicht über längere Zeit in die Fokussierlinse blicken.

ADVARSEL: I dette apparat anvendes laser.

• Use of caution label

DANGER	INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM.
ADVARSEL	USYNLIG LASERSTRÅLING VED ÅBNING. NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION UDGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALLTIINA NÄKYMÄTÖNTÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
WARNING	OSYNLIG LASERSTRÅLING NÅR DENNA DEL ÄR ÖPPNAD OCH SPÅRREN ÄR URKOPPLAD. BETRakta EJ STRÅLEN.
ADVARSEL	USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNEES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT	UNSICHTBARE LASERSTRÄHLUNG, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN. ROLS0104

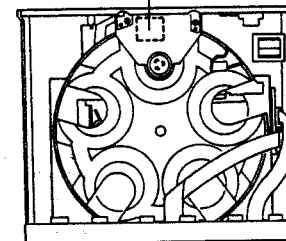


CAUTION!
 THIS PRODUCT UTILIZES A LASER.
 USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

ACCESSORIES

AC power supply cord 1 pc.
 [VJA0733 (EB)] [RJA0036-K (GN)] [RJA0019-2K (E, EG, GC)]

Stereo connection cable 1 pc.
 [SJP2249-3]


Power plug adaptor 1 pc.
 [SJP5213-2 (GC)]



CONNECTIONS

Before connecting the changer to your audio system, make sure that the power of the changer and all other system components is turned off.

- Although the figure below shows the AC power supply cord being connected to a household AC outlet, if the amplifier (or receiver) is equipped with an AC outlet, connect the cord to that outlet.
- The configuration of the AC outlet differs according to area.




[For (EB) area only]
BE SURE TO READ THE CAUTION FOR AC POWER SUPPLY CORD ON PAGE 4 BEFORE THE FOLLOWING CONNECTIONS.

[For (GC) area only]
 Set the voltage selector to the voltage setting for the area in which the unit will be used.
 [Use a minus (-) screwdriver]

Note
 If the power supply in your area is 117 V or 120 V, set to the "127 V" position.
 Note that this unit will be seriously damaged if this setting is not made correctly.


If the power plug will not fit your socket, use the power plug adaptor (included).

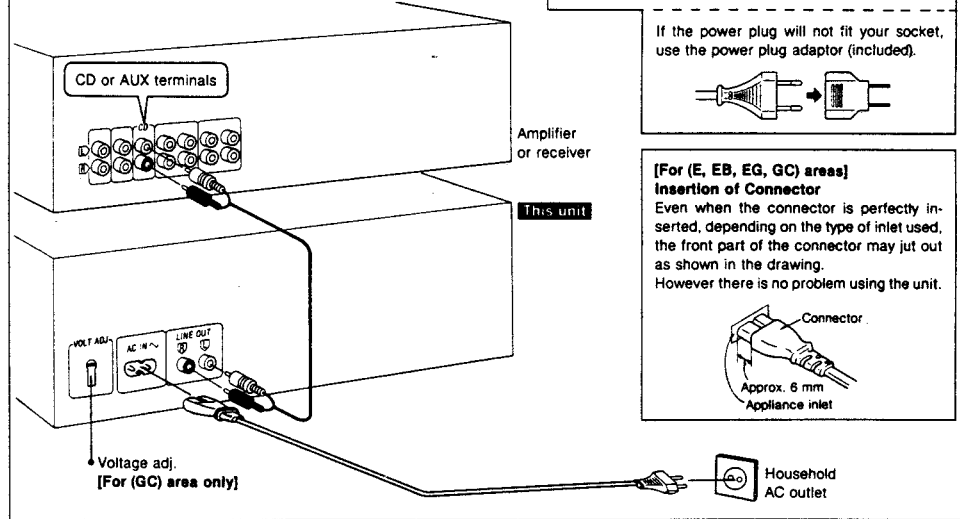

[For (E, EB, EG, GC) areas]
Insertion of Connector
 Even when the connector is perfectly inserted, depending on the type of inlet used, the front part of the connector may jut out as shown in the drawing.
 However there is no problem using the unit.

REPLACEMENT OF THE FOOT

1. Remove the 4 heat melted posts on the Bottom board ass'y with a pair of nippers or similar tool.
2. To replace the foot (RKA0053-A) on the Bottom board ass'y melt the 4 posts with a soldering iron or install it with a screw (XTB3+6J).

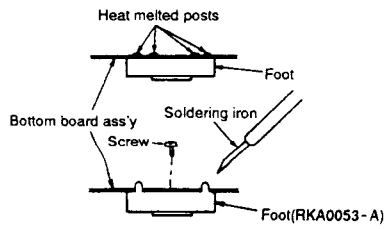



■ CAUTION FOR AC MAINS LEAD

For (EB) area.

("EB" area code model only)

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience. A 5-ampere fuse is fitted in this plug. Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced. If you lose the fuse cover the plug must not be used until a replacement cover is obtained. A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY. THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13-AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as shown below. If in any doubt please consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.


The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL \perp OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF—KEEP DRY.


Before use

Remove the connector cover as follows.

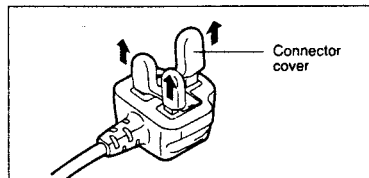


How to replace the fuse


1. Remove the fuse cover with a screwdriver.

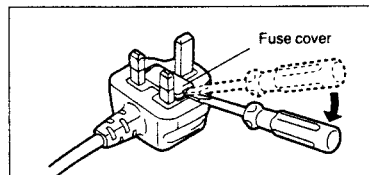

2. Replace the fuse and attach the fuse cover.

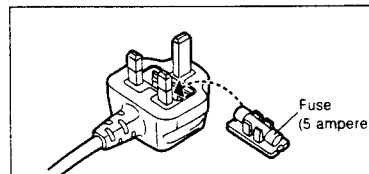


■ FRONT PANEL CONTROLS

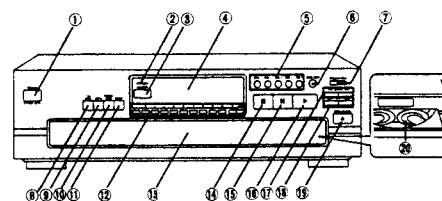

No.	Name
①	Power "STANDBY ϕ ION" switch (POWER, STANDBY ϕ ION) Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
②	"STANDBY" Indicator (STANDBY) When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.
③	Remote control signal sensor (SENSOR) The word "SENSOR" does not appear on the panel, but if you have an amplifier (or receiver) with remote control transmitter which is manufactured by Technics, it is possible to operate the main unit using this remote control transmitter. (Some remote control transmitters cannot be used.)
④	Display
⑤	Disc buttons (DISC 1-5)
⑥	Disc skip button (DISC SKIP)
⑦	Program mode button (PROGRAM MODE)
⑧	Time mode button (TIME MODE)
⑨	Spiral button (SPIRAL)
⑩	Random mode button (RANDOM MODE)
⑪	Repeat button (REPEAT)
⑫	Numeric buttons (1-10, 0, >10)
⑬	Loading drawer
⑭	Stop button (■)
⑮	Pause button (⏸)
⑯	Play button (▶)
⑰	Search buttons (<< SEARCH >>)

No.	Name
⑱	Skip buttons (<< SKIP >>)
⑲	Loading drawer open/close button (▲ OPEN/CLOSE)
⑳	Disc trays (1-5)

■ CAUTIONS CONCERNING THE MOVING OF THIS UNIT

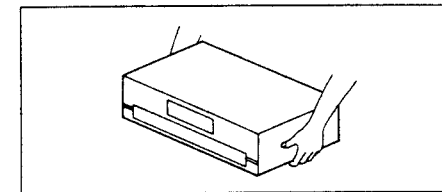

CAUTION

Before moving the changer to another location, be sure to carry out the "Preparations for moving the unit" described below.

Failure to do so will expose the compact discs and the changer to the risk of severe damage.


Preparations for moving the unit

All of the discs must be removed so that the trays are completely empty.

Use the following procedure.

- ① Press **POWER** to switch off the unit.
- ② Press **POWER** to switch on the unit.
(If there is a disc in the play section, it will be returned to the disc tray at this time.)
- ③ Press **OPEN/CLOSE** to open the loading drawer.
- ④ Press **DISC SKIP** to rotate the disc trays and remove the discs from all disc trays.
- ⑤ Press **OPEN/CLOSE** to close the loading drawer.
- ⑥ Press **POWER** to switch off the unit.


If you have pressed a wrong button by mistake, return to step ①.

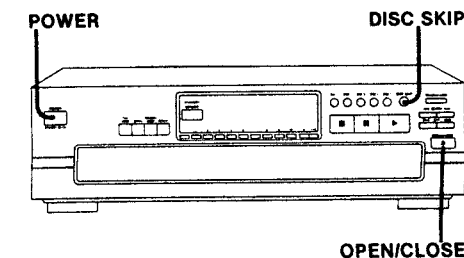

BASIC OPERATIONS

Sequential play

All of the discs will be played, beginning from track 1 on the selected disc.

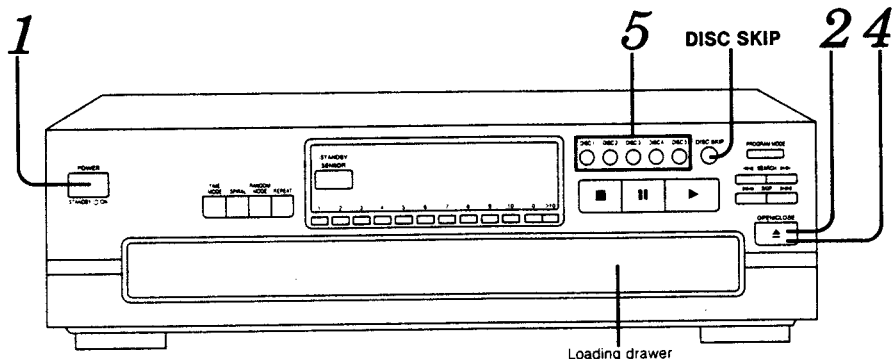

The explanation below is an example of operation in the case where all five disc trays in the changer are holding CDs.

1 **Press POWER.**
The unit will switch on.

2 **Press OPEN/CLOSE to open the loading drawer.**
Indicates that the loading drawer is open.

Numbers of the trays in which discs are loaded.

3 **Load the disc(s) on the disc tray(s).**
The discs can be loaded two at a time by pressing DISC SKIP to rotate the carousel.

Disc tray, Carousel, Disc number

Label must face upward.

Note
Do not load 3" (8 cm) and 5" (12 cm) discs on the same disc tray.

CAUTION

Do not touch the loading drawer and carousel while they are in motion, and do not attempt to rotate the carousel by hand; doing so could result in incorrect operation of the unit and/or damage to the discs.

4 **Press OPEN/CLOSE again to close the loading drawer.**

Note
Do not attempt to close the drawer by hand.

Current play position (The numeral illuminates with a red color.)

Illuminates when a disc is in the disc tray. If there is no disc in the disc tray, the indication disappears when the disc tray comes to the play position.


5 **Press the desired disc button (1-5).**

Play will begin from the selected disc. If a disc is not on the selected disc tray, the changer plays the disc at the next number.

Disc number in play, Elapsed play time

Track number in play, Play indicator

The changer plays all the tracks on all the discs in order and stops automatically when the last track on the last disc finishes playing. The first disc will then be at the playing position.

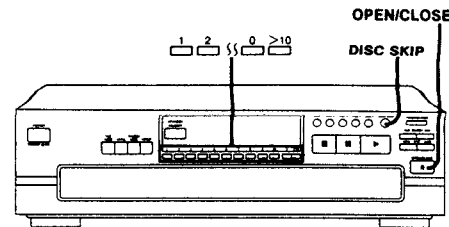

To directly access a desired track

Press the numeric button(s) to select the track.

Track number

To select a track between 1 and 10:
Press the corresponding number on the numeric button.

To select a two-digit track number over 10:
First press >10, and then press the numbers for the two digits.

For example; number 20:
Press >10, then 2, and then 0.

To exchange discs during play

While playing a disc, it is possible to change the other discs without interrupting play.

① Press OPEN/CLOSE to open the loading drawer.

Current disc

Discs which can be changed.


② Press DISC SKIP to rotate the disc trays and exchange the discs.

The carousel will move by one disc tray. Pressing again moves the carousel in the opposite direction by two disc trays.

③ Press OPEN/CLOSE to close the loading drawer.

Note

If you play a disc with the loading drawer open, discs other than the current disc cannot be played.

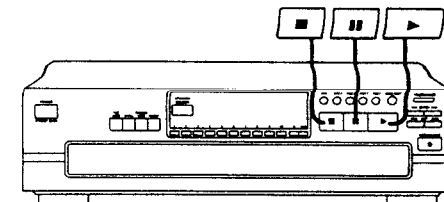

To temporarily stop play

Press **II**.

Illuminates

To resume play

Press **▶**.

To stop play

Press **■**.

The display will show the total number of tracks and the total playing time of the current disc.

Total number of tracks, Current disc, Total playing time

The total playing time displayed includes the silent sections between tracks. For this reason, it may be a few seconds longer than the playing time indicated on the disc.

To resume play

Press **▶**.

CAUTION


Do not move this changer with a compact disc inside the unit. If a disc comes off the disc tray, it might be scratched or the changer might become incapable of playing. (Refer to "Cautions concerning the moving of this unit" on page 5.)

SELF-DIAGNOSTIC DISPLAY FUNCTION

Self-diagnostic display

This unit is equipped with a self-diagnostic display function which, if a problem occurs, will display an error code corresponding to the problem.

Use this function when performing maintenance on the unit.

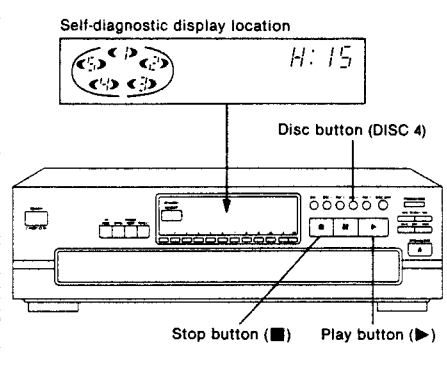Display procedure	Display location
<p>Entering the Self-Diagnostic Mode</p> <ol style="list-style-type: none"> With no CD loaded in the tray, turn on the unit. Unplug the power cord of the unit, and then plug it back in while pressing the STOP (■), PLAY (▶) and DISC 4 buttons together. This will bring up the FL display. Release the above three buttons. <p>To Display Self-Diagnostic Results</p> <ol style="list-style-type: none"> When the FL display lights up, the unit automatically repeats an approximately 50-second cycle of the following operations. <p>※ → Tray opens. (A) → Tray closes.</p> <p>Tray opens. → Traverse deck lifts. (B)</p> <p>Tray closes. (B) → Traverse deck lowers.</p> <p>Rotary tray turns counter-clockwise two disc slots. (C)</p> <p>Traverse deck lifts once, and then lowers.</p> <p>Traverse deck lifts once, and then lowers. (C) → Rotary tray turns clockwise one disc slot.</p> <p>Rotary tray turns clockwise three disc slots. (C) → Traverse deck lifts once, and then lowers.</p> <p>Traverse deck lifts once, and then lowers. (C) → Rotary tray turns counterclockwise one disc slot.</p> <p>Rotary tray turns counterclockwise two disc slots. → ※</p> <ol style="list-style-type: none"> Self-diagnostic fault results appear on the FL display for approximately one second as "H15" at location (A), "H16" at (B) and "F18" at (C), during the above cycle. If there are no faults as a result of self-diagnostic, "TRACK 00:00" appears on the FL display. <p>To Return to Normal Display</p> <ul style="list-style-type: none"> Press the power button to turn off the unit, and then turn it on again. <p>To Display Self-Diagnostic Results Again</p> <ul style="list-style-type: none"> Follow steps 1 through 3 of "Entering Self-Diagnostic Mode" above. <p>To Clear the Display of Self-Diagnostic Results</p> <ul style="list-style-type: none"> Turn off the unit to clear the contents of the stored fault results. 	<p>Self-diagnostic display location</p>  <p>Disc button (DISC 4)</p> <p>Stop button (■) Play button (▶)</p>

Interpretation of error codes

Error code	Problem condition	Correction procedure
H15	CD tray does not open or close when CD tray open/close (▲) button is pressed.	Faulty loading motor and motor drive IC (IC501), or faulty contact or short-circuit on open/close detect switch, S551. (Check and replace)
H16	When the CD tray open/close (▲) button is pressed, the CD tray closes momentarily but then opens again, or opens momentarily and then closes again.	
F18	Faulty rotary turret rotation detection. Example: The turret continues to turn at the initial position without stopping.	Check the optical sensor (D501) and replace if necessary.


HANDLING PRECAUTIONS FOR TRAVERSE DECK

The laser diode in the traverse deck (optical pickup) may break down due to potential difference caused by static electricity of clothes or human body.

So, be careful of electrostatic breakdown during repair of the traverse deck (optical pickup).

Handling of traverse deck (optical pickup)

- Do not subject the traverse deck (optical pickup) to static electricity as it is extremely sensitive to electrical shock.
- To prevent the breakdown of the laser diode, an antistatic shorting pin is inserted into the flexible board (FFC). When removing or connecting the short pin, finish the job in as short time as possible.
- Take care not to apply excessive stress to the flexible board (FFC).
- Do not turn the variable resistor (laser power adjustment). It has already been adjusted.


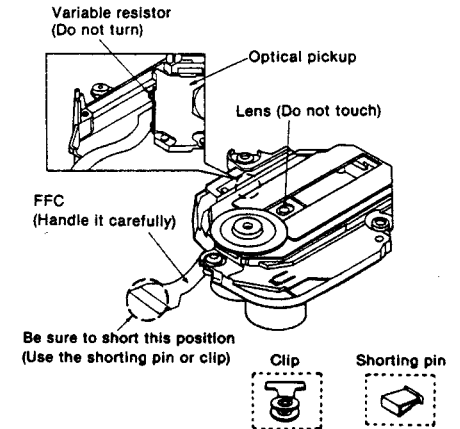


Grounding for electrostatic breakdown prevention

- Human body grounding**
Use the anti-static wrist strap to discharge the static electricity from your body.
- Work table grounding**
Put a conductive material (sheet) or steel sheet on the area where the optical pickup is placed, and ground the sheet.

Caution:

The static electricity of your clothes will not be grounded through the wrist strap. So, take care not to let your clothes touch the traverse deck (optical pickup).

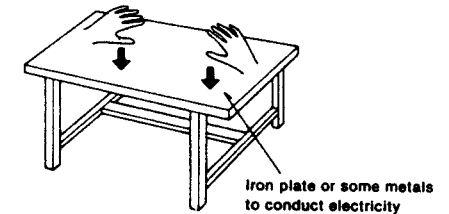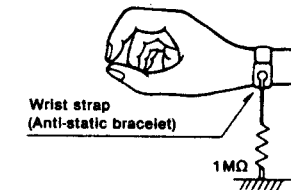

DISASSEMBLY INSTRUCTIONS







"ATTENTION SERVICER"







Some chassis components may have sharp edges. Be careful when disassembling and servicing.

Warning: This product uses a laser diode. Refer to caution statements on page 2.

ACHTUNG: • Die Lasereinheit nicht zerlegen.

- Die Lasereinheit darf nur gegen eine vom Hersteller spezifizierte Einheit ausgetauscht werden.

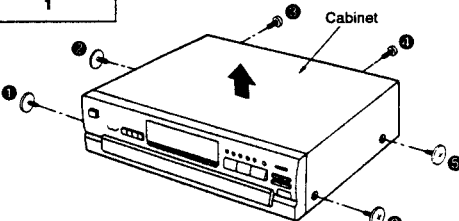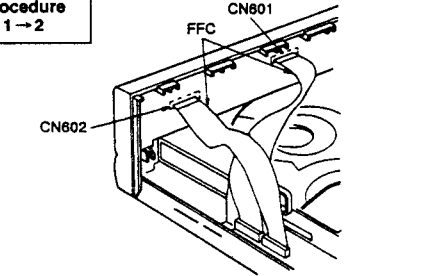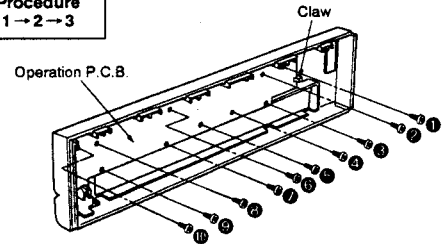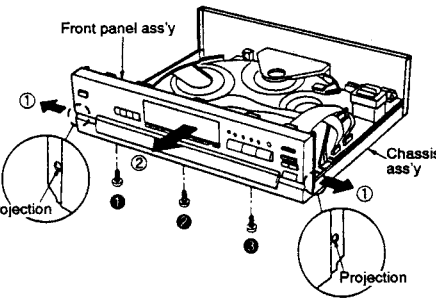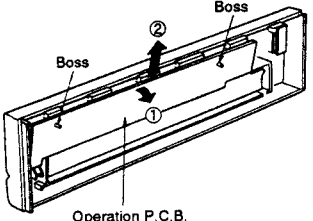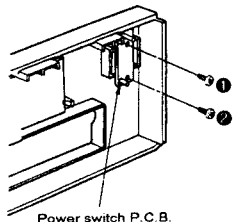Ref.No. 1	Removal of the cabinet	Ref.No. 2	Removal of the front panel ass'y
Procedure 1	 <ol style="list-style-type: none"> 1. Remove the 6 screws(① - ⑥). 2. Remove the cabinet in the direction of arrow. 	Procedure 1→2	 <ol style="list-style-type: none"> 1. Pull out the FFC from connectors(CN801, CN602).
Ref.No. 3	Removal of the operation P.C.B.	Ref.No. 4	Removal of the power switch P.C.B.
Procedure 1→2→3	 <ol style="list-style-type: none"> 1. Remove the 10 screws(① - ⑩). 2. Release the 1 claw. 	Procedure 1→2→3→4	 <ol style="list-style-type: none"> 2. Remove the 3 screws(① - ③). 3. Pull the front panel ass'y in both direction of arrow ① to unlock it from the projections of the chassis ass'y. 4. Remove the front panel ass'y in the direction of arrow ②.
 <ol style="list-style-type: none"> 3. Tilt the operation P.C.B. in the direction of arrow ① and release the bosses. Then, remove the operation P.C.B. in the direction of arrow ②. 	 <ol style="list-style-type: none"> • Remove the 2 screws(①, ②). 		

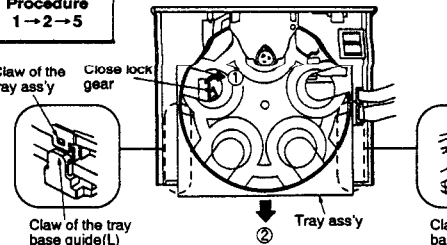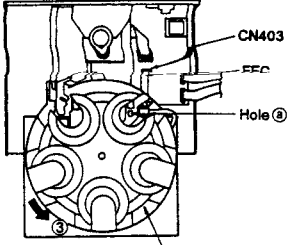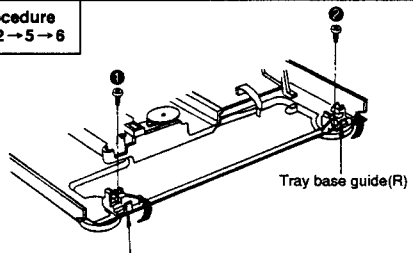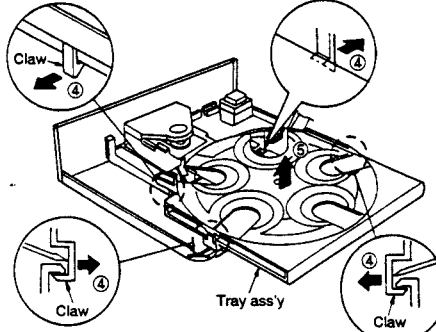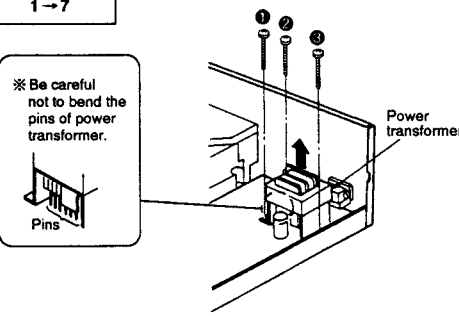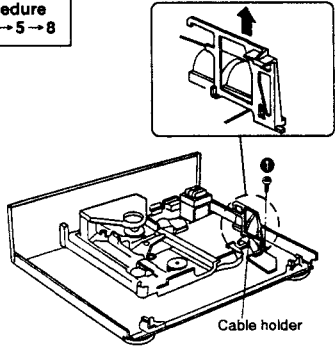Ref.No. 5	Removal of the tray ass'y		
Procedure 1→2→5	 <ol style="list-style-type: none"> 1. Keep the close lock gear pressed in the direction of arrow ①, and move the tray ass'y in the direction of arrow ②. 2. Fit the claw of the tray ass'y in the claw of the tray base guide(L). 3. Fit the claw of the tray ass'y in the claw of the tray base guide(R). 	 <ol style="list-style-type: none"> 4. Pull out the FFC from connector(CN403). 5. Rotate the rotary tray to the position that can be confirmed the hole ③ in the direction of arrow ③. 	
Ref.No. 6	Removal of the tray base guide(L) and tray base guide(R)		
Procedure 1→2→5→6	 <ol style="list-style-type: none"> 1. Remove the 2 screws(①, ②). 2. Remove the tray base guide(L) and tray base guide(R) in the direction of arrow. 	 <ol style="list-style-type: none"> 5. Push and release the 4 claws in the direction of arrow ④, and then remove the tray ass'y in the direction of arrow ⑤. 	
Ref.No. 7	Removal of the power transformer	Ref.No. 8	Removal of the cable holder
Procedure 1→7	 <ol style="list-style-type: none"> 1. Remove the 3 screws(① - ③). 2. Remove the power transformer in the direction of arrow. 	Procedure 1→2→5→8	 <ol style="list-style-type: none"> 1. Remove the 1 screw(①). 2. Lift the cable holder in the direction of arrow.

Ref.No. 9	Removal of the main P.C.B. and D/A CONV. P.C.B.	
Procedure 1→2→5→7 →8→9		
		<ol style="list-style-type: none"> 1. Pull out the FFC from connector(CN301). 2. Remove 1 connector(CN404). 3. Remove the 4 screws(①-④). 4. Lift up the main P.C.B. in the direction of arrow ①, and release the 2 ribs on the chassis ass'y. Then, remove the main P.C.B. in the direction of arrow ②.

Ref.No. 10	Removal of the clamp plate ass'y	
Procedure 1→10		
		<ol style="list-style-type: none"> 1. Remove the 2 screws(①, ②). 2. Push the claw in the direction of arrow ①, and then remove the clamp plate ass'y in the direction of arrow ②.

Ref.No. 11	Removal of the fixed plate, magnet and clamper	
Procedure 1→10→11		
		<ul style="list-style-type: none"> • Release the 3 claws in the direction of arrow.

Ref.No. 12	Removal of the mechanism base ass'y	
Procedure 1→2→5→12		
		<ol style="list-style-type: none"> 1. Pull out the FFC from connector(CN301). 2. Remove 1 connector(CN404). 3. Remove the 4 screws(①-④).

Ref.No. 13	Removal of the photo transistor P.C.B.	
Procedure 1→13		
		<ul style="list-style-type: none"> • Release the 2 claws in the direction of arrow.





Ref.No. 14	Removal of the rotary tray	
Procedure 1→2→14		
		<ol style="list-style-type: none"> 1. Keep the close lock gear pressed in the direction of arrow ①, and move the tray ass'y in the direction of arrow ②. 2. Rotate the rotary tray to the position that can be confirmed the hole ② in the direction of arrow ③. 3. Remove the 1 screw(①). 4. Remove the spring and washer. 5. Remove the rotary tray in the direction of arrow ④.





Ref.No. 15	Removal of the sensor P.C.B.	
Procedure 1→2→5→13 →14→15		
		<ul style="list-style-type: none"> • Release the 3 claws in the direction of arrow, and remove the sensor P.C.B.



Ref.No. 16	Removal of reduction gear	
Procedure 1→2→5→14 →16		
		<ol style="list-style-type: none"> 1. Release the 2 claws in the direction of arrow ①, and then push the rivet in the direction of arrow ②.



Ref.No. 17	Removal of motor holder and tray motor ass'y	
Procedure 1→2→5→14 →16→17		
		<ol style="list-style-type: none"> 1. Remove the 2 screws(①, ②). 2. Remove the motor holder and tray motor ass'y in the direction of arrow.



		<ol style="list-style-type: none"> 2. Pull out the rivet. 3. Remove the belt. 3. Remove the reduction gear.

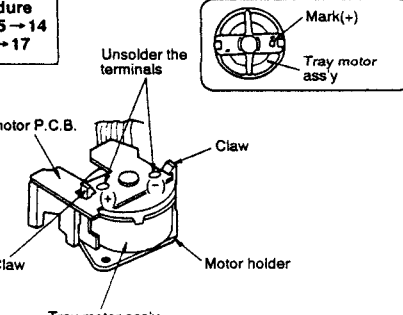
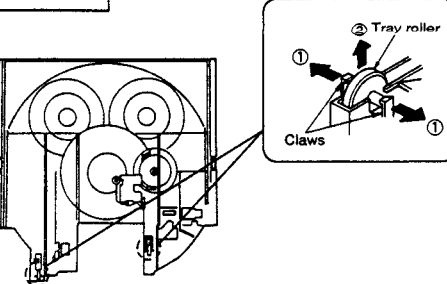
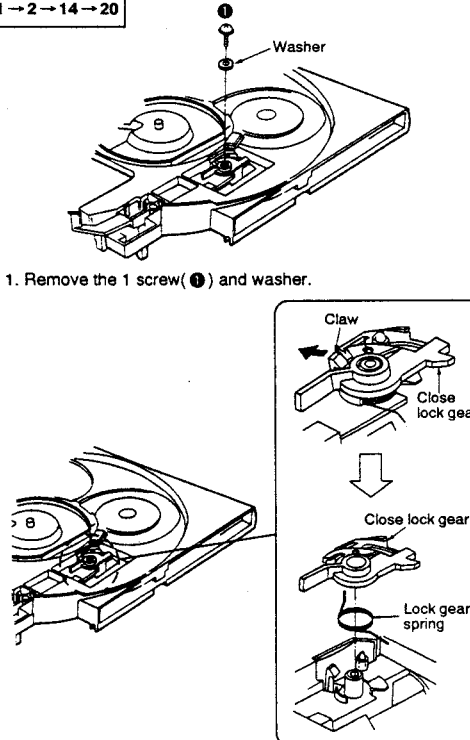
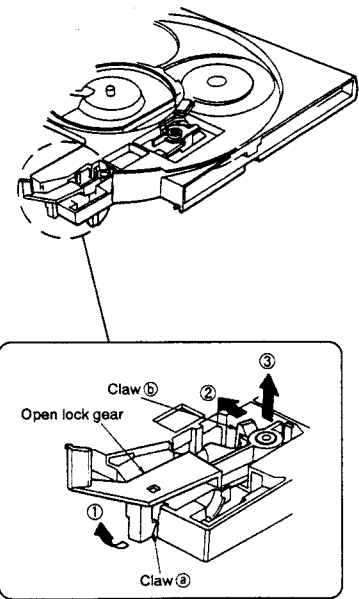
Ref.No. 18	Removal of the tray motor P.C.B.	Ref.No. 19	Removal of the tray roller
Procedure 1 → 2 → 5 → 14 → 16 → 17	 <ol style="list-style-type: none"> 1. Release the 2 claw, and then remove the motor holder. 2. Unsolder the terminals of the tray motor ass'y. 	Procedure 1 → 2 → 14 → 19	 <ul style="list-style-type: none"> • Release the 2 claws in the direction of arrow ①, and then remove the tray roller in the direction of arrow ②.
Ref.No. 20	Removal of the close lock gear	Ref.No. 21	Removal of the open lock gear
Procedure 1 → 2 → 14 → 20	 <ol style="list-style-type: none"> 1. Remove the 1 screw (❶) and washer. 2. Release the 1 claw and then remove the close lock gear and lock gear spring. 	Procedure 1 → 2 → 5 → 14 → 21	 <ol style="list-style-type: none"> 1. Release the claw ❸ of open lock gear in the direction of arrow ❶. 2. Release the claw ❹ of open lock gear in the direction of arrow ❷, and then remove the of open lock gear in the direction of arrow ❸.

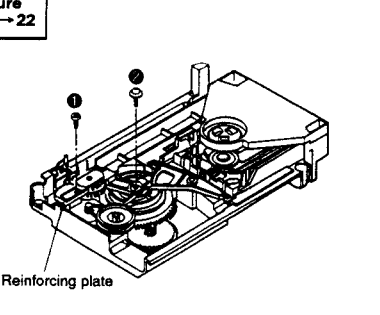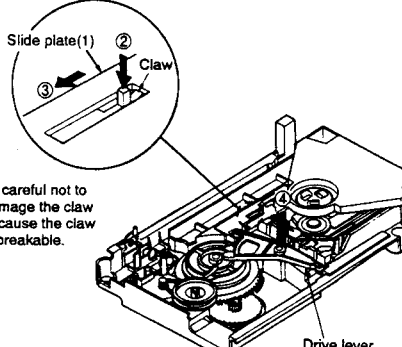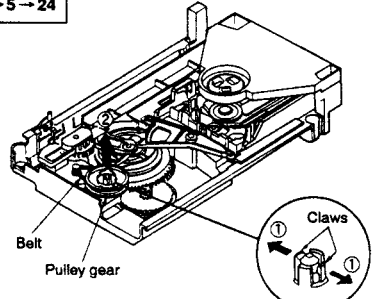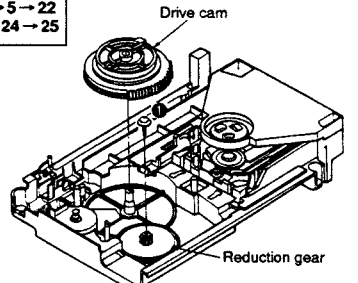Ref.No. 22	Removal of the reinforcing plate, drive gear(1) and drive gear(2)	Ref.No. 23	Removal of the drive lever
Procedure 1 → 2 → 5 → 22	 <ol style="list-style-type: none"> 1. Remove the 2 screws (❶, ❷). 2. Remove the reinforcing plate. 	 <p>Note) Be careful not to damage the claw because the claw is breakable.</p> <ol style="list-style-type: none"> 2. Push the claw in the direction of arrow ❷, and then move the slide plate(1) in the direction of arrow ❸. 3. Remove the drive lever in the direction of arrow ❹. 	
Ref.No. 24	Removal of the pulley gear	Ref.No. 25	Removal of the drive cam and reduction gear
Procedure 1 → 2 → 5 → 24	 <ol style="list-style-type: none"> 1. Remove the belt. 2. Release the 2 claws in the direction of arrow ❶, and then remove the pulley gear in the direction of arrow ❷. 	Procedure 1 → 2 → 5 → 22 → 23 → 24 → 25	 <ol style="list-style-type: none"> 1. Remove the drive cam. 2. Remove 1 screw (❶). 3. Remove the reduction gear.

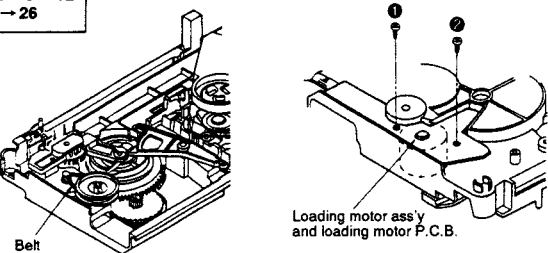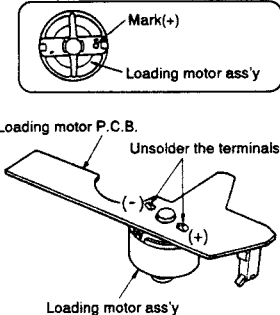Ref.No. 26	Removal of the loading motor ass'y and loading motor P.C.B.	
Procedure 1 → 2 → 5 → 12 → 26	 <p>1. Remove the belt.</p> <p>2. Remove the 2 screws (①, ②).</p> <p>3. Remove the loading motor ass'y and loading motor P.C.B.</p>	 <p>4. Unsolder the terminals of the loading motor ass'y.</p>

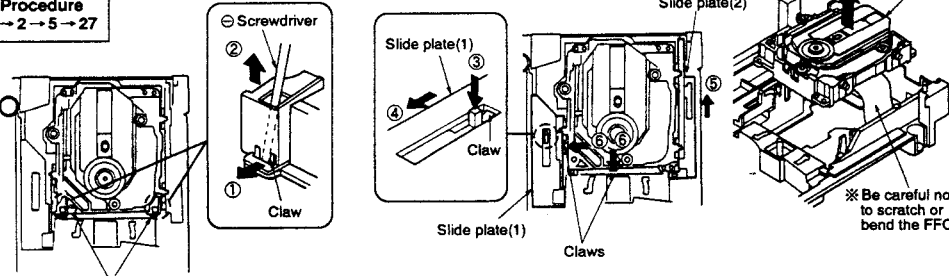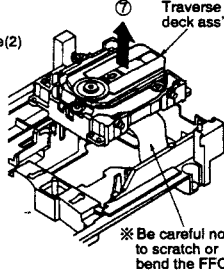
Ref.No. 27	Removal of the traverse deck ass'y	
Procedure 1 → 2 → 5 → 27	 <p>1. While pushing the claw of tray holders in the direction ① using the ⊖ screwdriver, remove the tray holder in the direction of arrow ②.</p> <p>2. Push the claw in the direction of arrow ③, and then move the slide plate(1) in the direction of arrow ④.</p> <p>3. Move the slide plate(2) in the direction of arrow ⑤.</p> <p>4. Release the 2 claws in the direction of arrow ⑥, and then remove the traverse deck ass'y in the direction of arrow ⑦.</p> <p>※ Be careful not to scratch or bend the FFC.</p>	

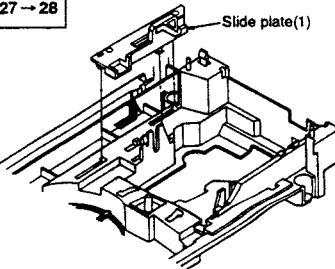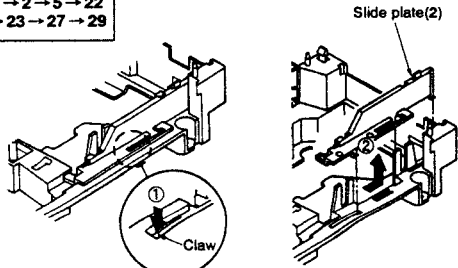Ref.No. 28	Removal of the slide plate(1)	Ref.No. 29	Removal of the slide plate(2)
Procedure 1 → 2 → 5 → 22 → 23 → 27 → 28	 <p>• Remove the slide plate(1) in the direction of arrow.</p>	Procedure 1 → 2 → 5 → 22 → 23 → 27 → 29	 <p>• Push the claw in the direction of arrow ①, and then remove the slide plate(2) in the direction of arrow ②.</p>

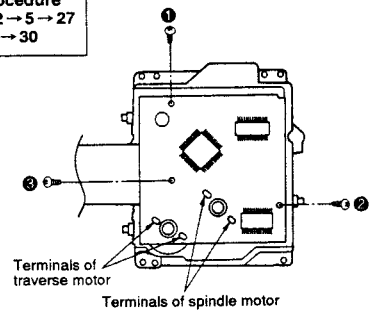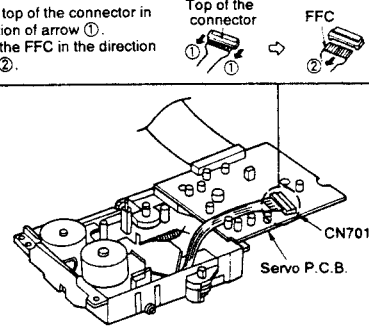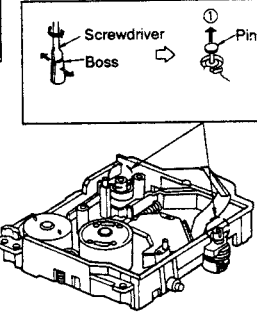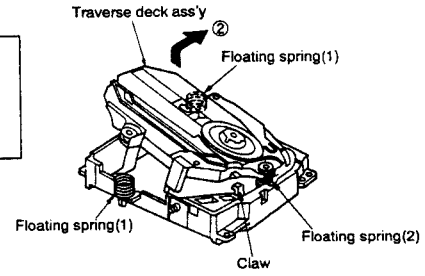
Ref.No. 30	Removal of the servo P.C.B.	
Procedure 1 → 2 → 5 → 27 → 30	 <p>1. Remove the 3 screws (①-③).</p> <p>2. Unsolder the 2 terminals of spindle motor.</p> <p>3. Unsolder the 2 terminals of traverse motor.</p>	 <p>1. Push the top of the connector in the direction of arrow ①.</p> <p>2. Remove the FFC in the direction of arrow ②.</p> <p>4. Remove the FFC from connector(CN701).</p> <p>Caution: Insert a short pin into the traverse unit FFC. (Refer to "handling precautions for traverse deck" on page 9.)</p>
Ref.No. 31	Removal of the traverse deck ass'y	
Procedure 1 → 2 → 5 → 27 → 30 → 31	 <p>1. Widen the bosses by using a regular screwdriver or similar object.</p> <p>2. Pull out the pins.</p>	 <p>2. Release the claw, and then remove the traverse deck ass'y in the direction of arrow ②.</p> <p>Caution: Be careful not to lose the 3 springs because those will also be removed on removal of the traverse deck ass'y.</p>

■ INSTALLATION OF SERVO P.C.B.

- When installing servo P.C.B., move the optical pickup to the more external side than the mark (▲). (When the optical pickup is not moved, the switch(S701) on the servo P.C.B. may be broken.)
 - Connect the FFC to the connector(CN701).
 - Install the servo P.C.B. to the traverse unit with 3 screws (①-③).
 - Solder the 2 terminals of the traverse motor and the 2 terminals of the spindle motor.
- Note:** • Insert the FFC into the connector and lock securely.
• After installing the motor with screws, solder each motor terminal.

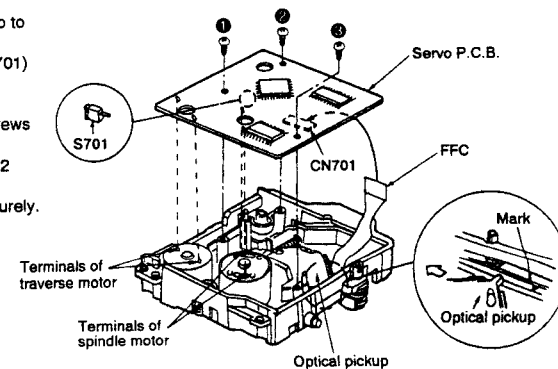


Installation of the traverse deck ass'y

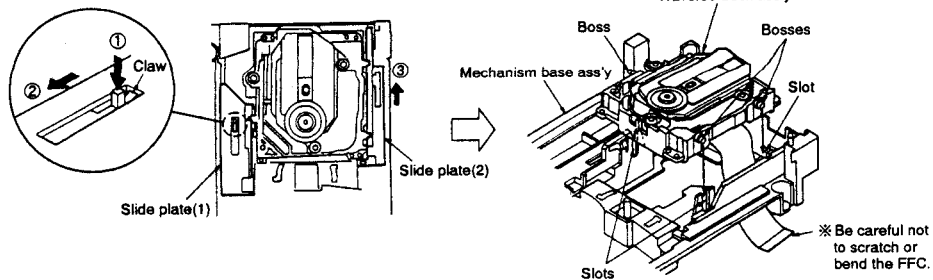

1. Push the claw in the direction of arrow ①, and then move the slide plate(1) in the direction of arrow ②.
2. Move the slide plate(2) in the direction of arrow ③.


3. Align the 3 bosses of traverse deck ass'y with the slots of mechanism base ass'y.

Installation of the drive lever

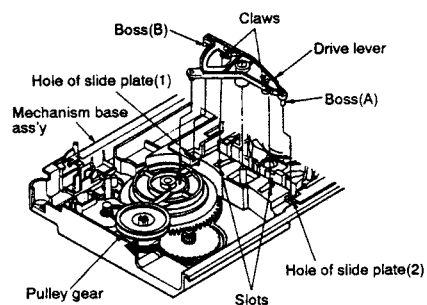

1. Rotate the pulley gear to full position in the direction of arrow.
2. Align the boss(A) with the hole of slide plate(2).
3. Align the boss(B) with the hole of slide plate(1).
4. Align the claws of drive lever with the slots of loading mechanism ass'y.

Installation of the tray ass'y

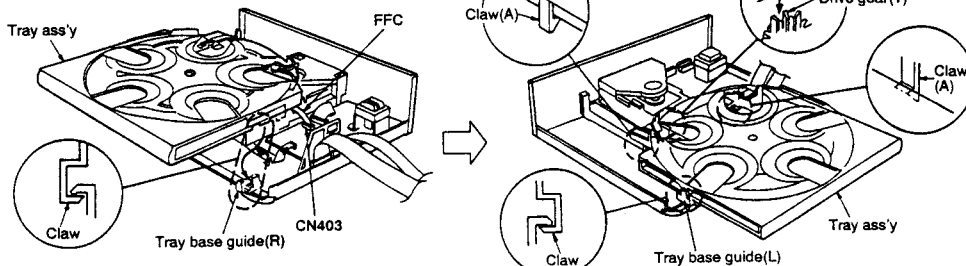

1. Attach the FFC to the connector(CN403).
2. Fit the claws on the right side of the tray ass'y underneath the claws on the tray base guide(R).
3. Fit the claws on the right side of the tray ass'y underneath the claws on the tray base guide(L).

4. Fit the limiter claw on the tray ass'y between the teeth of the drive gear(1).
5. Catch the 2 claws(A) with the mechanism base ass'y.
6. After installing the tray ass'y, check that it moves smoothly.

HOW TO CHECK THE MAIN AND SERVO P.C.B.

1. Remove the cabinet. (See Ref.No.1 of the disassembly instructions.)
2. Remove the front panel ass'y. (See Ref.No.2 of the disassembly instructions.)
3. Remove the tray ass'y. (See Ref.No.5 of the disassembly instructions.)
4. Remove the cable holder. (See Ref.No.8 of the disassembly instructions.)
5. Remove the clamp plate ass'y. (See Ref.No.10 of the disassembly instructions.)
6. Remove the fixed plate, magnet and clamper. (See Ref.No.11 of the disassembly instructions.)

Check the main P.C.B.

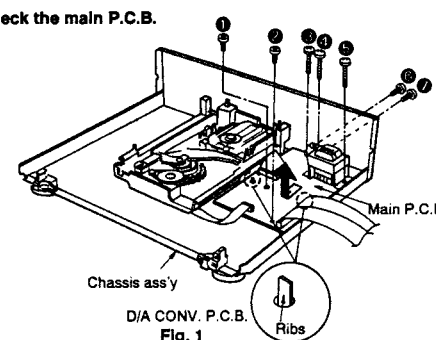


Fig. 1

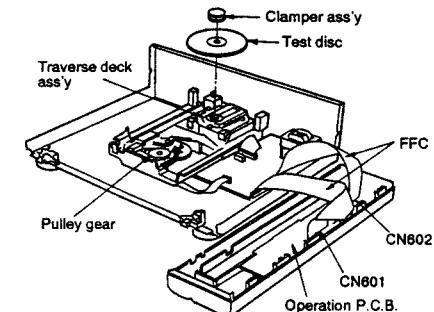


Fig. 2

7. Remove the 7 screws (①-⑦).
8. Lift up the main P.C.B. to release the 2 ribs of chassis ass'y, and then remove the main P.C.B. in the direction of arrow.

9. Rotate the pulley gear in the direction of arrow until traverse deck ass'y comes up.

10. Place the test disc and secure it by using the clamper ass'y.
11. Connect the 2 FFC (CN601, CN602) as shown in Fig. 2.
12. Set up the main P.C.B.
13. Connect the main P.C.B. ground terminal (line out terminal) to the chassis ass'y with a lead wire.
14. When checking the soldered surface of the main P.C.B., do as shown in Fig. 3.


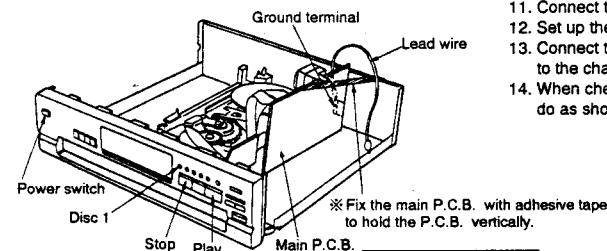


Fig. 3

How to play the disc

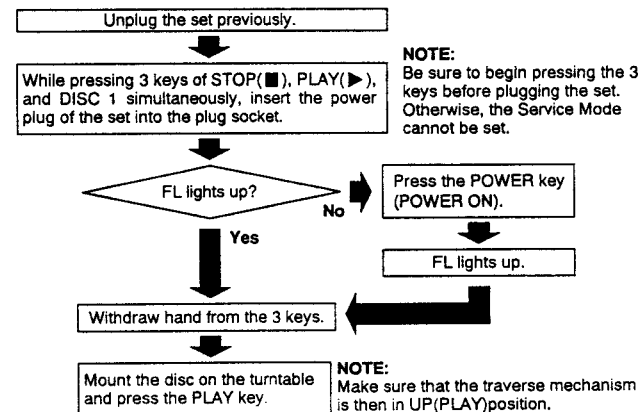

Service Mode setting

When checking the main/servo P.C.B. of this set, remove the rotary tray previously. After the rotary tray is removed, the microcomputer is kept from issuing PLAY command even when the PLAY key is pressed. Stated above is the procedure of setting the Service Mode for keeping the microcomputer in the PLAY mode even after removal of the rotary tray.

● Check the servo P.C.B.

- Remove the mechanism base ass'y. (See Ref.No.12 of the disassembly instructions.)
- Remove the traverse deck ass'y. (See Ref.No.27 of the disassembly instructions.)

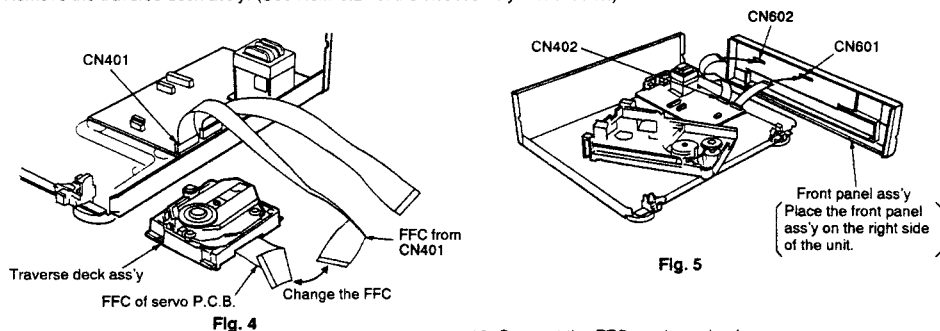


Fig. 4

- Replace the FFC of servo P.C.B. to the FFC (CN401) of main P.C.B.

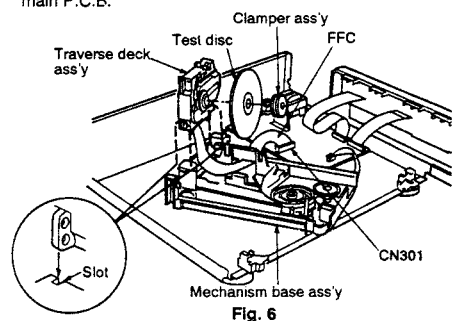


Fig. 6

- Connect the FFC as shown in above.

Between CN401 and CN601
Between CN402 and CN602

- Insert the traverse deck in the slot of mechanism base ass'y.
- Connect the FFC of servo P.C.B. to the connector (CN301) of main P.C.B.
- Set the test disc on the traverse deck ass'y, and then fix the traverse deck ass'y with clamper ass'y.
- When checking the soldered surface of servo P.C.B., do as shown in Fig. 7.

Notes:

- After completing the check, restore the replaced FFC to their original positions.

How to play the disc

Unplug the set previously.

While pressing 3 keys of STOP(■), PLAY(▶), and DISC 1 simultaneously, insert the power plug of the set into the plug socket.

NOTE:

Be sure to begin pressing the 3 keys before plugging the set. Otherwise, the Service Mode cannot be set.

FL lights up?

No → Press the POWER key (POWER ON).

FL lights up.

Yes → Withdraw hand from the 3 keys.

Mount the disc on the turntable and press the PLAY key.

NOTE:

Make sure that the traverse mechanism is then in UP(PLAY) position.

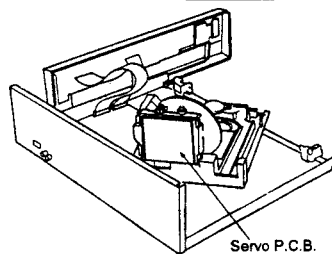
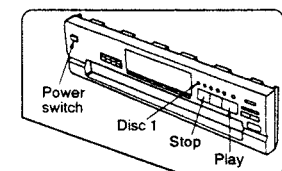


Fig. 7

Service Mode setting

When checking the main/servo P.C.B. of this set, remove the rotary tray previously. After the rotary tray is removed, the microcomputer is kept from issuing PLAY command even when the PLAY key is pressed. Stated above is the procedure of setting the Service Mode for keeping the microcomputer in the PLAY mode even after removal of the rotary tray.

■ OPERATING THE UNIT WITHOUT THE FRONT PANEL ASS'Y (OPERATION P.C.B. AND KEYS)

A Turning off the back-up power to the microprocessor(IC 401)

- Unplug the AC cord.
- Short the ends of the C401 jumpers at 10 Ω (5W) resistance for at least 1 second.

B Turning the power on again

- Plug the AC cord back in.
- Short the between the following jumpers simultaneously:
 - The D401 cathode and R401 from IC401 (equivalent to pressing the STOP button).
 - The D401 cathode and R403 from IC401 (equivalent to pressing the PLAY button).
 - The D402 cathode and R401 from IC401 (equivalent to pressing the DISC 1 button).
- Keeping the above shorts in place, short between the D404 cathode and R405 from IC401 for 1 second to turn on the power to the main unit.
- Remove the shorts placed in step 2.

C Using the machine

- To play, short between the D401 cathode and R403 from IC401 (equivalent to pressing the PLAY button).
- To pause, short between the D401 cathode and R402 from IC401 (equivalent to pressing the PAUSE button).
- To stop, short between the D401 cathode and R401 from IC401 (equivalent to pressing the STOP button).
- To move forward, short between the D402 cathode and R402 from IC401 (equivalent to pressing the F.SKIP button).
- To move backward, short between the D402 cathode and R403 from IC401 (equivalent to pressing the R.SKIP button).
- To search in the forward direction, short between the D403 cathode and R402 from IC401 (equivalent to pressing the F.SEARCH button).
- To search in the backward direction, short between the D403 cathode and R403 from IC401 (equivalent to pressing the R.SEARCH button).

D Finishing off

- Unplug the AC cord.
- Short the ends of the C401 jumpers at 10 Ω (5W) resistance.

■ Installation of the FFC

- When connecting the FFC, connect as shown right.

- Connect as follows:



Short FFC ; between Connector [S] and SHORT
Long FFC ; between Connector [L] and LONG

- Connect the FFC (Long/Short) with blue line upward to the operation P.C.B. connectors .

- Connect the FFC (Long/Short) with blue line outward to the main P.C.B. connectors.

NOTE:

The pin numbers of each connector are marked on the P.C.B. surface.

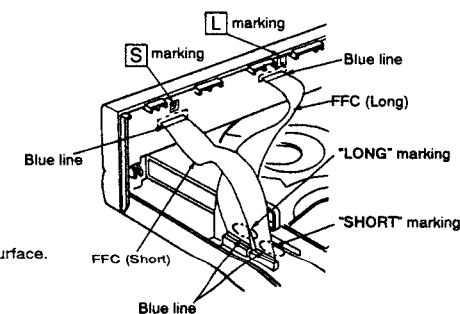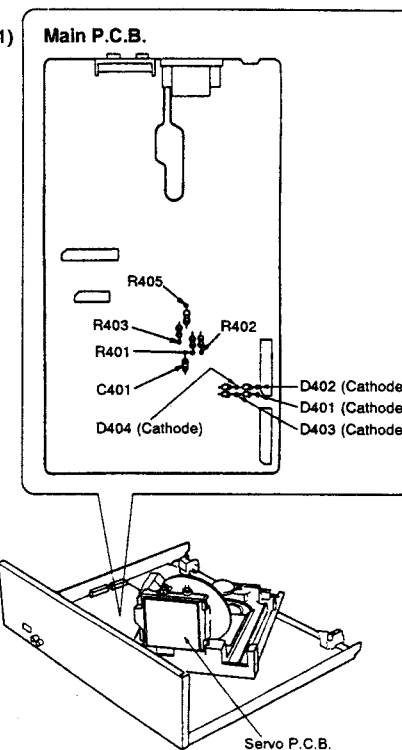

AUTOMATIC ADJUSTMENT RESULTS DISPLAY FUNCTION (SELF-CHECK FUNCTION)

The unit contains a function which displays the result of the automatically adjustment of the servo circuits (tracking, focus servo, etc.) as an error code on the FL display. The error code display serves as a repair guide showing the automatically adjustment circuit is at fault. The procedures for displaying the error codes are given below.

Procedures to display the error code


- Procedure to display the error code before disassembly (finished unit)
 - When the [POWER] key is pressed while holding down the [STOP] [PAUSE] and [PLAY] keys simultaneously, the FL display illuminates, release the power turns on.
 - When the FL display illuminates, release the [STOP] [PAUSE] and [PLAY] keys.
 - Press the [OPEN/CLOSE] key to open the disc tray and load the test disc (SZZP1054C).
 - Press the [PLAY] key to start the play operation.
 - After the time display appears, press the [STOP] key to display the error code. (e.g. E-0)
 - The error code display can be used as a repair guide showing which servo circuit is at fault. (See Error Code Based Troubleshooting.)
- Procedure to display the error code when disassembled
 - Prepare the unit as described in "How to Check the Main and Servo P.C.B." on pages 19, 20.
 - Press the [POWER] key while holding down the [STOP] [PLAY] and [DISC 1] keys simultaneously.
 - When the FL display illuminates, release the [STOP] [PLAY] and [DISC 1] keys.
 - Load the test disc (SZZP1054C) on the turntable and secure it with the clamped ass'y.
 - Perform steps 4 and 5 in section (1) above.

Error code based troubleshooting

- ✧ The unit is satisfactory if the error code is E-0 of E-2.
- ✧ Before testing, check that the test disc is free of scratches and dirt and optical pickup is clean.


FL error code display	Symptom	Probable cause	Signal to check		Normal voltage and waveform values	
			Signal name	Location	PLAY	STOP
E-1	Focus and tracking offset adjustments not completed in the specified time period.	① Clocks X1 and X2, power supply VDD, and reset/RST, all on IC702 ② MDATA, MCLK, MLD, and SENSE signals to/from mechanism controller	MDATA	IC702 ① pin		4.8V
			MCLK	IC702 ⑦ pin		4.8V
			MLD	IC702 ③ pin		4.8V
			SENSE	IC702 ④ pin	0V	0V
			/RST	IC702 ⑤ pin	4.9V	4.9V
			X1	IC702 ⑥ pin		1.1V
E-3 E-5 E-7 E-9 E-B E-D E-F	Disc play unstable	① Scratches or contaminants on disc surface ② Focus and tracking servo circuits (check waveforms, voltages, and part values.) ③ Spindle driver circuit ④ Optical pickup	X2	IC702 ⑥ pin		1.1V
			FE	IC702 ⑥ pin		2.4V
			TE	IC702 ⑥ pin		2.4V
			FOD	IC702 ④ pin	2.4V	2.4V
			TRD	IC702 ⑦ pin	2.4V	2.4V
			KICK	IC702 ⑥ pin	2.4V	2.4V
			/FLOCK	IC702 ① pin	0V	4.9V
			/RF DET	IC702 ⑤ pin	0V	4.8V
			RF	TJ701		3.4V
			STAT	IC702 ⑦ pin	3.5V	0V
E-4 E-6 E-C E-E	Best Eye (PD Balance) adjustment not completed in the specified time period.	① Scratches or contaminants on disc surface ② Focus and Tracking servo circuit (check waveforms, voltages, and part values.) ③ Optical pickup	FBAL	IC702 ⑥ pin	2.5 ± 1.25V	2.5 ± 1.25V
			RF	TJ701		3.4V
			FE	IC702 ⑥ pin		0V
			/TLOCK	IC702 ② pin	0V	0V
			OFT	IC702 ⑤ pin	0V	0V
E-8 E-A	Focus or Tracking gain adjustment not completed in the specified time period.	① Scratches or contaminants on disc surface ② Focus and Tracking servo circuit (check waveforms, voltages, and part values.) ③ Optical pickup	FE	IC702 ⑥ pin		2.4V
			TE	IC702 ⑥ pin		2.4V
			/TLOCK	IC702 ② pin	0V	0V
			OFT	IC702 ⑤ pin	0V	0V

DIGITAL SERVO SYSTEM

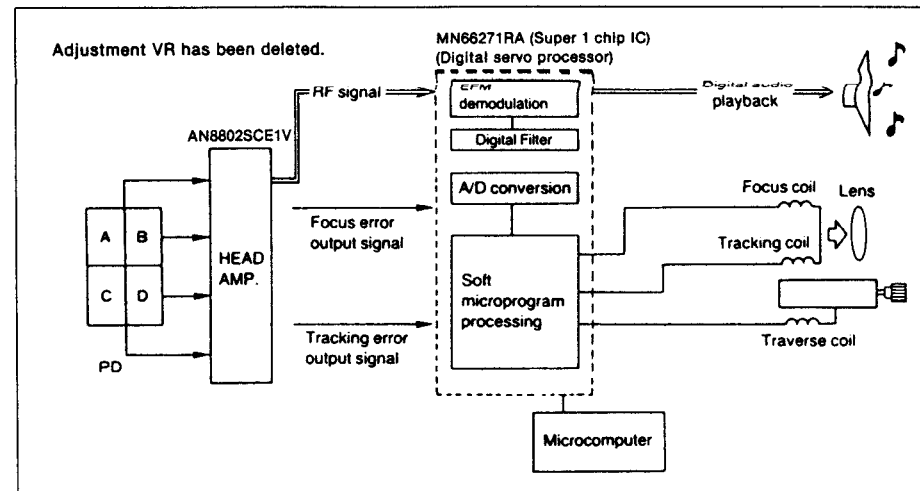

The following flow chart shows the sequence of automatic adjustments.

Flow chart automatic adjustment sequence

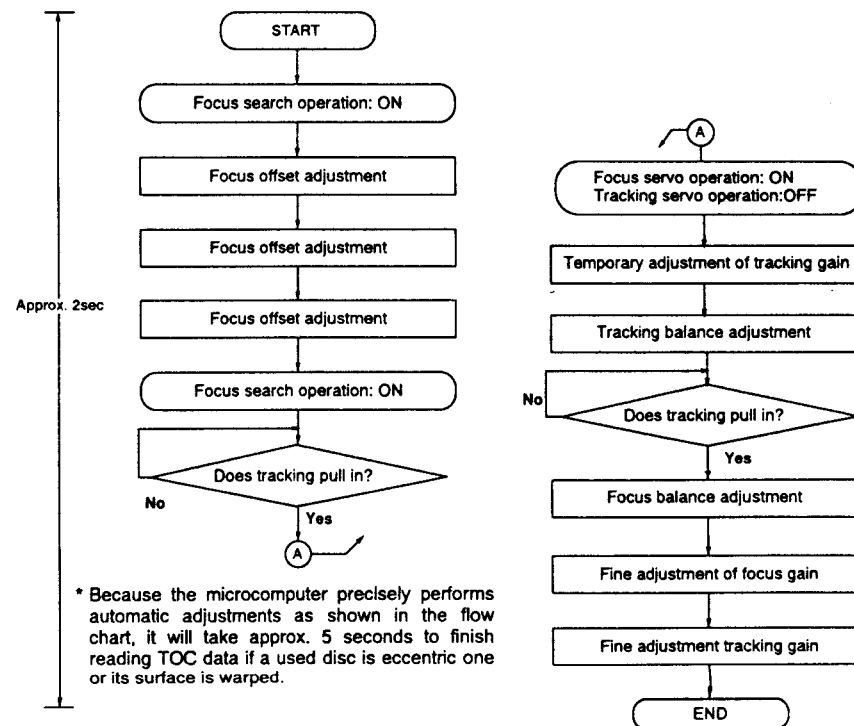

* Because the microcomputer precisely performs automatic adjustments as shown in the flow chart, it will take approx. 5 seconds to finish reading TOC data if a used disc is eccentric one or its surface is warped.

MEASUREMENTS AND ADJUSTMENTS

Warning: This product uses a laser diode. Refer to caution statements on page 2.
ACHTUNG: • Die Lasereinheit nicht zerlegen.
 • Die Lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.

Measuring Instruments and Special Tools

- * Test discs
 1. Playability test disc (SZZP1054C)
 2. Uneven test disc (SZZP1056C)
- * Musical program disc (ordinary)
- * Dual-beam oscilloscope with bandwidth of 30MHz or better (with EXT. trigger and 1:1 probe).
- * Allen wrench (M2.0) (SZZP1101C)
- * Lock paint (RZZ0L01)

PREPARATION

1. Remove the cabinet and front panel ass'y (refer to "disassembly instructions" Ref. No. 1, 2).
2. Set the power switch to ON and press the open/close key to close the loading drawer.
3. Press the play key and when the traverse deck reaches it's height position, set the power switch to OFF.
4. Remove the tray ass'y (refer to "disassembly instructions" Ref. No. 5).
5. Remove the clamp plate, fixed plate, magnet and clumper (refer to "disassembly instructions" Ref. No. 10, 11).
6. Place the test disc and secure it by using clumper ass'y. (Refer to Fig. 1) (refer to "disassembly instructions" Ref. No. 11).
7. Set the unit in the test mode as follows: (hold the **play**, **stop** and **disc 1** keys (3 keys) on and set the power switch to ON.)
8. Press the **play** key and play the test disc.
9. Follow the adjustment procedure.


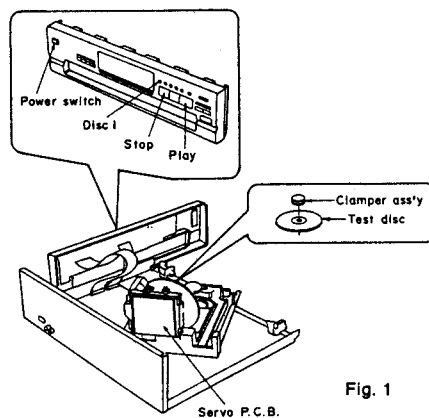


Fig. 1

(1) MECHANICAL ADJUSTMENT

1. Connect the oscilloscope's CH. 1 probe across **TJ701** (RF) and **TJ702** (VREF) on the servo P.C.B. (Refer to Fig. 3 on page 27)
Oscilloscope setting: VOLT 200mV
 SWEEP 0.5 μ s.
 Input coupling..... AC
2. Switch the player power ON, and play track 19 on the test disc (SZZP1056C). (Playing any other track will prevent the HEX screws from being accessed.)
3. Leave the player in play mode and place it as shown Fig. 3.
4. Alternately adjust the two HEX screws with the 2.0mm allen wrench (SZZP1101C) until the vertical fluctuation of RF signal is minimized and the eye pattern is most stretched. (Refer to Fig. 2)
5. After completing the adjustment, lock the HEX screws with lock paint (RZZ0L01).

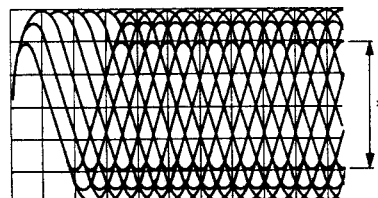

*Most stretched eye pattern.

Fig. 2

(2) CHECK OF PLAY OPERATION AFTER ADJUSTMENT

* Checking Skip Search

1. Play an ordinary musical program disc.
2. Press the skip button to check for normal skip search operation (In both the forward and reverse directions).

* Checking Manual Search

1. Play an ordinary musical program disc.
2. Press the manual search button to check for smooth manual search operations at either low or high speed (in both the forward and reverse directions).

* Checking Playability

1. Play the 0.7mm black dot and the 0.3mm wedge on the playability test disc (SZZP1054C) and verify that no sound skip or noise occurs.
2. Play the middle tracks of the uneven test disc (SZZP1056C) and verify that no sound skip or noise occurs.

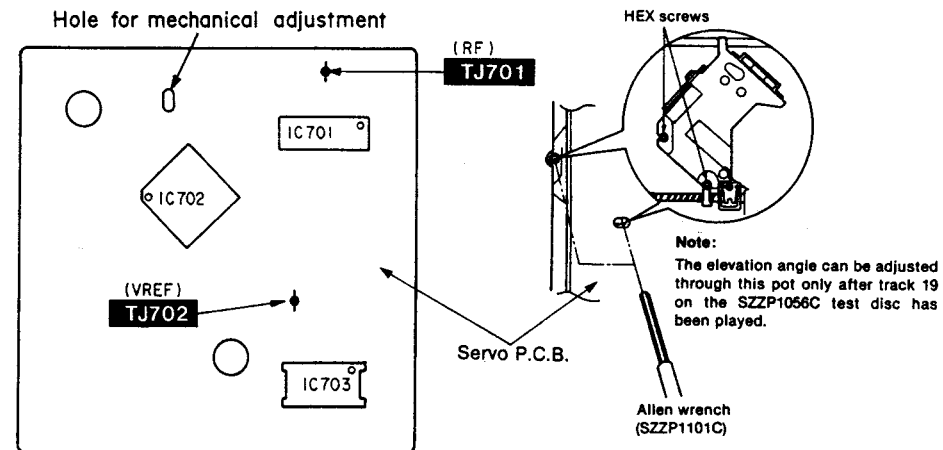


Fig. 3

■ TERMINAL GUIDE

• IC701 (AN8802SCE1V): Servo amp

Pin No.	Mark	I/O Division	Function
1	PDAD	I	Photo detector Bch input without delay
2	PDA	I	Photo detector Ach input without delay
3	LPD	I	Laser PD signal
4	LD	O	Laser power auto control output
5	AMPI	I	RF amp terminal
6	V _{cc}	I	Power supply terminal
7	AMPO	O	RF amp signal
8	CAGC	I	AGC detection capacitor input
9	ARF	O	RF signal
10	CENV	I	RF detect capacitor connection terminal
11	CEA	I	HPF-AMP capacitor connection terminal
12	GND	—	GND terminal
13	LDON	I	LD APC ON/OFF ("H": ON, "L": OFF)
14	TES	I	Tracking error shunt input ("H": shunt)
15	PLAY	I	Play signal ("H": ON, "L": OFF)
16	WVEL	I	Double velocity ("H": double, "L": single)

• IC703 (AN8389SE1): Focus coil/tracking coil/traverse motor/spindle motor drive

Pin No.	Mark	I/O Division	Function
1	V _{cc}	I	Power supply terminal
2	VREF	I	Reference voltage input
3	IN4	I	Motor driver (4) input
4	IN3	I	Motor driver (3) input
5	GND	—	GND terminal
6	NC	—	Not used, connected to GND
7	NRESET	O	Reset terminal
8	GND	—	GND terminal
9	IN2	I	Motor driver (2) input
10	PC2	I	PC2 (power cut) input
11	IN1	I	Motor driver (1) input
12	PC1	I	PC1 (power cut) input (Not used, open)

Pin No.	Mark	I/O Division	Function
17	BDO	O	Dropout detection control
18	/RFDET	O	RF det. signal ("L": det.)
19	CROSS	O	Tracking error zero cross output
20	OFTR	O	Off track detection ("H": det.)
21	VDET	O	Oscillation det. signal ("H": det.)
22	ENV	O	Envelope output terminal
23	TEBPF	I	Oscillation detect input terminal (Not used, open)
24	TE	O	Tracking error signal
25	FE	O	Focusing error signal
26	PTO	O	Potention amp output
27	PTI	I	Potention amp input
28	TBAL	I	Tracking balance adj. input
29	FBAL	I	Focus balance adj. input
30	VREF	O	Reference voltage output
31	PDB	I	Photo detector Ach input with delay
32	PDBD	I	Photo detector Bch input with delay

Pin No.	Mark	I/O Division	Function
13	PV _{cc1}	I	Driver power supply (1)
14	PGND1	—	Driver GND terminal (1)
15	D1-	O	Motor driver (1) output terminal (-)
16	D1+	O	Motor driver (1) output terminal (+)
17	D2-	O	Motor driver (2) output terminal (-)
18	D2+	O	Motor driver (2) output terminal (+)
19	D3-	O	Motor driver (3) output terminal (-)
20	D3+	O	Motor driver (3) output terminal (+)
21	D4-	O	Motor driver (4) output terminal (-)
22	D4+	O	Motor driver (4) output terminal (+)
23	PGND2	—	Driver GND terminal (2)
24	PV _{cc2}	I	Driver power supply (2)

• IC702 (MN66271RA): Servo processor/Digital signal processor/Digital filter/D/A converter

Pin No.	Mark	I/O Division	Function
1	BCLK	O	Serial bit clock terminal
2	LRCK	O	L/R discriminating signal
3	SRDATA	O	Serial data (Not used, open)
4	DV _{DD1}	I	Power supply (digital circuit) terminal
5	DV _{SS1}	—	GND (digital circuit) terminal
6	TX	O	Digital audio interface signal
7	MCLK	I	Command clock signal
8	MDATA	I	Command data signal
9	MLD	I	Command load signal ("L": LOAD)
10	SENSE	O	Sense signal (OFT, FESL, NACEND, NAJEND, POSAD, SFG)
11	/FLOCK	O	Optical servo condition (focus) ("L": lead-in)
12	/TLOCK	O	Optical servo condition (tracking) ("L": lead-in)
13	BLKCK	O	Sub-code block clock (f=75Hz) (Not used, open)
14	SQCK	I	Sub-code Q register clock
15	SUBQ	O	Sub-code Q data
16	DMUTE	I	Muting input ("H": MUTE) (Not used, connected to GND)
17	STAT	O	Status signal (CRC, CUE, CLVS, TTSTOP, FCLV, SQCK)
18	/RST	I	Reset signal ("L": reset)
19	SMCK	O	System clock (f=4.2336MHz) (Not used, open)
20	PMCK	O	Frequency division clock signal (Not used, open) ($f = \frac{1}{1.92} \times ck = 88.2kHz$)
21	TRV	O	Traverse servo control

Pin No.	Mark	I/O Division	Function
22	TVD	O	Traverse drive signal
23	PC	O	Turntable motor drive signal ("L": ON)
24	ECM	O	Turntable motor drive signal (Forced mode)
25	ECS	O	Turntable motor drive signal (Servo error signal)
26	KICK	O	Kick pulse output
27	TRD	O	Tracking drive signal output
28	FOD	O	Focus drive signal output
29	VREF	I	D/A drive output (TVD, ECS, TRD, FOD, FBAL, TBAL) normal voltage input terminal
30	FBAL	O	Focus balance adj. output (Not used, open)
31	TBAL	O	Tracking balance adj. output
32	FE	I	Focus error signal (analog input)
33	TE	I	Tracking error signal (analog input)
34	RFENV	I	RF envelope signal
35	VDET	I	Oscillation det. signal ("H": det.)
36	OFT	I	Off track signal ("H": Off track)
37	TRCRS	I	Track cross signal input
38	/RFDET	I	RF detection signal ("L": detection)
39	BDO	I	Dropout detection signal ("H": dropout)
40	LDON	O	Laser power control ("H": ON)
41	TES	O	Tracking error shunt output ("H": dropout)
42	PLAY	O	Play signal ("H": play)

Pin No.	Mark	I/O Division	Function
43	WVEL	O	Double velocity status signal ("H": double)
44	ARF	I	RF signal input
45	IREF	I	Reference current input
46	DRF	I	DSL bias terminal (Not used, open)
47	DSLFL	I/O	DSL loop filter terminal
48	PLLF	I/O	PLL loop filter terminal
49	VCOF	I/O	VCO loop filter terminal (Not used, open)
50	AV _{DD2}	I	Power supply (analog circuit) terminal (2)
51	AV _{SS2}	—	GND (analog circuit) terminal
52	EFM	O	EFM signal (Not used, open)
53	PCK	O	PLL extract clock (f=4.3218MHz)
54	PDO	O	Phase compared signal of EFM and PCK (Not used, open)
55	SUBC	O	Sub-code serial output data (Not used, open)
56	SBCK	I	Sub-code serial input clock (Not used, connected to GND)
57	V _{SS}	—	GND terminal
58	X1	I	Crystal oscillator terminal (f=16.9344MHz)
59	X2	O	
60	V _{DD}	I	Power supply terminal
61	BYTCK	O	Byte clock signal (Not used, open)
62	/CLDCK	O	Sub-code frame clock signal (f CLDCK=7.35kHz: Normal) (Not used, open)


Pin No.	Mark	I/O Division	Function
63	FCLK	O	Crystal frame clock (Not used, open)
64	IPFLAG	O	Interpolation flag terminal
65	FLAG	O	Flag terminal
66	CLVS	O	Turntable servo phase synch. signal ("H": CLV, "L": Rough servo) (Not used, open)
67	CRC	O	Sub-code CRC check terminal ("H": OK, "L": NG)
68	DEMPPH	O	De-emphasis ON signal ("H": ON) (Not used, open)
69	RESY	O	Re-synchronizing signal of frame sync. (Not used, open)
70	/RST2	I	Reset terminal after "MASH" circuit
71	/TEST	I	Test terminal (Normal: "H")
72	AV _{DD1}	I	Power supply (analog circuit) terminal (1)
73	OUTL	O	Lch audio signal
74	AV _{SS1}	—	GND (analog circuit) terminal (1)
75	OUTR	O	Rch audio signal
76	RSEL	I	Polarity direction control terminal of RF signal
77	CSEL	I	Frequency control terminal of crystal oscillator (Not used, connected to GND)
78	PSEL	I	Test terminal (Normal: "L")
79	MSEL	I	"SMCK" terminal frequency select ("L": SMCK=4.2336MHz)
80	SSEL	I	"SUBQ" terminal mode select ("H": Q code buffer)

• IC401 (UPD78044A058): System control & FL drive

Pin No.	Mark	I/O Division	Function
1 6 7	G7 G1	O	Grid signal of FL display
8	VDD	I	Power supply terminal
9	MCLK	O	Command clock signal
10	MDATA	O	Command data signal
11	MLD	O	Command load signal ("L" LOAD)
12	SENSE	I	Sense signal
13	DMUTE	O	Muting control signal
14	SQCK	O	Sub-code Q register clock
15	NC	—	Not connected
16	SUBQ	I	Sub-code Q data
17	/RESET	I	Reset signal input
18	ZSENSE	—	Not used, connected to GND
19	REC. EN	I	Synchro. rec. control terminal
20	AVSS	—	GND terminal
21	/RSTSV	O	Reset signal output
22	OPEN	I	Open detect terminal
23	DIR	O	Motor control signal
24	TRUN	O	
25	LOAD	O	Motor control signal
26	DAC	O	Not used, open
27	RESTSW	I	Rest position de
28	UP/DOWN	I	Traverse deck up/down det. terminal
29	AVDD	I	Power supply terminal
30	AVREF	I	Power supply terminal
31	XT1	—	Not used, connected to GND

Pin No.	Mark	I/O Division	Function
32	XT2	—	Not used, open
33	VSS	—	GND terminal
34	X1	I	Crystal Osc terminal (F: 4.2336MHz)
35	X2	O	
36 42	KEYIN 7 KEYIN 1	I	Key return signal
43	PWM	O	Motor control signal
44	POFF	I	Power det. terminal
45	POSITION	I	Rotary tray position det. terminal
46	SPEED	I	Loading motor speed sensor signal
47	REMOCON	I	Remote control signal input
48	IC	—	Not used, connected to GND
49	/TLOCK	I	Optical servo condition (tracking) input
50	/FLOCK	I	Optical servo condition (focus) input
51	STAT	I	Status signal (CRC, CUE, CLVS, TTSTOP, FCLV, SQCK)
52	VDD	I	Power supply terminal
53	POWER	O	Power ON/OFF output terminal
54	SYNCHRO	—	Not used, open
55 60	KEYOUT 6 KEYOUT 1	O	Key scan signal
61 70	S16 S7	O	Segment signal of FL display
71	VPP	I	Power supply terminal
72 77	S6 S1	O	Segment signal of FL display
78	EXDATA	O	Not used, open
79	EXCLK	O	Not used, open
80	G8	O	Grid signal of FL display


BLOCK DIAGRAM

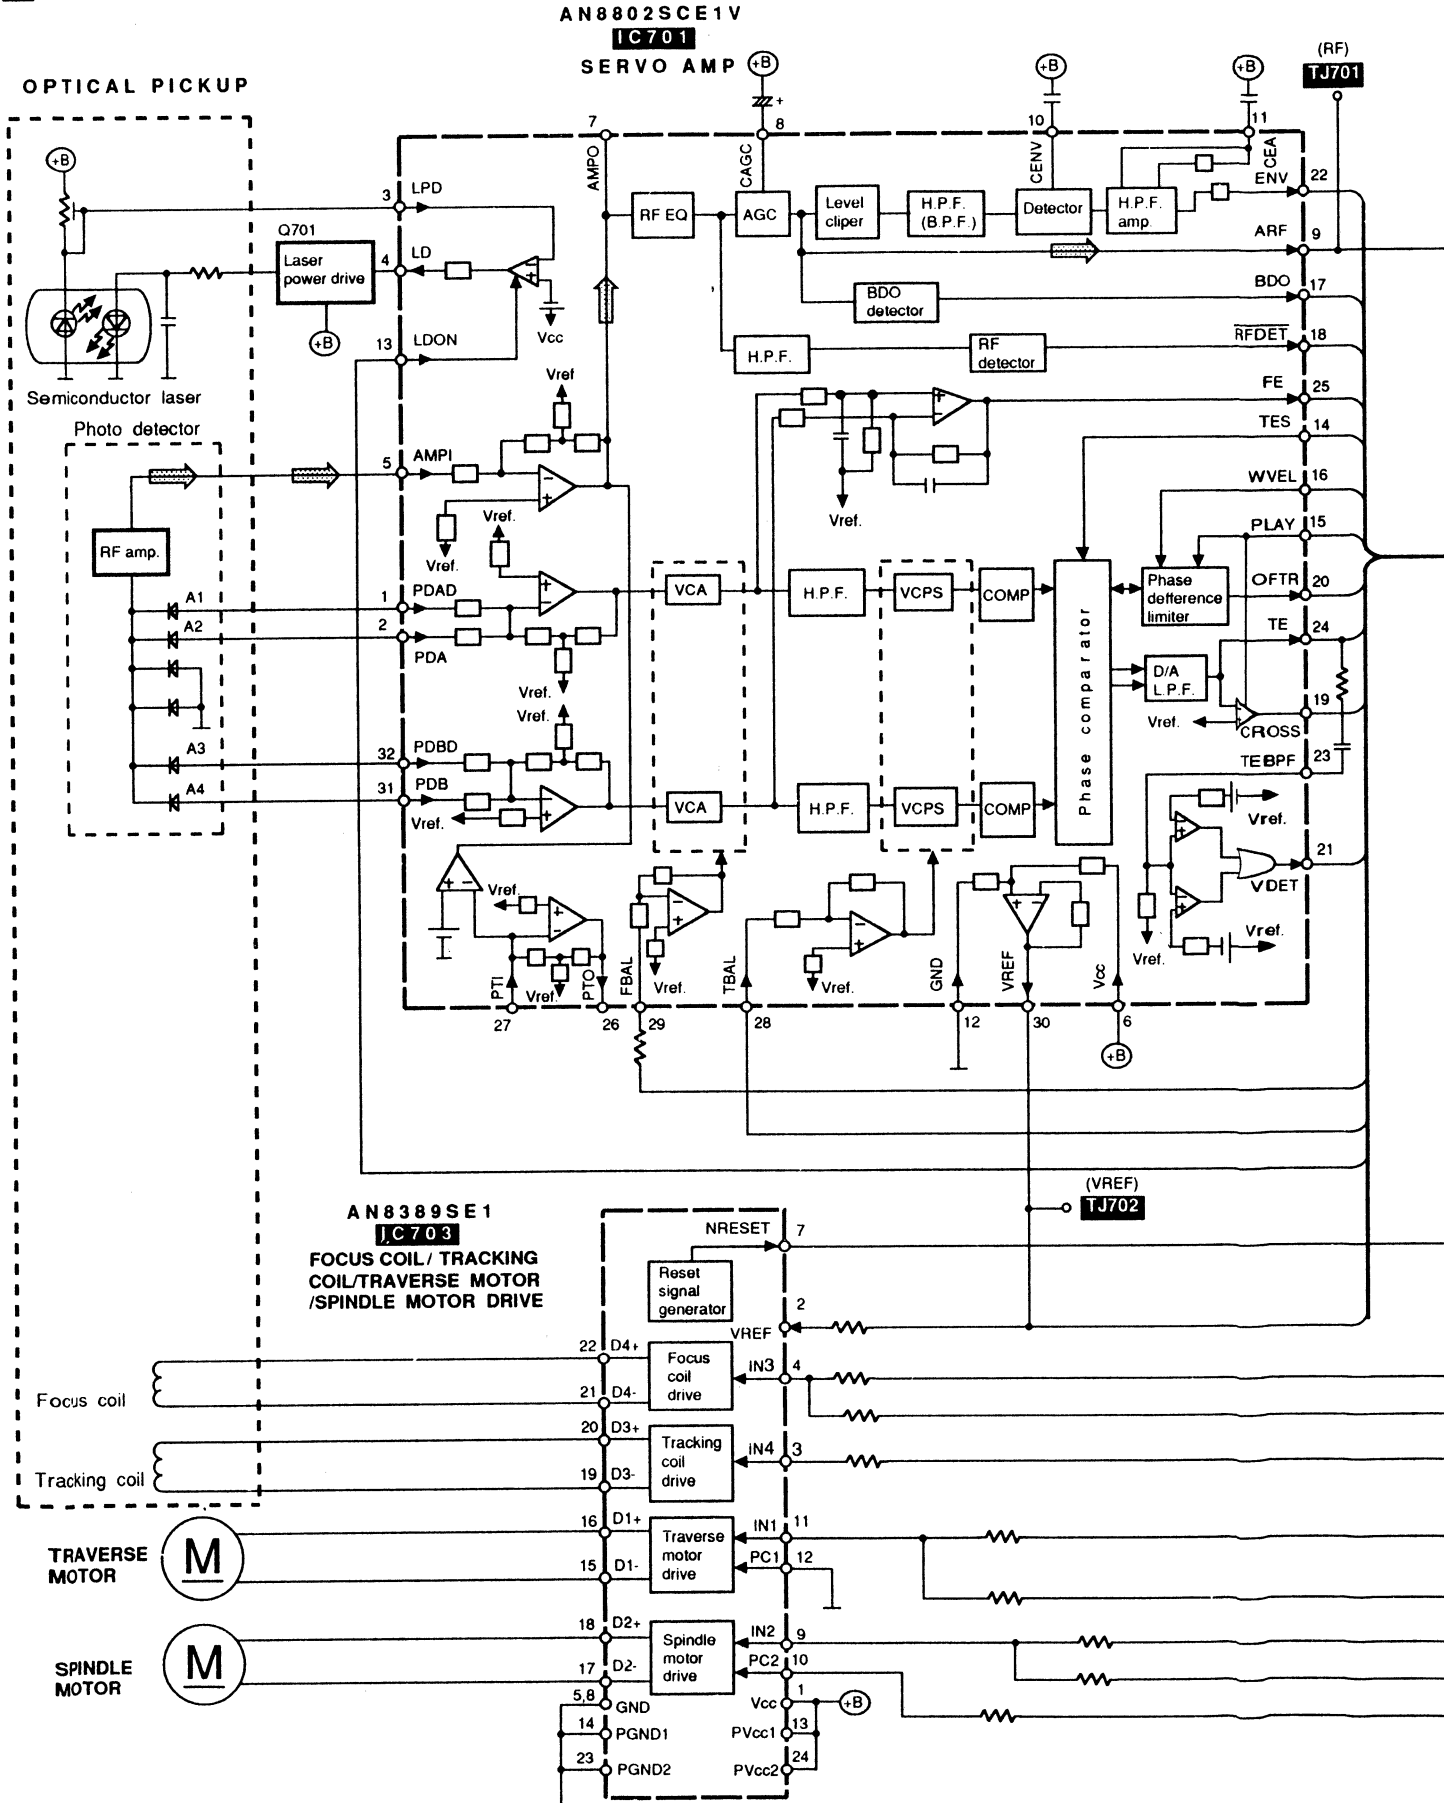


MN66271RA

IC702

SERVO PROCESSOR / DIGITAL SIGNAL PROCESSOR /
DIGITAL FILTER / D/A CONVERTER

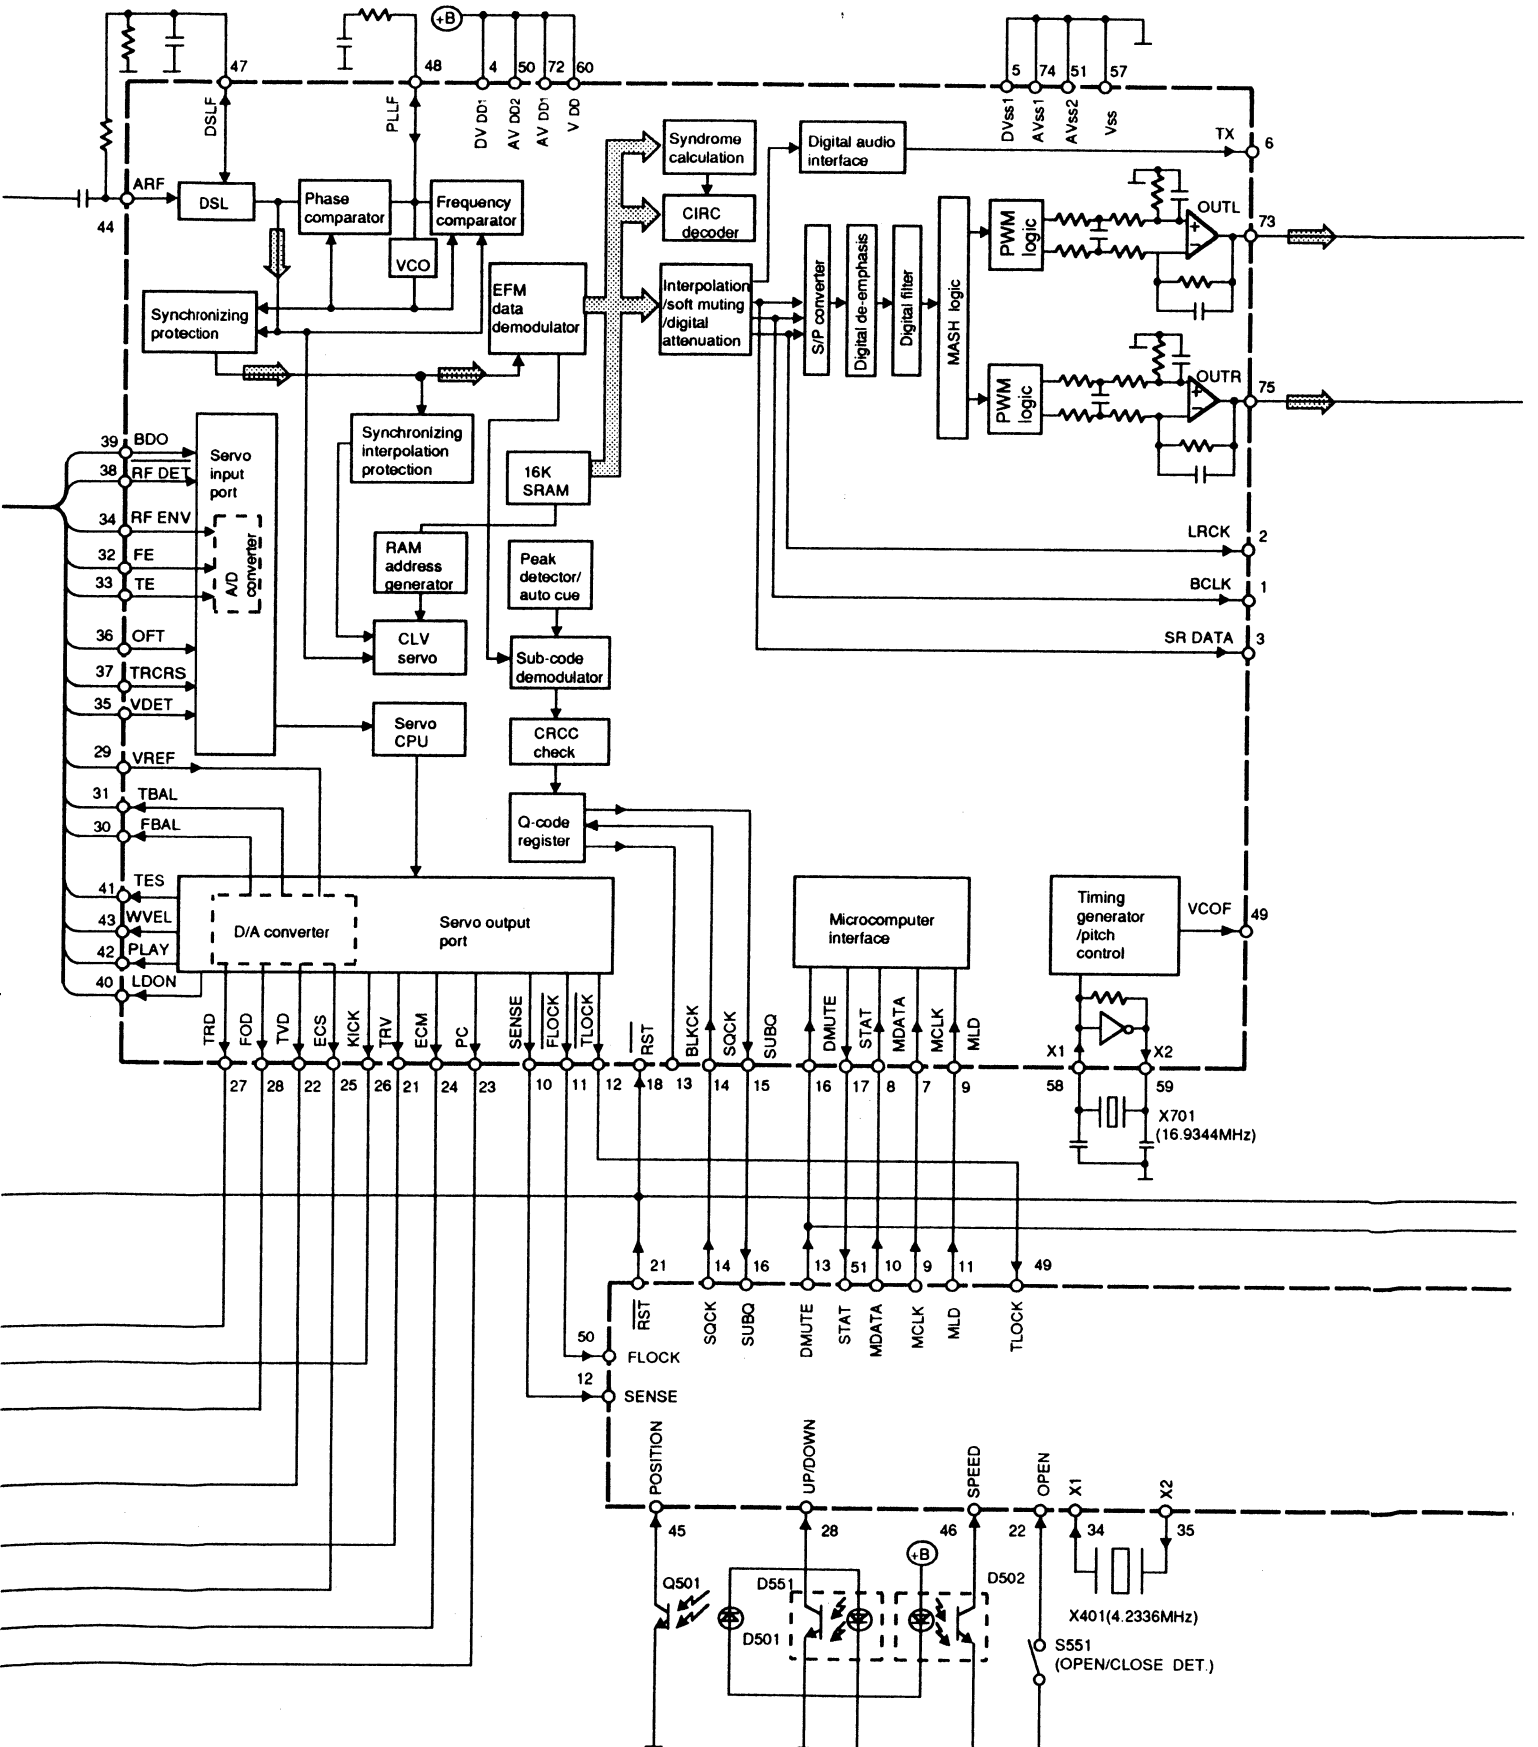

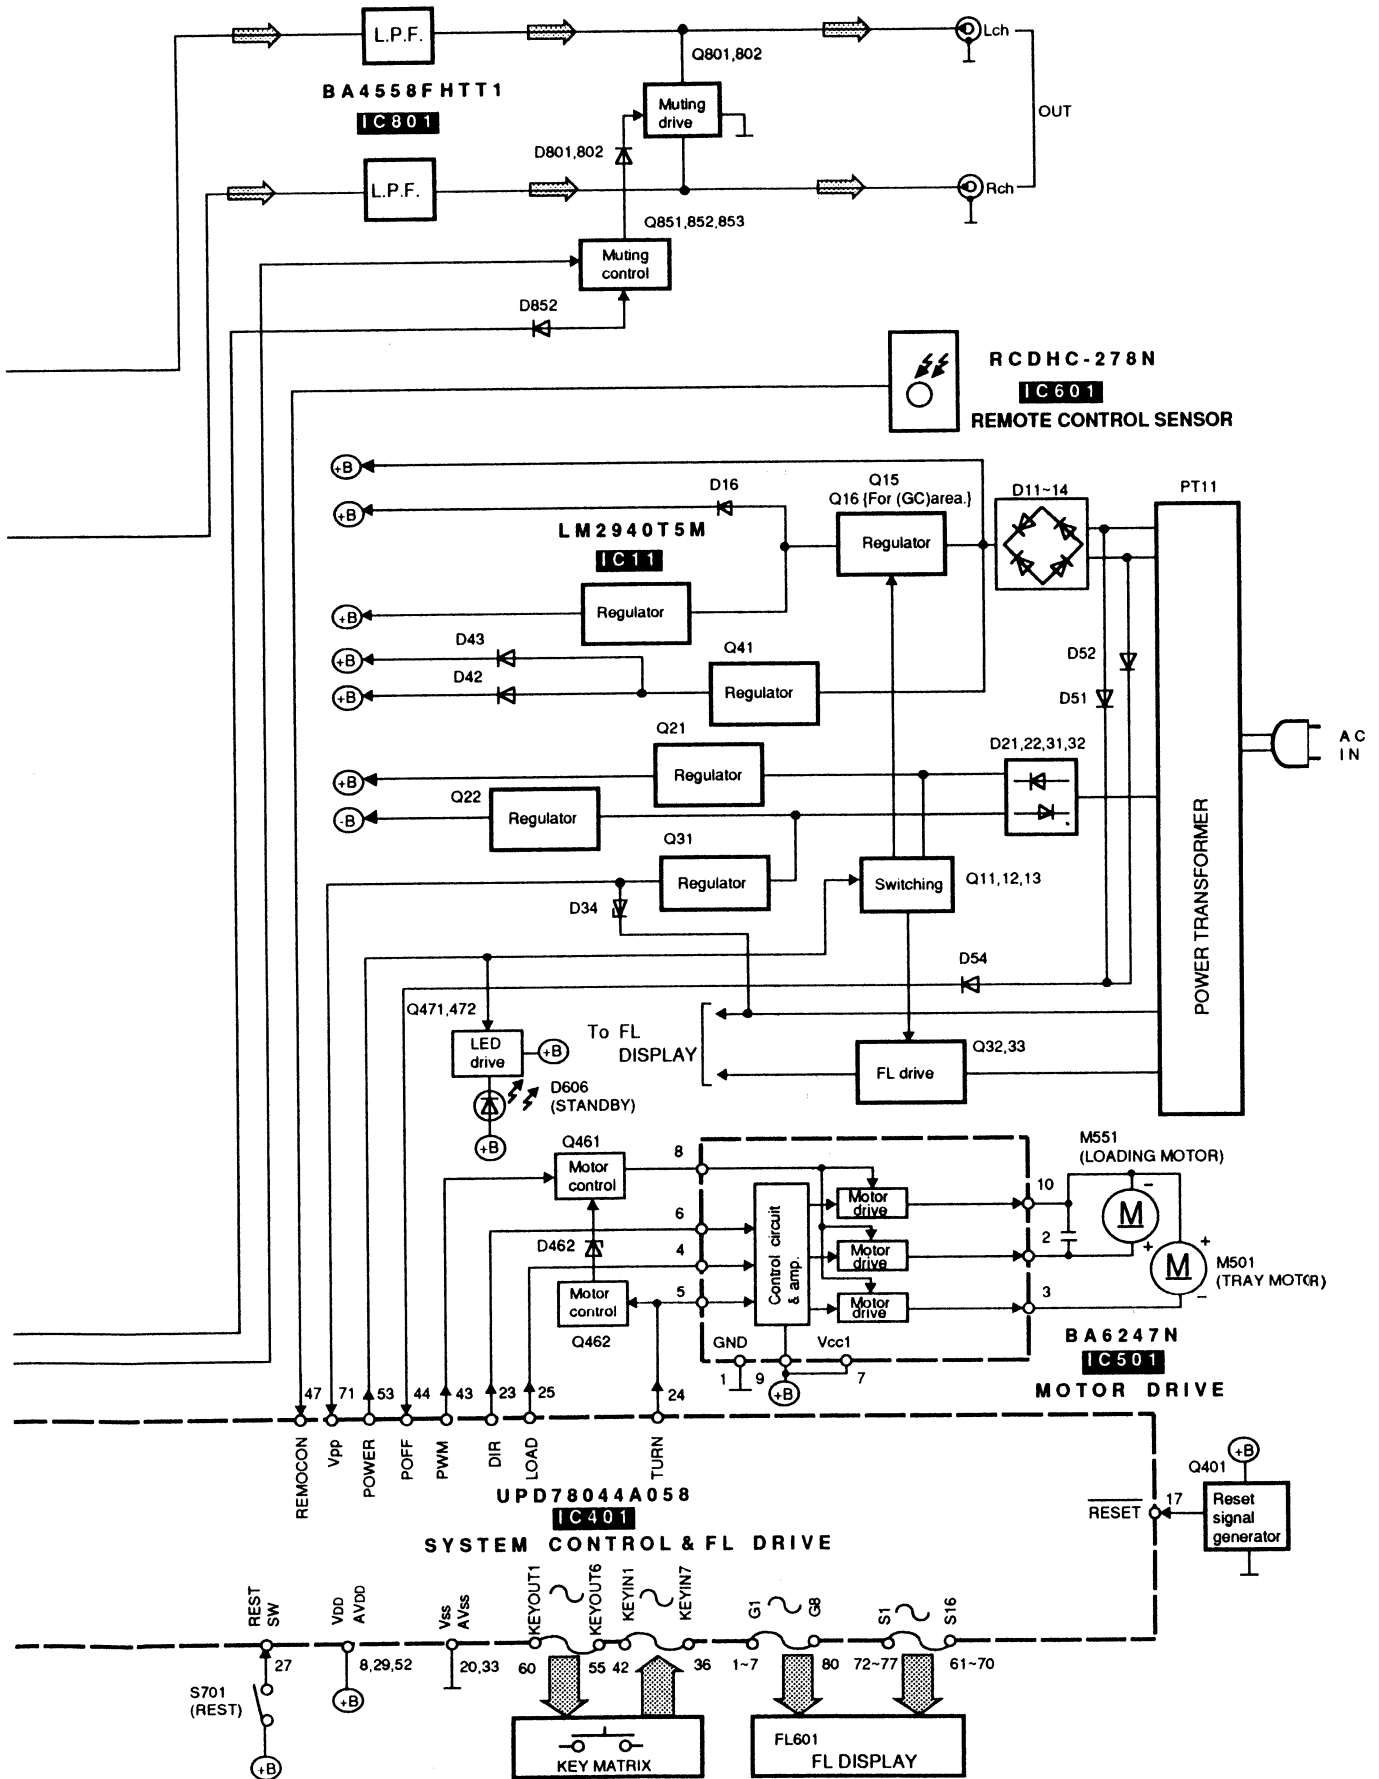

Note:
 Audio signal

■ SCHEMATIC DIAGRAM (Parts list on pages 46, 47, 52, 53.)

(This schematic diagram may be modified at any time with development of new technology.)

- Note:**
- **S11** : Voltage adj. switch in "240V" position.
[For (GC) area only.]
(110V ↔ 127V ↔ 220V ↔ 240V)
 - **S551** : Disc tray "Open/Close" detector switch.
 - **S601** : Time mode (TIME MODE) switch.
 - **S602** : Spiral (SPIRAL) switch.
 - **S603** : Random mode (RANDOM MODE) switch.
 - **S604** : Repeat (REPEAT) switch.
 - **S607** : Stop (■) switch.
 - **S608** : Pause (▣) switch.
 - **S609** : Play (▶) switch.
 - **S610~S614** : Disc (DISC 1~5) switches.
[S610: 1, S611: 2, S612: 3, S613: 4, S614: 5]
 - **S615** : Disc skip (DISC SKIP) switch.
 - **S616** : Program mode (PROGRAM MODE) switch.
 - **S617, 618** : Search (SEARCH) switches.
[S617: ◀◀, S618: ▶▶]
 - **S619, 620** : Skip (SKIP) switches.
[S619: ◀◀, S620: ▶▶]
 - **S621** : Loading drawer open/close
(▲ OPEN/CLOSE) switch.
 - **S631** : Power "STANDBY /ON"
(POWER, STANDBY ON) switch.
 - **S651~S662** : Numeric (1~10, 0, > 10) switches.
S651: (1), S652: (2), S653: (3), S654: (4),
S655: (5), S656: (6), S657: (7), S658: (8),
S659: (9), S660: (10), S661: (> 10), S662: (0)
 - **S701** : Rest detector.
- The voltage value and waveforms are the reference voltage of this unit measured by DC electronic voltmeter (high impedance) and oscilloscope on the basis of chassis.
Accordingly, there may arise some error in voltage values and waveforms depending upon the internal impedance of the tester or the measuring unit.
 - * The parenthesized are the values of voltage generated during playing (Test disc 1kHz, L+R, 0dB), others are voltage values in stop mode.
 - Important safety notice:
Components identified by △ mark have special characteristics important for safety. Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used as occasion calls. When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
 - The supply part number is described alone in the replacement parts.

Part No.	Production Part No.	Supply Part No.
IC11	LM2940T5M	LM2940T5

- ——— / - - - - : Positive voltage lines and negative voltage lines.
- : audio signal lines.

Caution!



- IC and LSI are sensitive to static electricity. Secondary trouble can be prevented by taking care during repair.
- Cover the parts boxes made of plastics with aluminum foil.
 - Ground the soldering iron.
 - Put a conductive mat on the work table.
 - Do not touch the pins of IC or LSI with fingers directly.

• Terminal guide of IC's, transistors and diodes.

<p>BA4558FHTT1</p>	<p>AN8802SCE1V</p>	<p>AN8389SE1</p>	<p>MN66271RA</p>	<p>UPD78044A058</p>	<p>BA6247N</p>
<p>LM2940T5M</p> <p>I. Vin G. GND O. Vout</p>	<p>2SA1309AIQST 2SC3311AIQST 2SD1450RSTTA UN4112AITA UN4114TA UN4212AITA UN4214AITA UN4215TA</p>	<p>2SD2037EFTA</p>	<p>2SB1238QSTV6 2SD1862QRTV6</p>	<p>PT381TB</p> <p>Cathode Anode Ca</p>	
<p>2SB709STW</p>	<p>MA4051MTA MA4062MTA MA4068HTA MA4091MTA MA4056MTA</p> <p>Ca Cathode Anode</p>	<p>MA4100MTA MA4270MTA</p> <p>Ca Cathode Anode</p>	<p>RL1N4003N02</p> <p>Ca Cathode Anode</p>	<p>MA165TA</p> <p>Ca Cathode Anode</p>	
<p>GL380TB</p> <p>Anode Cathode A Ca</p>	<p>RCDHC-278N</p>	<p>RSQGP1S53V</p> <p>Ca Cathode Anode</p>	<p>SG-206S</p> <p>Ca Cathode Anode</p>	<p>LN018304P</p> <p>Anode Cathode A Ca</p>	<p>1SS291TA</p> <p>Ca Cathode Anode</p>

A SERVO CIRCUIT (P.C. Board: on page 43)



OPTICAL PICKUP

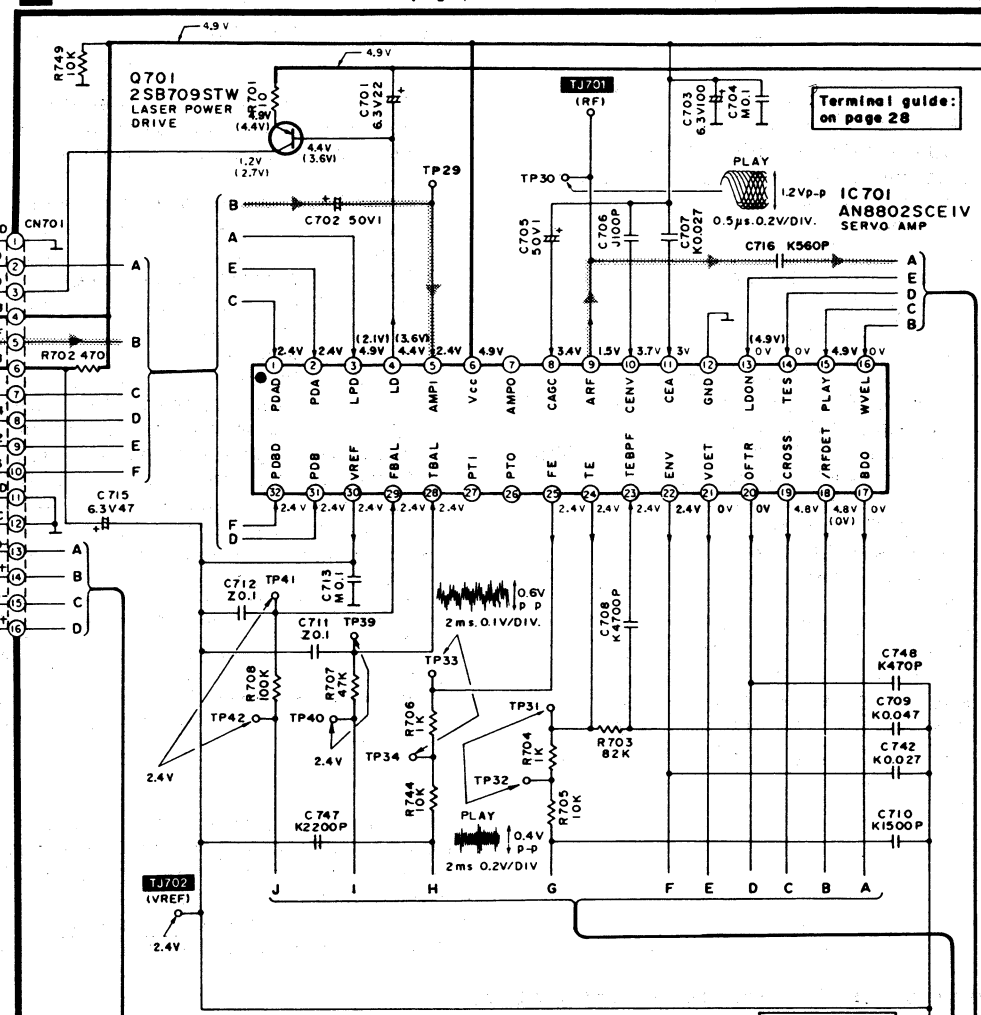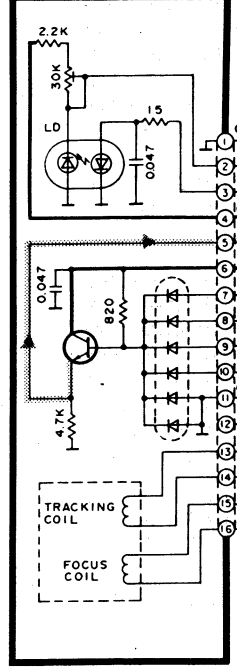


Terminal guide: on page 28

Terminal guide: on pages 29,30


IC702 MN66271RA SERVO PROCESSOR/DIGITAL SIGNAL PROCESSOR/DIGITAL FILTER/D/A CONVERTER

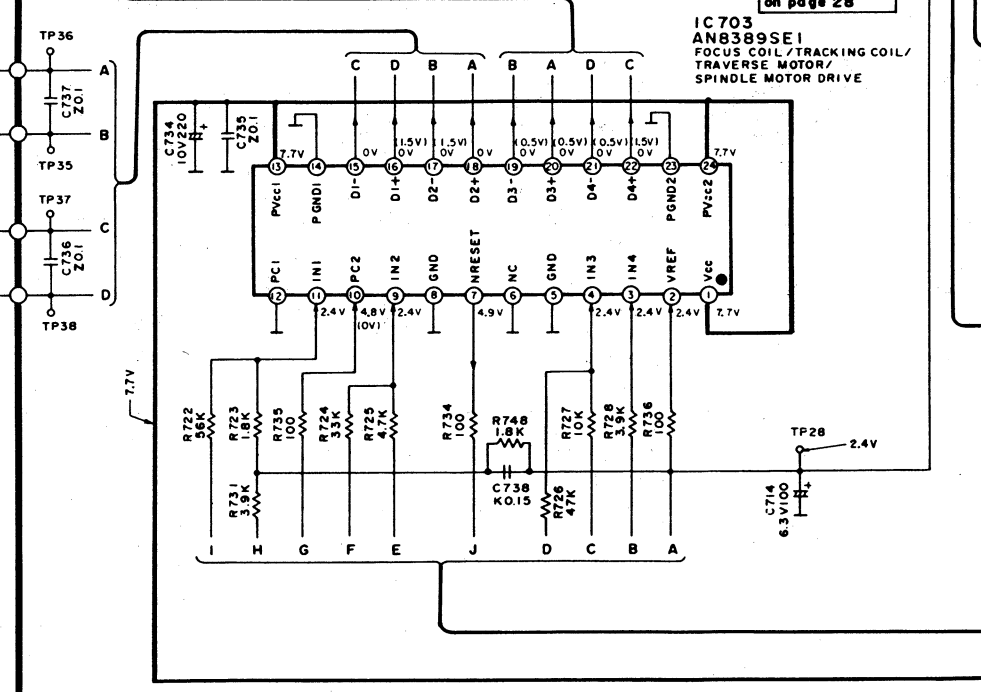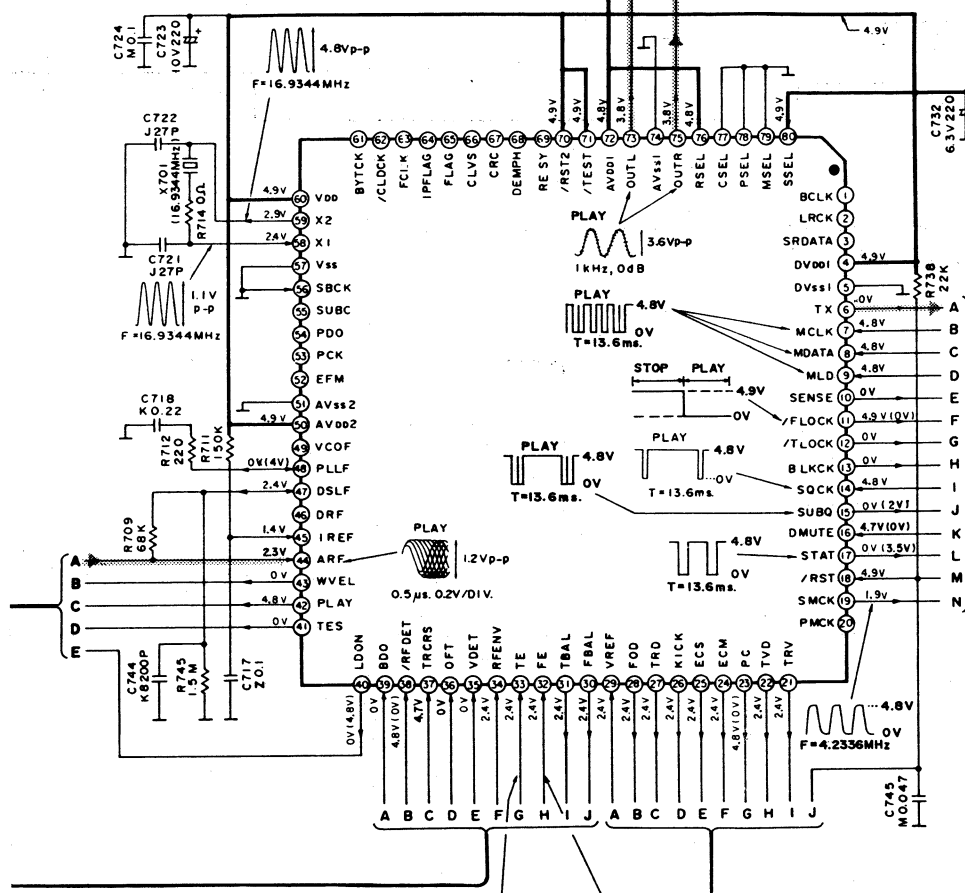

Terminal guide: on page 28

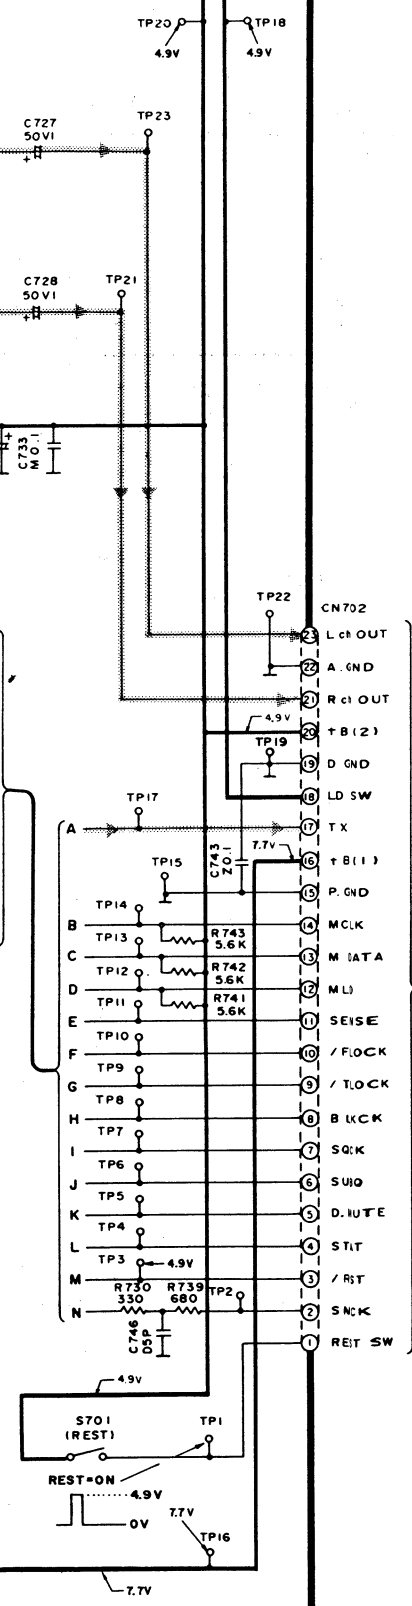


To MAIN CIRCUIT (CN301) on page 39

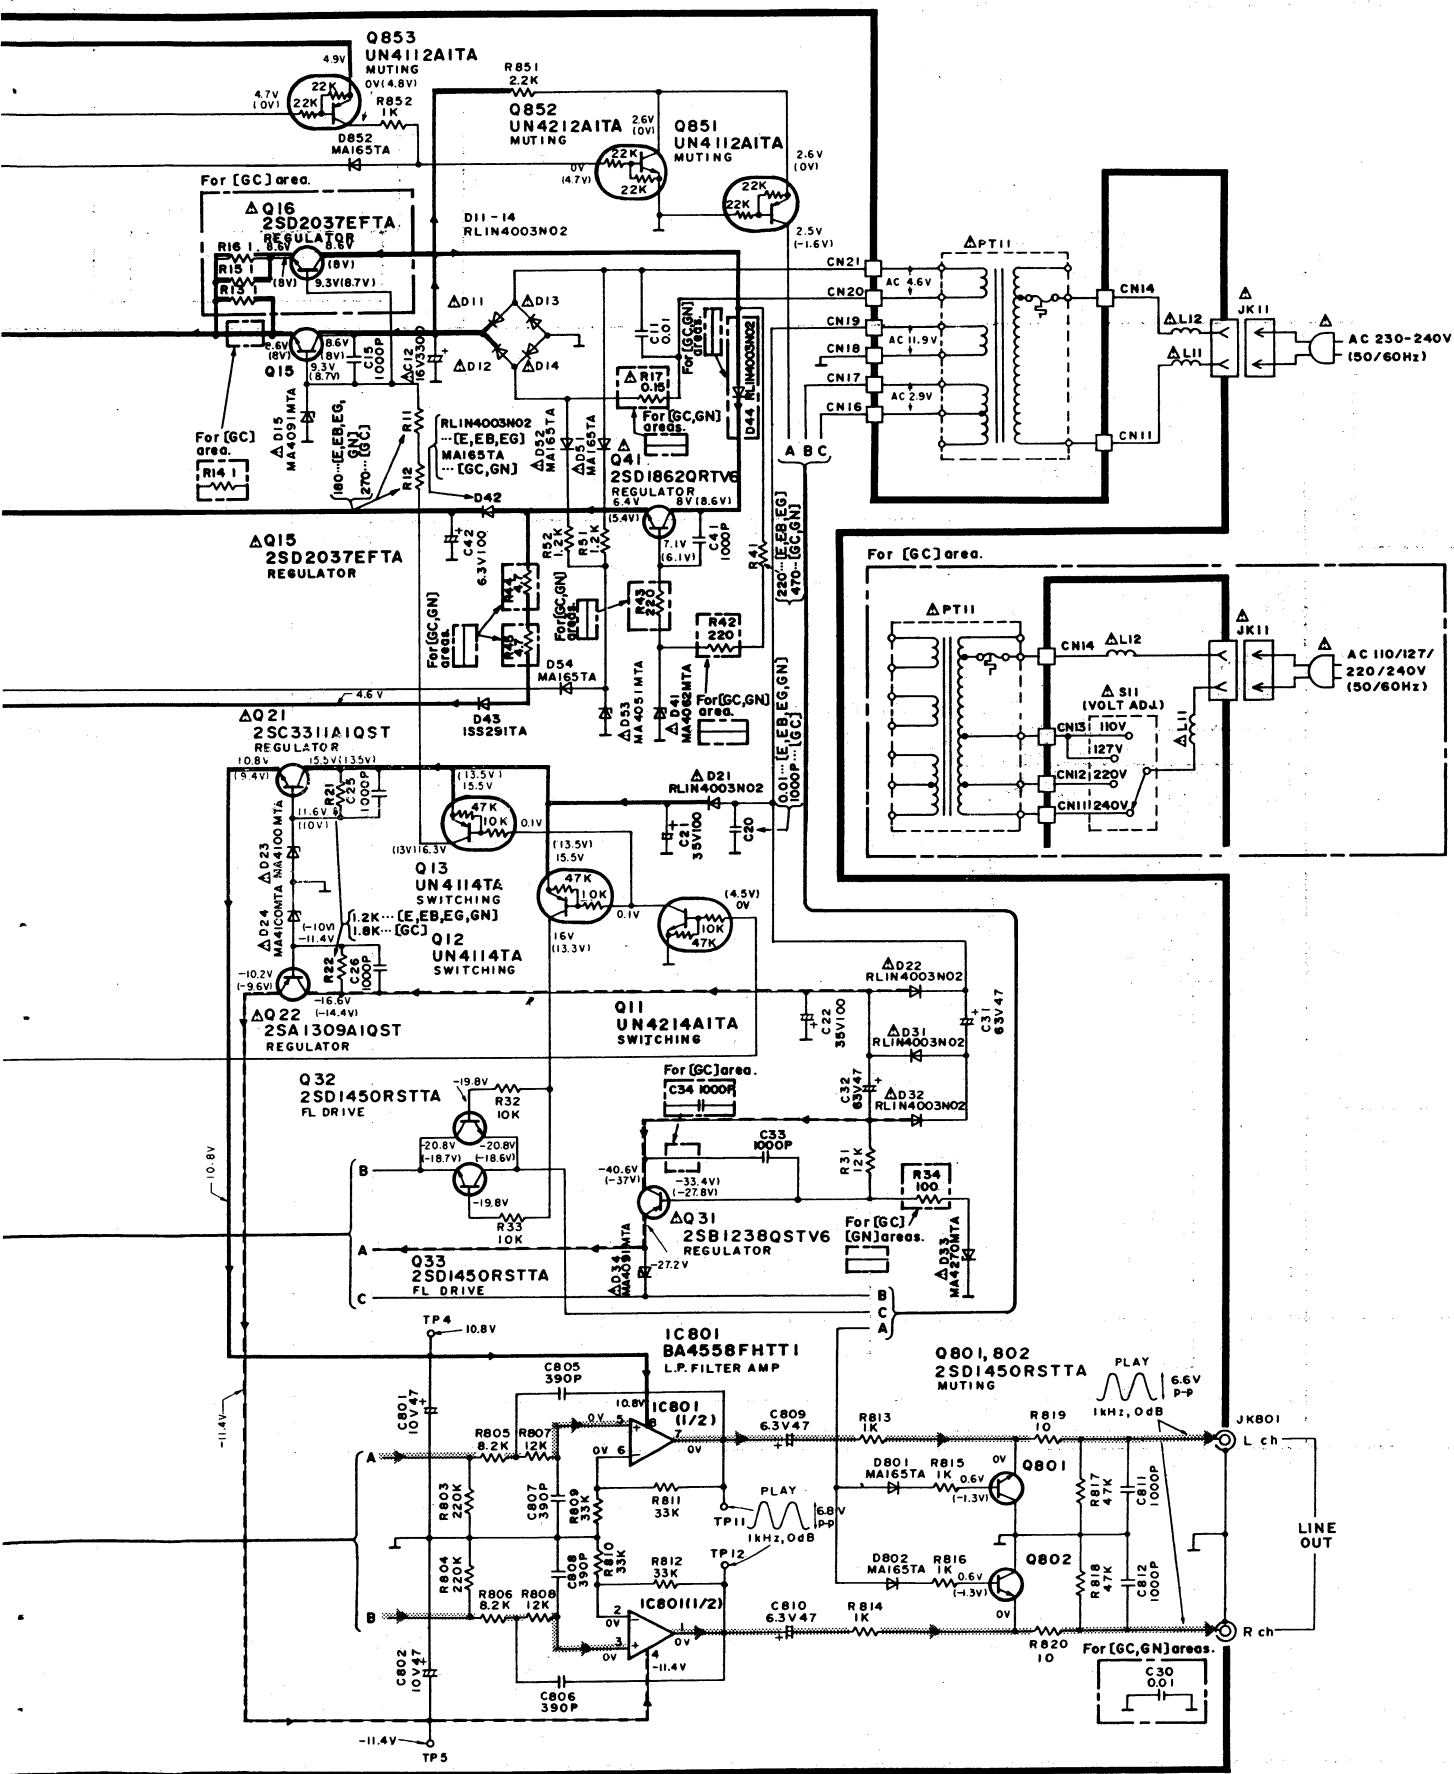


PRINTED CIRCUIT BOARDS

(This printed circuit board diagram may be modified at any time with the development of new technology.)


H MAIN P.C.B. (REP1722B-M... (E, EB, EG)
REP1722C-M... (GN)
REP1722J-M... (GC)

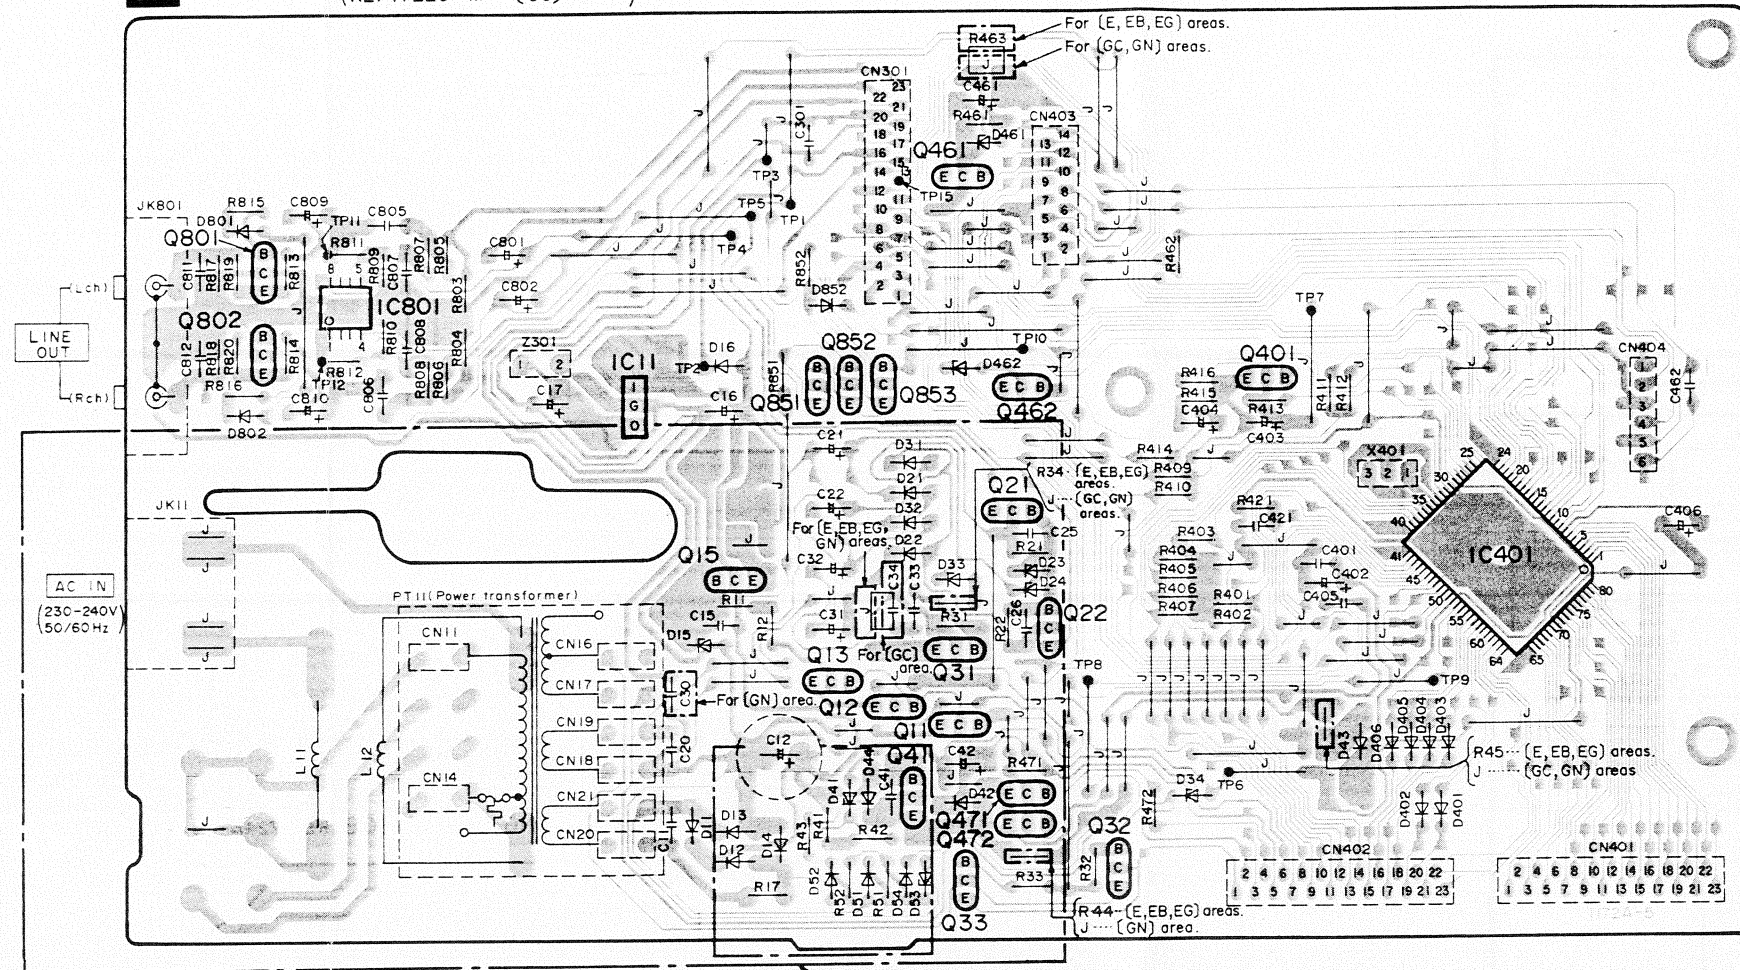


C POWER SWITCH P.C.B. (REP1723C-S)

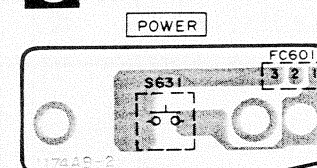


For (GC) area.

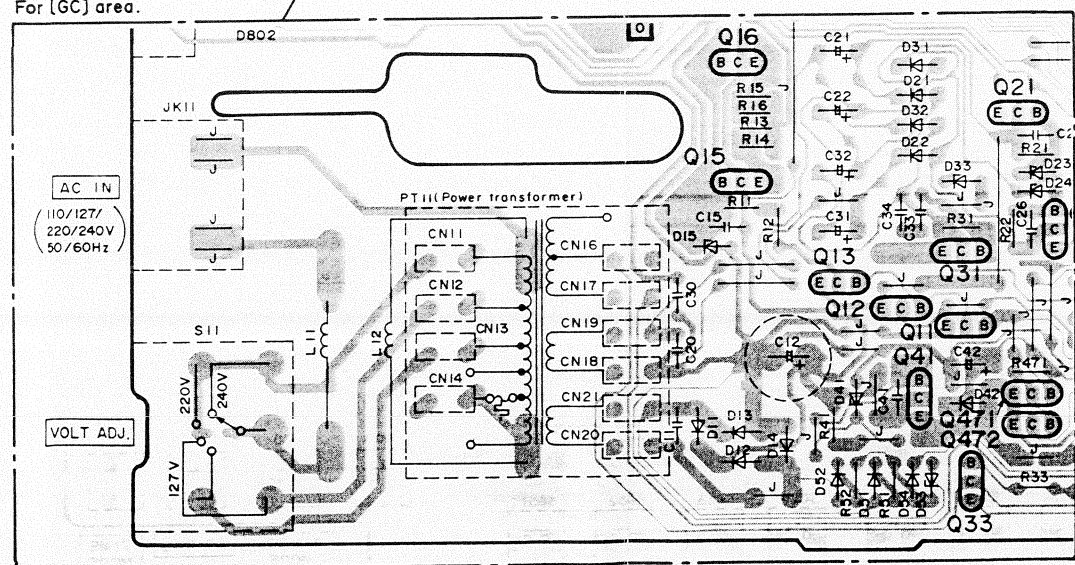


For (GN) area.

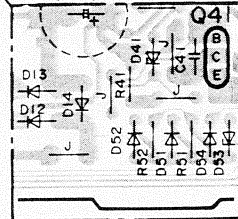


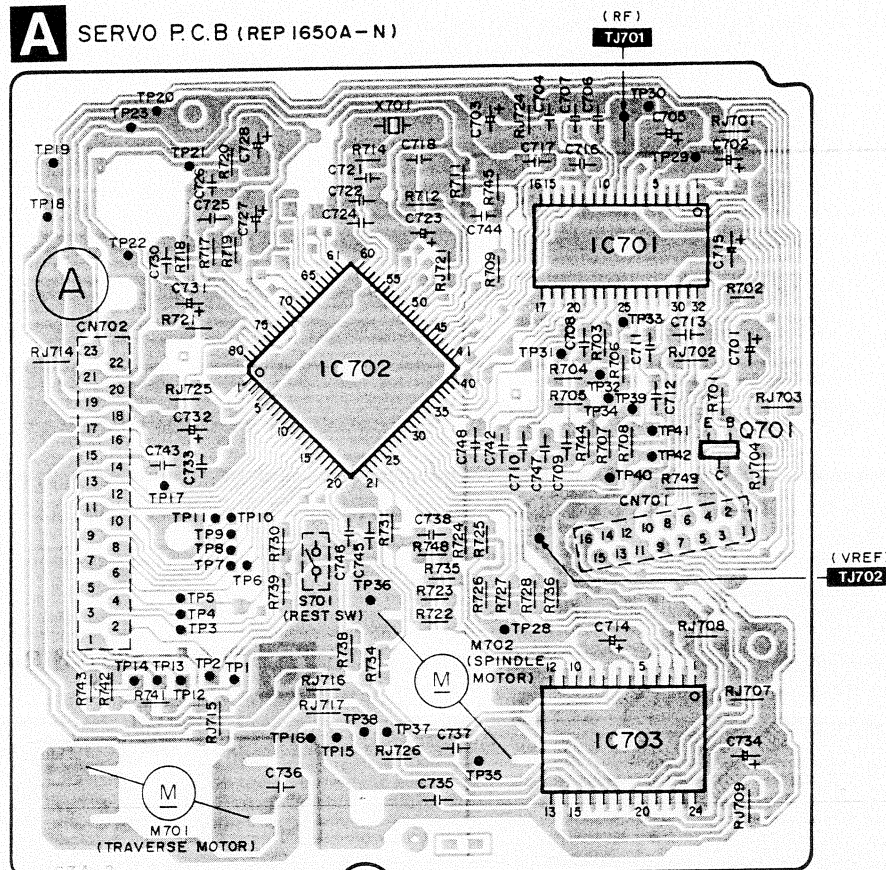

D PHOTO TRANSISTOR P.C.B.(REPI725A-N)

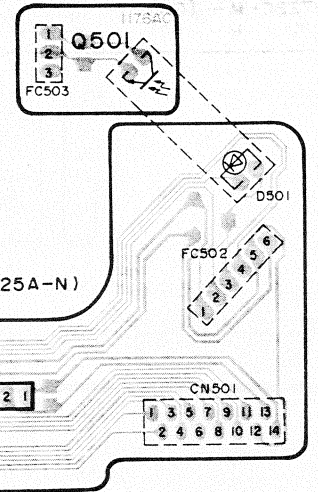


B TRAY MOTOR P.C.B. (REPI725A-N)

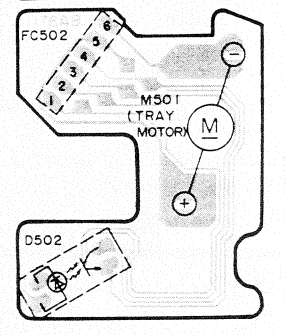


G SENSOR P.C.B.(REPI725A-N)




F LOADING MOTOR P.C.B.(REPI724A-N)

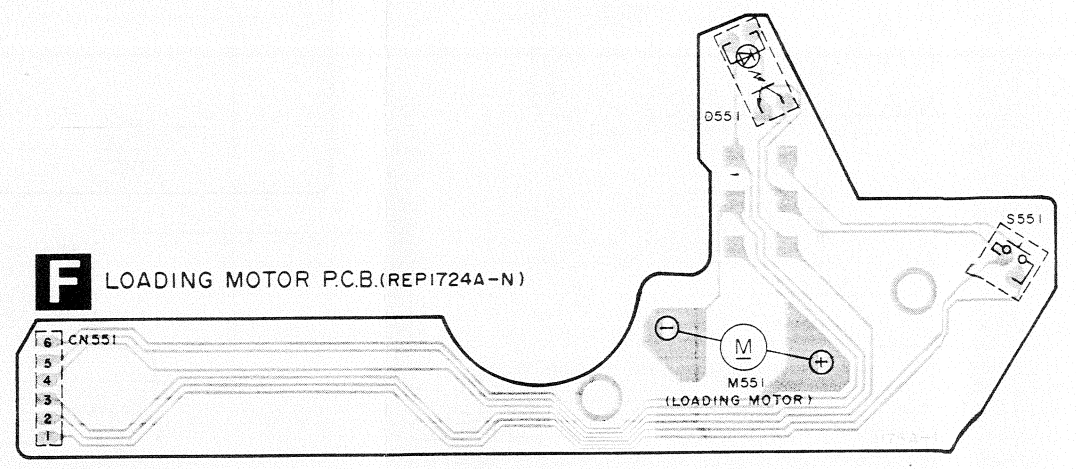

E OPERATION P.C.B.(REPI723C-S)

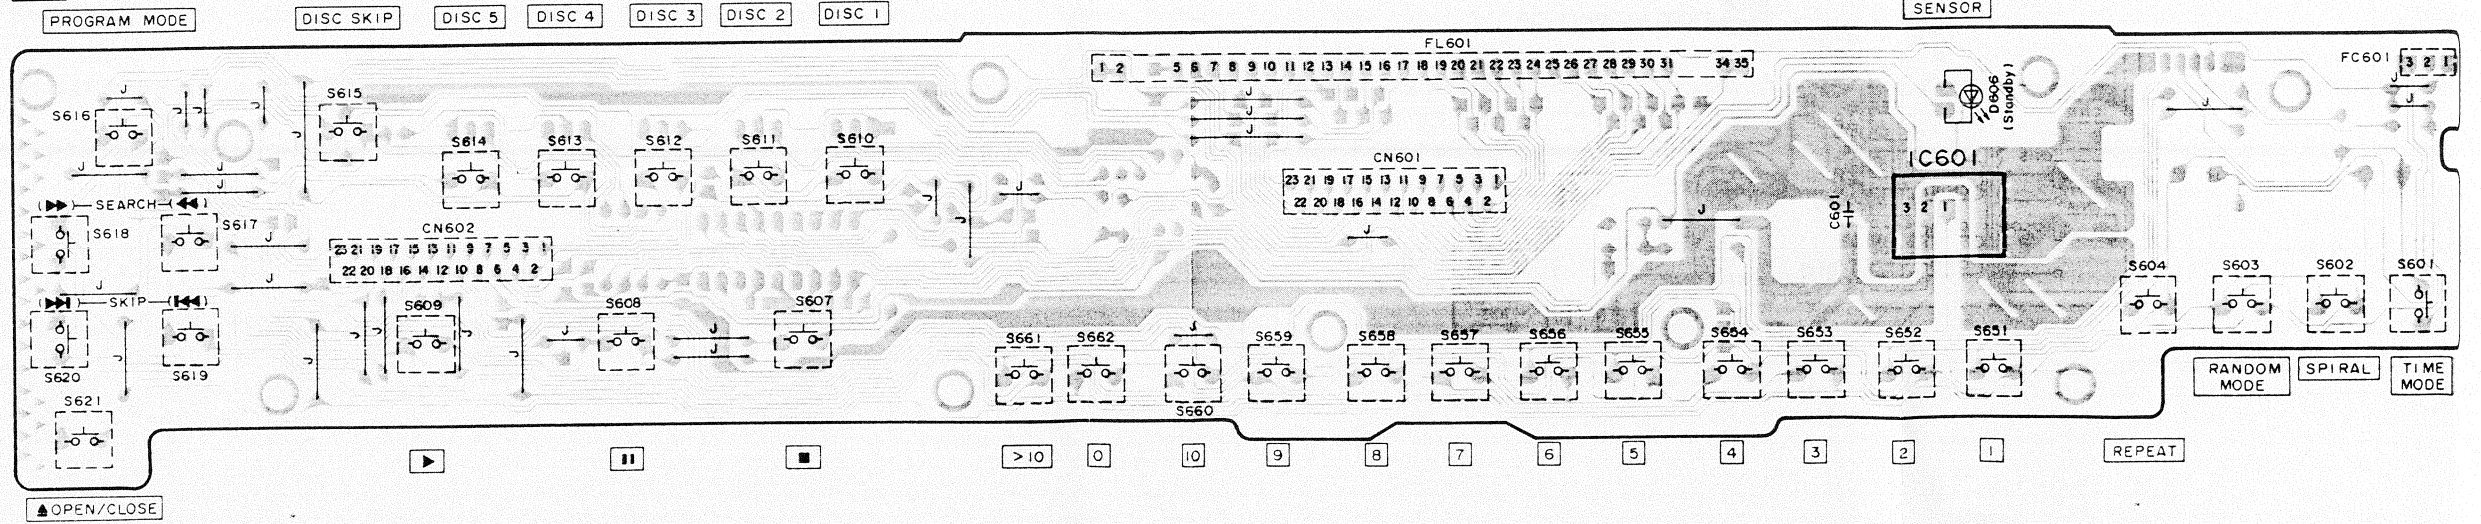

■ WIRING CONNECTION DIAGRAM

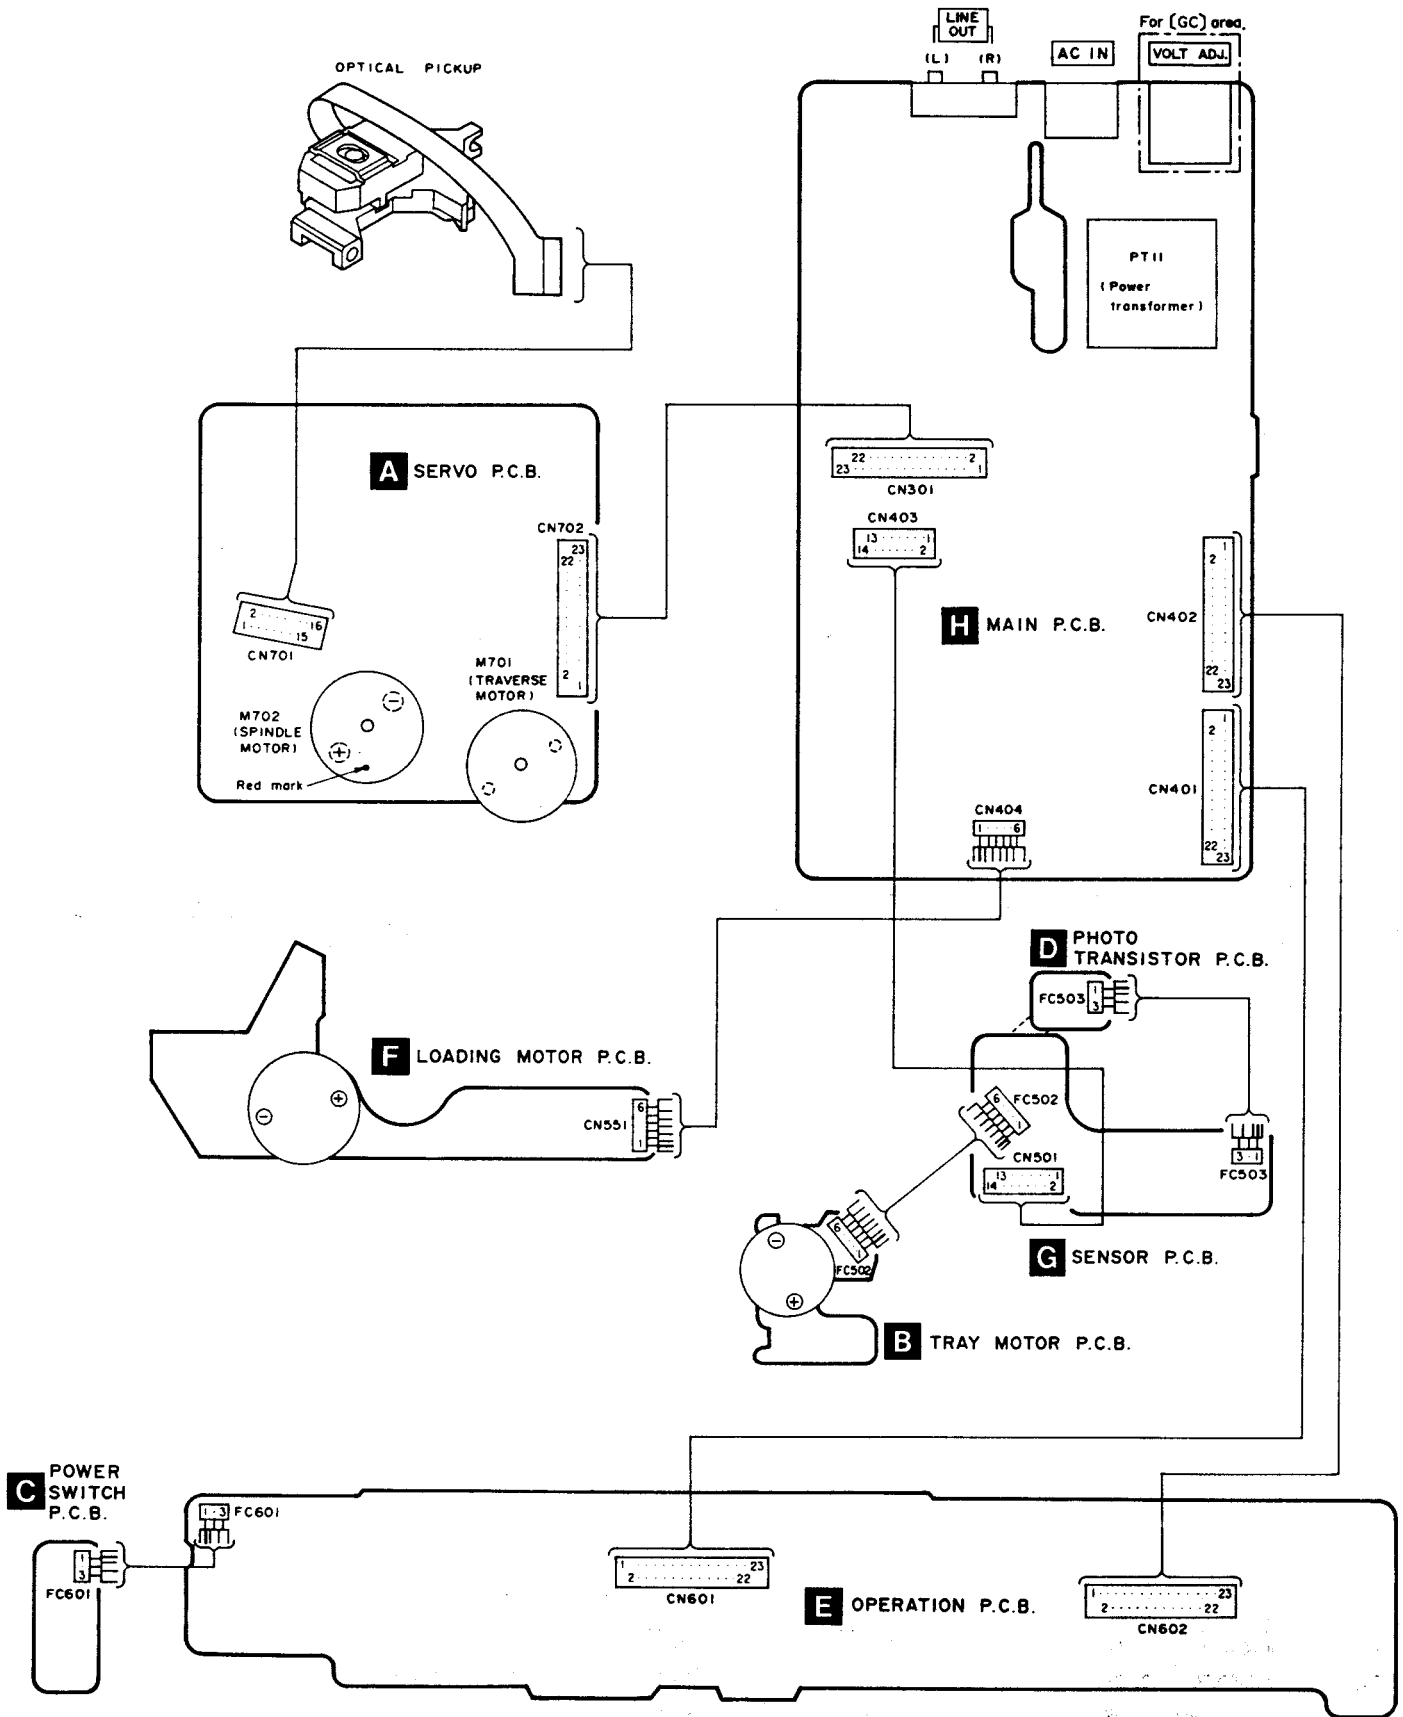

REPLACEMENT PARTS LIST

Notes: *Important safety notice:

 Components identified by Δ mark have special characteristics important for safety.

Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.

When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.

*The parenthesized indications in the Remarks columns specify the areas. (Refer to the cover page for area.)

Parts without these indications can be used for all areas.


*Warning: This product uses a laser diode. Refer to caution statements on page 2.

*ACHTUNG: Die Lasereinheit nicht zerlegen.


Die Lasereinheit darf nur gegen eine vom Hersteller spezifizierte Einheit ausgetauscht werden.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		INTEGRATED CIRCUIT(S)		D44	RL1N4003N02	DIODE	(E, EB, EG)
IC11	LM2940T5	REGULATOR	Δ	D51, 52	MA165	DIODE	Δ
IC401	UPD78044A058	SYSTEM CONTROL&FL DRIVE		D53	MA4051MTA	DIODE	Δ
IC501	BA6247N	MOTOR DRIVE		D54	MA165	DIODE	
IC601	RC4HC-278N	REMOTE CONTROL SENSOR		D401-406	MA165	DIODE	
IC801	BA4558FHIT1	L. P. F.		D461	MA4068HTA	DIODE	
		TRANSISTOR(S)		D462	MA4056MTA	DIODE	
Q11	UN4214TA	TRANSISTOR		D501	GL380TB	L. E. D.	
Q12	UN4114TA	TRANSISTOR		D502	RSQP1553V	DIODE	
Q13	UN4114TA	TRANSISTOR		D551	SG-206S	DIODE	
Q15	2SD2037EFTA	TRANSISTOR	Δ	D606	LN018304P	L. E. D.	
Q16	2SD2037EFTA	TRANSISTOR	(GC) Δ	D801, 802	MA165	DIODE	
Q21	2SC3311A1QST	TRANSISTOR	Δ	D852	MA165	DIODE	
Q22	2SA1309A1QST	TRANSISTOR	Δ			COIL(S)	
Q31	2SB1238QSTV6	TRANSISTOR	Δ	L11, 12	RLQX400MT-D	COIL	Δ
Q32, 33	2SD1450RTA	TRANSISTOR				TRANSFORMER(S)	
Q41	2SD1862QRTV6	TRANSISTOR	Δ	PT11	RTP1K48023-X	POWER TRANSFORMER	(E, EB, EG, GN) Δ
Q401	2SC3311A1QST	TRANSISTOR		PT11	RTP1K4E030-X	POWER TRANSFORMER	(GC) Δ
Q461, 462	UN4215	TRANSISTOR				COMPONENT COMBINATION(S)	
Q471	UN4214TA	TRANSISTOR		Z301	BLO2RN2R65T2	COMBINATION PART	
Q472	2SC3311A1QST	TRANSISTOR				OSCILLATOR(S)	
Q501	PT381TB	TRANSISTOR		X401	RSXY4M23M01T	OSCILLATOR (4.2336MHz)	
Q801, 802	2SD1450RTA	TRANSISTOR				DISPLAY TUBE(S)	
Q851	UN4112	TRANSISTOR		FL601	RSL0170-F	DISPLAY TUBE	
Q852	UN4212TA	TRANSISTOR				SWITCH(ES)	
Q853	UN4112	TRANSISTOR		S11	RSRA003S-1H	VOLTAGE ADJ.	(GC) Δ
		DIODE(S)		S551	RSH1A005	OPEN/CLOSE DETECTOR	
D11-14	RL1N4003N02	DIODE	Δ	S601	EVQ21405R	TIME MODE	
D15	MA4091-M	DIODE	Δ	S602	EVQ21405R	SPIRAL	
D16	RL1N4003N02	DIODE		S603	EVQ21405R	RANDOM MODE	
D21, 22	RL1N4003N02	DIODE	Δ	S604	EVQ21405R	REPEAT	
D23, 24	MA4100MTA	DIODE	Δ	S607	EVQ21405R	STOP	
D31, 32	RL1N4003N02	DIODE	Δ	S608	EVQ21405R	PAUSE	
D33	MA4270	DIODE	Δ				
D34	MA4091-M	DIODE	Δ				
D41	MA4062MTA	DIODE	Δ				
D42	RL1N4003N02	DIODE	(E, EB, EG)				
D42	MA165	DIODE	(GC, GN)				
D43	1SS291TA	DIODE					

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
S609	EVQ21405R	PLAY				(SERVO P.C.B.)	
S610	EVQ21405R	DISC 1				INTEGRATED CIRCUIT(S)	
S611	EVQ21405R	DISC 2					
S612	EVQ21405R	DISC 3					
S613	EVQ21405R	DISC 4		IC701	AN8802SCE1V	SERVO AMP.	
S614	EVQ21405R	DISC 5		IC702	MN66271RA	SERVO PROCESSOR	
S615	EVQ21405R	DISC SKIP		IC703	AN838SE1	MOTOR DRIVE	
S616	EVQ21405R	PROGRAM MODE				TRANSISTOR(S)	
S617	EVQ21405R	R. SEARCH					
S618	EVQ21405R	F. SEARCH					
S619	EVQ21405R	R. SKIP		Q701	2SB709S	TRANSISTOR	
S620	EVQ21405R	F. SKIP				OSCILLATOR(S)	
S621	EVQ21405R	OPEN/CLOSE					
S631	EVQ21405R	POWER					
S651	EVQ21405R	PRESET TUNING 1		X701	RSX216M9M01T	OSCILLATOR (16.934MHz)	
S652	EVQ21405R	PRESET TUNING 2				SWITCH(ES)	
S653	EVQ21405R	PRESET TUNING 3					
S654	EVQ21405R	PRESET TUNING 4					
S655	EVQ21405R	PRESET TUNING 5		S701	RSM006-P	REST DETECTOR	
S656	EVQ21405R	PRESET TUNING 6				CONNECTOR(S) AND SOCKET(S)	
S657	EVQ21405R	PRESET TUNING 7					
S658	EVQ21405R	PRESET TUNING 8					
S659	EVQ21405R	PRESET TUNING 9		CN701	RJU035T016-1	SOCKET (16P)	
S660	EVQ21405R	PRESET TUNING 10		CN702	RJS1A6723-1Q	CONNECTOR (23P)	
S661	EVQ21405R	PRESET TUNING >10					
S662	EVQ21405R	PRESET TUNING 0					
		CONNECTOR(S)					
CN11	RJS1A1101T1	CONNECTOR (1P)					
CN12, 13	RJS1A1101T1	CONNECTOR (1P)	(GC)				
CN14	RJS1A1101T1	CONNECTOR (1P)					
CN16-21	RJS1A1101T1	CONNECTOR (1P)					
CN301	RJS1A6823	CONNECTOR (23P)					
CN401, 402	RJS1A6823	CONNECTOR (23P)					
CN403	RJS1A6814	CONNECTOR (14P)					
CN404	RJS1A6806	CONNECTOR (6P)					
CN501	RJS1A6714	CONNECTOR (14P)					
CN551	RJS2A1506	CONNECTOR (6P)					
CN601, 602	RJS1A6223-1	CONNECTOR (23P)					
		JACK(S)					
JK11	SJS9236	AC INLET	(E, EB, EG, GC) Δ				
JK11	SJS016	AC INLET	(GN) Δ				
JK801	RJH3201N	LINE OUT					
		FLAT CABLE(S)					
FC502	REZ0612	FLAT CABLE (6P)					
FC503	REZ0613	FLAT CABLE (3P)					
FC601	REZ0610	FLAT CABLE (3P)					

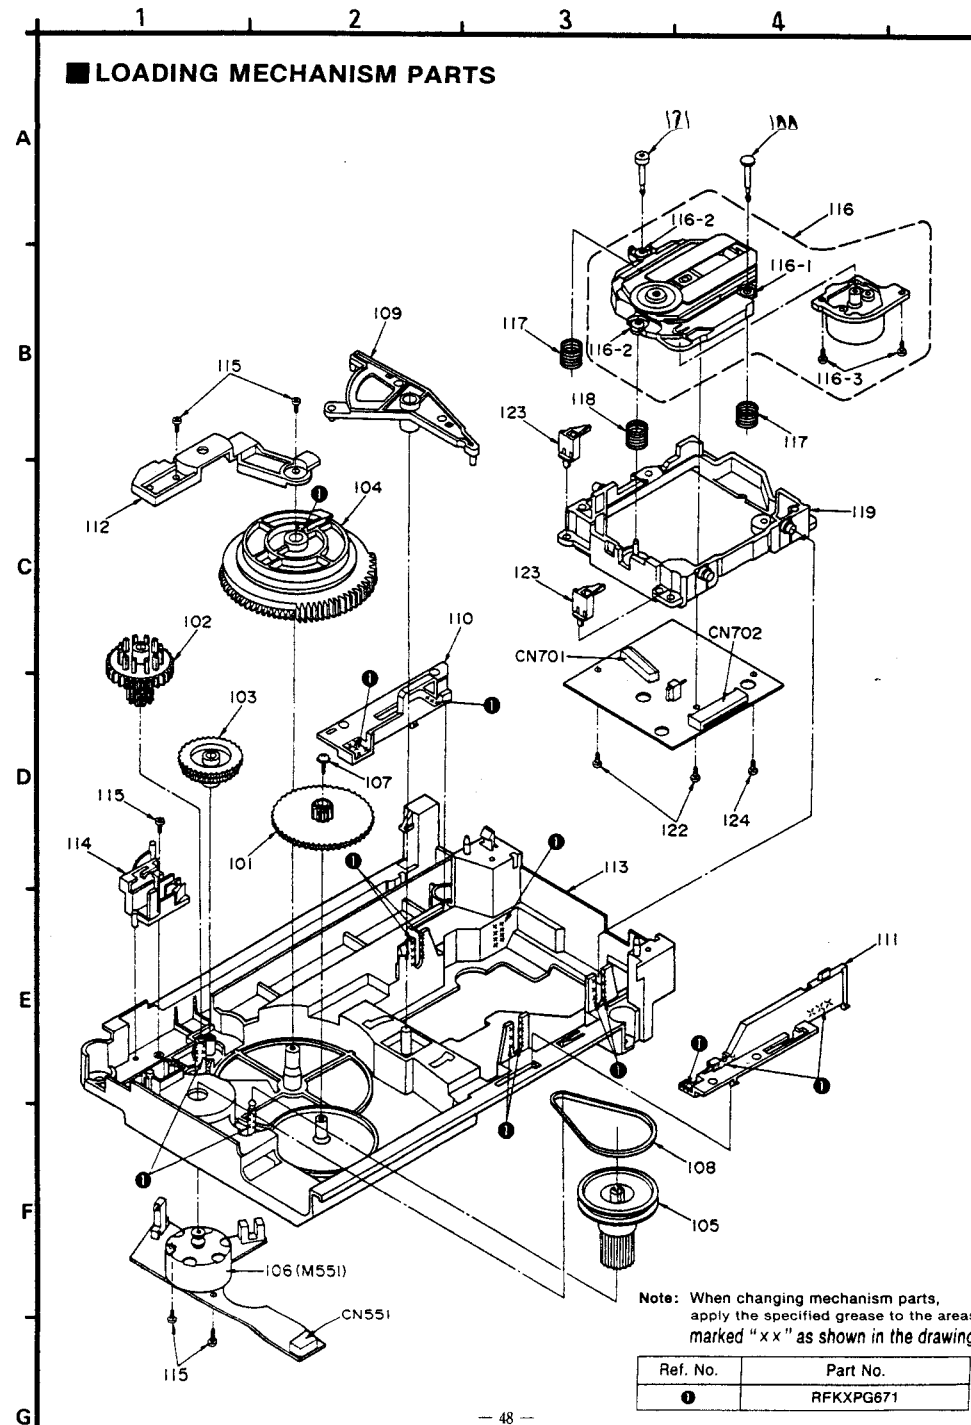

■ CABINET PARTS LOCATION

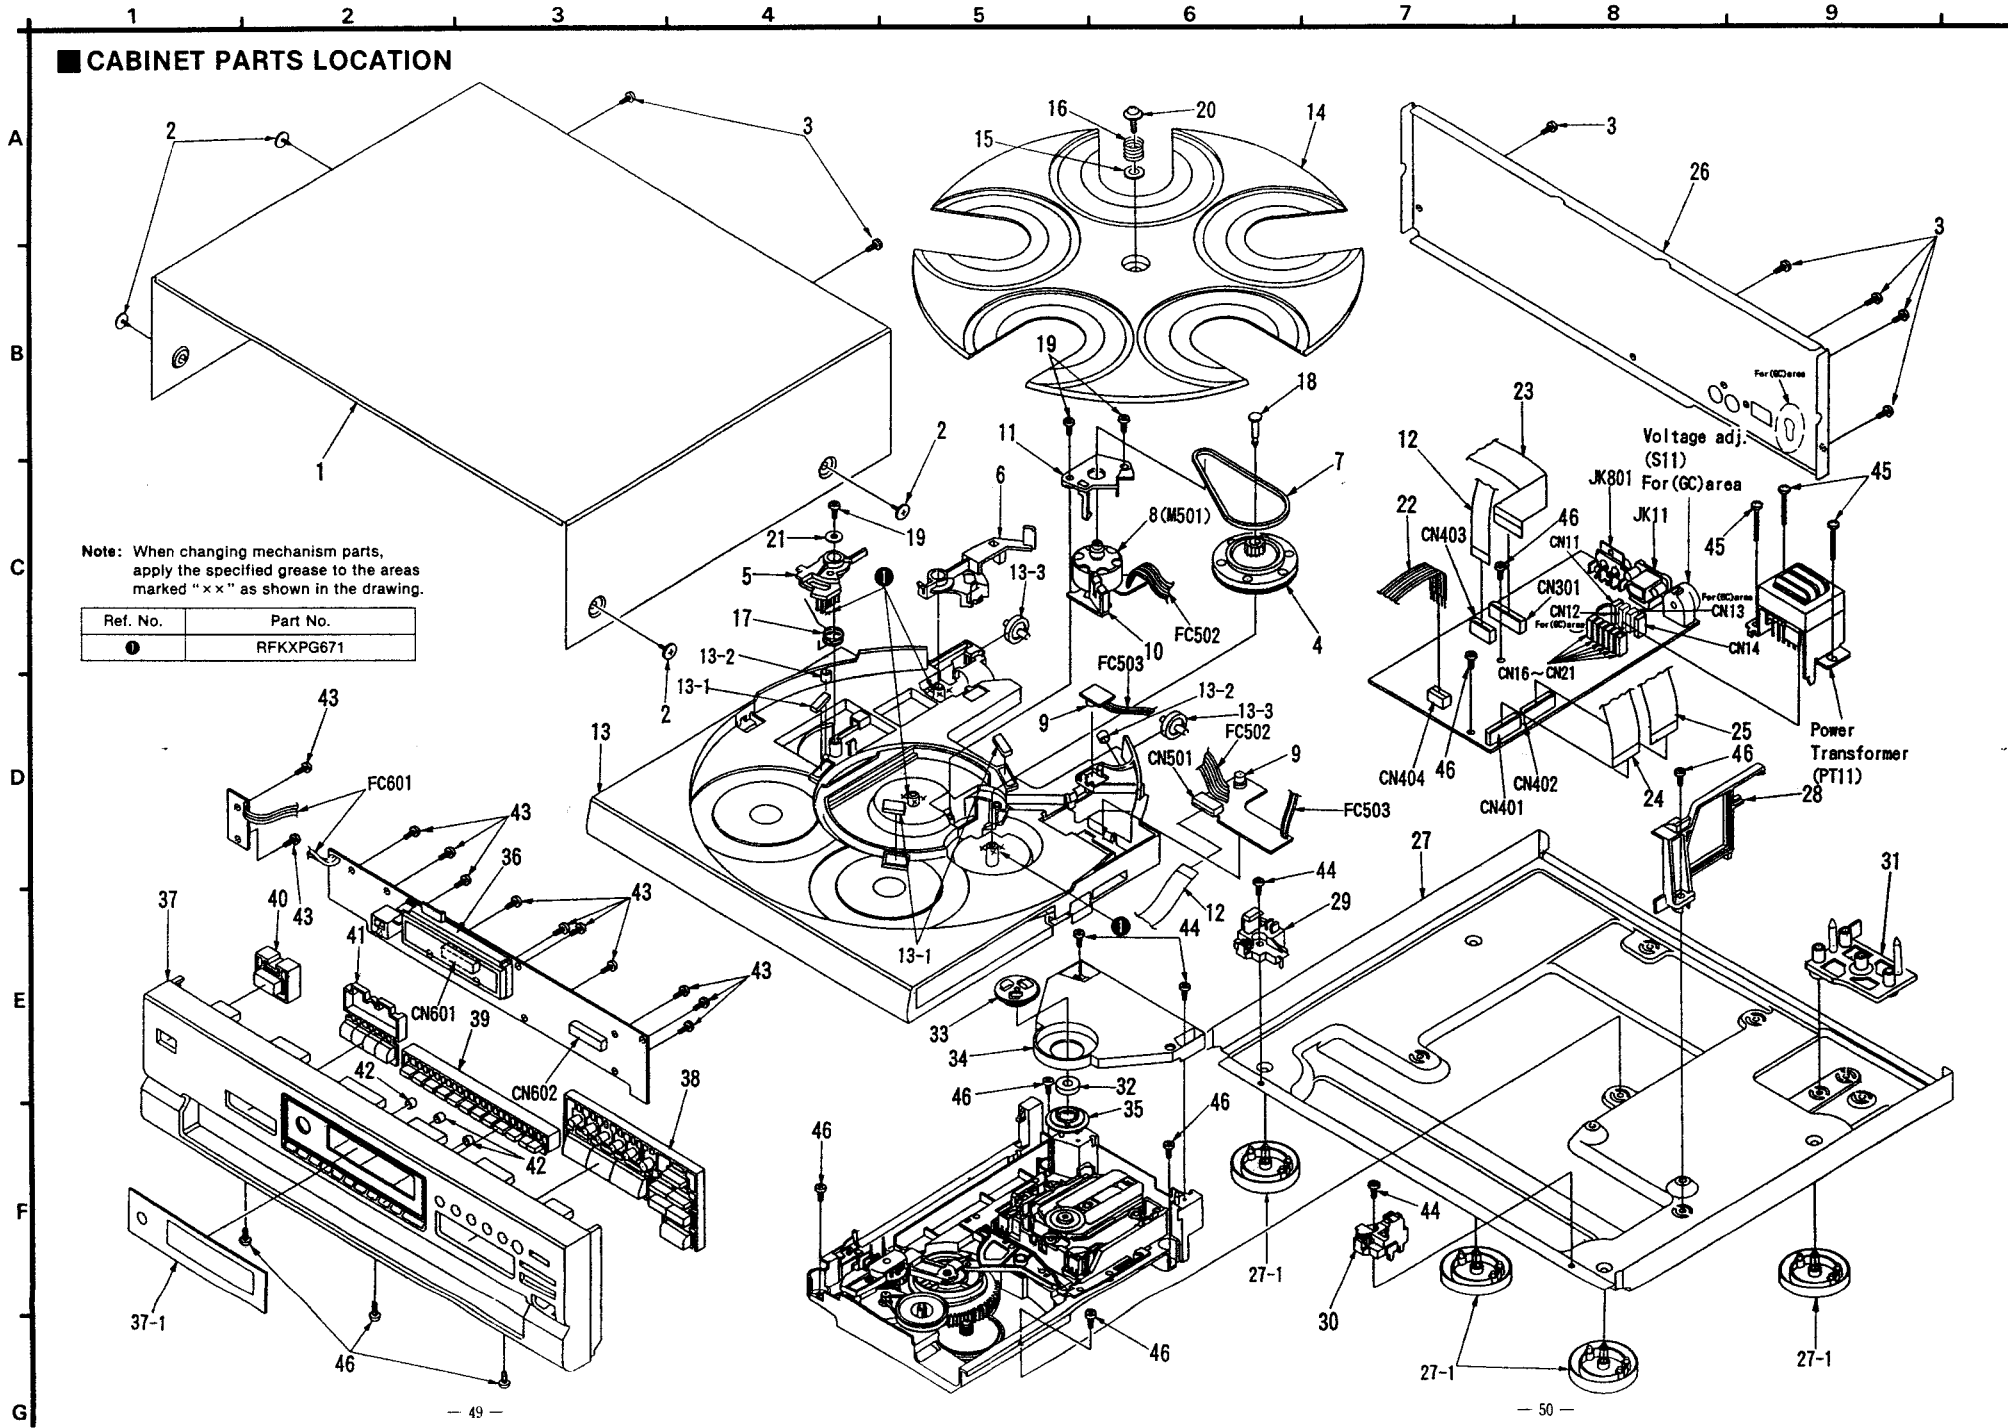

Note: When changing mechanism parts, apply the specified grease to the areas marked "x x" as shown in the drawing.

Ref. No.	Part No.
●	RFKXPG671

REPLACEMENT PARTS LIST

Notes: *The parenthesized indications in the Remarks column specify the areas. (Refer to the cover page for area.)
 Parts without these indications can be used for all areas.
 *Warning: This product uses a laser diode. Refer to caution statements on page 2.
 *ACHTUNG: Die Lasereinheit nicht zerlegen.
 Die Lasereinheit darf nur gegen eine vom Hersteller spezifizierte Einheit ausgetauscht werden.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
		CABINET AND CHASSIS		37-1	RGK0811A-K	FRONT ORNAMENT PLATE	
				38	RGU1016-K1	MAIN BUTTON	
				39	RGU1019-K	10 KEY BUTTON	
1	RMD193-K	CABINET		40	RGU1015-K	POWER BUTTON	
2	SNE2129-3	SCREW		41	RGU1017-K	SUB BUTTON	
3	XTBS3-8JFZ1	SCREW		42	RMG0200	STOPPER TUBE	
4	RDG0267	REDUCTION GEAR		43	XTBS26+8J	SCREW	
5	RDG0268	CLOSE LOCK GEAR		44	XTB3+10JFZ	SCREW	
6	RDG0269-3	OPEN LOCK GEAR		45	XTB3+20J	SCREW	
7	RDV0031	BELT		46	XTB3+8JFZ	SCREW	
8	RFKPLPD667PA	TRAY MOTOR(M501) ASS'Y				LOADING MECHANISM	
9	RMN0254	LED HOLDER(D501, Q501)		101	RDG0270	REDUCTION GEAR	
10	RMN0255	SENSOR HOLDER(D502)		102	RDG0271	DRIVE GEAR(1)	
11	RMN0263	MOTOR HOLDER		103	RDG0272	DRIVE GEAR(2)	
12	REZ0648	FFC(24P)		104	RDH0025	DRIVE CAM	
13	RFKNLPD1000E	TRAY ASS'Y	(E, EB, EG)	105	RDPO050	PULLEY GEAR	
13	RFKNLPD667PA	TRAY ASS'Y	(GC, GN)	106	RFKPLPD667PB	LOADING MOTOR(M51) ASS'Y	
13-1	RFM0182	TRAY FELT		107	RMD26019	SCREW	
13-2	RFM0200	SILENT RUBBER		108	RFM0268-K	BELT	
13-3	RFMD546-W	TRAY ROLLER		109	RFM0334	DRIVE LEVER	
14	RGT0019-1	ROTARY TRAY		110	RFMD117	SLIDE PLATE(1)	
15	RHR01001-1	WASHER		111	RFMD118	SLIDE PLATE(2)	
16	RFM0365	SPRING		112	RFMD746-W	REINFORCING PLATE	
17	RFMD152-2	LOCK GEAR SPRING		113	RFKNLPD667PB	MECHANISM BASE ASS'Y	
18	RFMS123-1	RIVET		114	RFQ0346-1	SLIDER PLATE	
19	XTB3+10G	SCREW		115	XTB3+10JFZ	SCREW	
20	XTWS3+10T	SCREW		116	RAED113Z	TRAVERSE DECK ASS'Y	
21	XWE3D13	SCREW		116-1	SHGD112	FLOATING RUBBER(1)	
22	REZ0623	FLAT CABLE(6P)		116-2	SHGD113-1	FLOATING RUBBER(2)	
23	REZ0635	FFC(23P)		116-3	SNSD38	SCREW	
24	REZ0636	FFC(23P)		117	RFMD109	FLOATING SPRING(1)	
25	REZ0637	FFC(23P)		118	RFMD142	FLOATING SPRING(2)	
26	RGRO184A1C1	REAR PANEL	(E, EG)	119	RFMD698-K	TRAVERSE CHASSIS	
26	RGRO184A1D1	REAR PANEL	(EB, GN)	120	RFMS123-1	TRAVERSE FIXED PIN(1)	
26	RGRO184B1A	REAR PANEL	(GC)	121	RFMS050	TRAVERSE FIXED PIN(2)	
27	RFKJLPD667PK	CHASSIS ASS'Y		122	XTV2+6G	SCREW	
27-1	RKAD053-A	FOOT		123	RFMD094	TRAY HOLDER	
28	RFMD749-W	CABLE HOLDER		124	XTN2+6G	SCREW	
29	RFMD742-K	TRAY BASE GUIDE(L)					
30	RFMD743-K	TRAY BASE GUIDE(R)					
31	RFMD765-W1	TRANSFORMER BASE					
32	RFM245ZA	MAGNET					
33	RFMD334	FIXED PLATE					
34	RFKNLPD667EK	CLAMP PLATE ASS'Y					
35	RFMD761-W	CLAMPER					
36	RFMD185-1	FL HOLDER					
37	RFKJLPD667EK	FRONT PANEL ASS'Y					

RESISTORS AND CAPACITORS

Notes : * Capacity values are in microfarads (uF) unless specified otherwise, P = Pico-farads (pF) F = Farads (F)
 * Resistance values are in ohms, unless specified otherwise, 1 K = 1,000 (OHM), 1 M = 1,000k (OHM)

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
RESISTORS								
R11, 12	ERDSZTJ181T	1/4W 180 E, EB, EG, GN	C16	ECA1J471B	10V 470U	R727	ERJ6GEYJ103V	1/10W 10K
R11, 12	ERDSZTJ271	1/4W 270 GC	C17	RCE0JKA101BV	6.3V 100U	R728	ERJ6GEYJ392V	1/10W 3.9K
R13-16	ERDSZTJ180	1/4W 1.0 GC	C20	ECBT1E103ZF	25V 0.01U E, EB, EG, GN	R730	ERJ6GEYJ331V	1/10W 330
R17	ERQ1GNWR15E	1W 0.15 E, EB, EG, Δ	C20	ECBT1H102K85	50V 1000P GC	R731	ERJ6GEYJ392V	1/10W 3.9K
R21, 22	ERDSZTJ122	1/4W 1.2K E, EB, EG, GN	C21, 22	ECA1VM01B	35V 100U	R734-736	ERJ6GEYJ101V	1/10W 100
R21, 22	ERDSZTJ182	1/4W 1.8K GC	C25, 26	ECBT1H102K85	50V 1000P	R738	ERJ6GEYJ223V	1/10W 22K
R31	ERDSZTJ123	1/4W 12K	C30	ECBT1E103ZF	25V 0.01U GC, GN	R739	ERJ6GEYJ361V	1/10W 680
R32, 33	ERDSZTJ103	1/4W 10K	C31, 32	ECA1JM470B	63V 47U	R741-743	ERJ6GEYJ562V	1/10W 5.6K
R34	ERDSZTJ101	1/4W 100 E, EB, EG	C33	ECBT1H102K85	50V 1000P	R744	ERJ6GEYJ103V	1/10W 10K
R41	ERDSZTJ221	1/4W 220 E, EB, EG	C34	ECBT1H102K85	50V 1000P GC	R745	ERJ6GEYJ155V	1/10W 1.5M
R41	ERDSZTJ471	1/4W 470 GC, GN	C41	ECBT1H102K85	50V 1000P	R748	ERJ6GEYJ182V	1/10W 1.8K
R42	ERDSZTJ221	1/4W 220 E, EB, EG	C42	RCE0JKA101BV	6.3V 100U	R749	ERJ6GEYJ103V	1/8W 10K
R43	ERDSZTJ221	1/4W 220 E, EB, EG	C42	RCE0JKA101BV	6.3V 100U			
R44, 45	ERDSZTJ487T	1/4W 4.7 E, EB, EG	C301	ECBT1C103NS5	16V 0.01U			
R51, 52	ERDSZTJ122	1/4W 1.2K	C401	ECBT1C103NS5	16V 0.01U			CHIP JUMPERS
R401-407	ERDSZTJ472	1/4W 4.7K	C402	ECA0JM471B	6.3V 470U			
R409	ERDSZTJ102	1/4W 1K	C403	ECA1HKA010B	50V 1U	R714	ERJ6GEYR00A	CHIP JUMPER
R410	ERDSZTJ103	1/4W 10K	C404	ECEA1EKA4R7B	25V 4.7U	J701-704	ERJ6GEYR00A	CHIP JUMPER
R411	ERDSZTJ472	1/4W 4.7K	C405	ECBT1C103NS5	16V 0.01U	J707-709	ERJ6GEYR00A	CHIP JUMPER
R412	ERDSZTJ223	1/4W 22K	C406	ECEA1HKA010B	50V 1U	J714-717	ERJ6GEYR00A	CHIP JUMPER
R413	ERDSZTJ103	1/4W 10K	C421	ECBT1C103NS5	16V 0.01U	J721	ERJ6GEYR00A	CHIP JUMPER
R414	ERDSZTJ471	1/4W 470	C461	RCE1AKA470BG	10V 47U	J724-726	ERJ6GEYR00A	CHIP JUMPER
R415	ERDSZTJ103	1/4W 10K	C462	ECBT1C103NS5	16V 0.01U			
R416	ERDSZTJ102	1/4W 1K	C601	ECFR1E1042F5	25V 0.1U			CAPACITORS
R421	ERDSZTJ472	1/4W 4.7K	C801, 802	RCE1AKA470BG	10V 47U			
R461	ERDSZTJ121	1/4W 120 E, EB, EG	C805-808	ECCR1H91J5	50V 390P	C701	ECEA0JKA220	6.3V 22U
R461	ERDSZTJ271	1/4W 270 GC, GN	C809, 810	RCE0JKA470BG	6.3V 47U	C702	ECEA1HKA0101	50V 1U
R462	ERDSZTJ221	1/4W 220	C811, 812	ECBT1H102K85	50V 1000P	C703	ECEA0JKA1011	6.3V 100U
R463	ERDSZTJ121	1/4W 120 E, EB, EG				C704	ECUZNE104MBN	25V 0.1U
R471	ERDSZTJ103	1/4W 10K		<SERVO P. C. B. >		C705	ECEA1HKA0101	50V 1U
R472	ERDSZTJ121	1/4W 120		RESISTORS		C706	ECUE1H101JCN	50V 100P
R803, 804	ERDSZTJ224T	1/4W 220K	R701	ERJ6GEYJ100	1/10W 10	C707	ECUV1E273KBN	25V 0.027U
R805, 806	ERDSZTJ822	1/4W 8.2K	R702	ERJ6GEYJ471V	1/10W 470	C708	ECUE1H472KBN	50V 4700P
R807, 808	ERDSZTJ123	1/4W 12K	R703	ERJ6GEYJ823	1/10W 82K	C709	ECUE1C473KBN	16V 0.047U
R809-812	ERDSZTJ333	1/4W 33K	R704	ERJ6GEYJ102A	1/10W 1K	C710	ECUE1H152KBN	50V 1500P
R813-816	ERDSZTJ102	1/4W 1K	R705	ERJ6GEYJ102A	1/10W 1K	C711, 712	ECUWNE104ZFN	25V 0.1U
R817, 818	ERDSZTJ473	1/4W 47K	R706	ERJ6GEYJ103V	1/10W 10K	C713	ECUV1C104MBN	16V 0.1U
R819, 820	ERDSZTJ100	1/4W 10	R707	ERJ6GEYJ102A	1/10W 1K	C714	ECEA0JKA1011	6.3V 100U
R851	ERDSZTJ222	1/4W 2.2K	R708	ERJ6GEYJ473V	1/10W 47K	C715	ECEA0JKA4701	6.3V 47U
R852	ERDSZTJ102	1/4W 1K	R709	ERJ6GEYJ104V	1/10W 100K	C716	ECUE1H561KBN	50V 560P
			R710	ERJ6GEYJ683V	1/10W 68K	C717	ECUWNE104ZFN	25V 0.1U
			R711	ERJ6GEYJ154V	1/10W 150K	C718	ECUV1C224KBN	16V 0.22U
			R712	ERJ6GEYJ221V	1/10W 220	C721, 722	ECUE1H270JCN	50V 27P
			R717-720	ERJ6GEYJ102A	1/10W 1K	C723	ECEA1AKA2211	10V 220U
			R721	ERJ6GEYJ101V	1/10W 100	C724	ECUV1C104MBN	16V 0.1U
			R722	ERJ6GEYJ563V	1/10W 56K	C725, 726	ECUE1H102KBN	50V 1000P
			R723	ERJ6GEYJ182V	1/10W 1.8K	C727, 728	ECEA1HPK0101	50V 1U
C11	ECBT1E103ZF	25V 0.01U	R724	ERJ6GEYJ333V	1/10W 33K	C730	ECUWNE104ZFN	25V 0.1U
C12	ECA1QM332B	16V 3300U Δ	R725	ERJ6GEYJ472V	1/10W 4.7K	C731, 732	ECEA0JK2211	6.3V 220U
C15	ECBT1H102K85	50V 1000P	R726	ERJ6GEYJ473V	1/10W 47K	C733	ECUZNE104MBN	25V 0.1U

Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks	Ref. No.	Part No.	Values & Remarks
C734	ECEA1AKA2211	10V 220U	C743	ECUWNE104ZFN	25V 0.1U	C747	ECUE1H222KBN	50V 2200P
C735-737	ECUWNE104ZFN	25V 0.1U	C744	ECUE1E822KBN	25V 8200P	C748	ECUV1H471KBN	50V 470P
C738	ECUV1C154KBN	16V 0.15U	C745	ECUE1C473MBN	16V 0.047U			
C742	ECUV1E273KBN	25V 0.027U	C746	ECUE1H050DCN	50V 5P			

REPLACEMENT PARTS LIST

Notes : *Important safety notice:
 Components identified by Δ mark have special characteristics important for safety.
 Furthermore, special parts which have purposes of fire-retardant (resistors), high-quality sound (capacitors), low-noise (resistors), etc. are used.
 When replacing any of components, be sure to use only manufacturer's specified parts shown in the parts list.
 *Warning: This product uses a laser diode. Refer to caution statements on page 2.
 *ACHTUNG: Die Lasereinheit nicht zerlegen.
 Die Lasereinheit darf nur gegen eine vom hersteller spezifizierte einheit ausgetauscht werden.
 *The "(SF)" mark denotes the standard part.
 *[V] indicates in Remarks column parts that are supplied by Video Recorder Division.

Ref. No.	Part No.	Part Name & Description	Remarks	Ref. No.	Part No.	Part Name & Description	Remarks
				A4	RJAD036-K	AC POWER SUPPLY CORD	(GN) Δ (SF)
		PACKING MATERIAL		A5	SJPP249-3	STEREO CONNECTION CABLE	
				A6	RQLA0134	VOLTAGE CAUTION LABEL	(GC)
				A7	SJPS213-2	POWER PLUG ADAPTOR	(GC) Δ
P1	RPC2327	PACKING CASE	(E, EG, GC)			<GREASE OR JIG/TOOL>	
P1	RPC2328	PACKING CASE	(EB)			TEST DISC	
P1	RPC2365	PACKING CASE	(GN)				
P2	RPND760	CUSHION	(E, EG, GC)				
P2	RPND772	CUSHION	(EB, GN)				
P3	SPP730	PROTECTION BAG (UNIT)		SA1	SZP1054C	PLAYABILITY TEST DISC	
P4	RPFD139	PROTECTION BAG (F. B.)		SA2	SZP1056C	UNEVEN TEST DISC	
P5	RPHD032	MIRROR SHEET	(EB, GN)			ALLEN WRENCH	
		ACCESSORIES					
A1	RFKSLPD687E	INSTRUCTION MANUAL ASS'Y	(E)	SA3	SZP1101C	ALLEN WRENCH (M2.0)	
A1	RQT2773-B	INSTRUCTION MANUAL	(EB, GN)				
A1	RFKSLPD687EG	INSTRUCTION MANUAL ASS'Y	(EG)			LOCK PAINT	
A1	RFKSLPD687GC	INSTRUCTION MANUAL ASS'Y	(GC)	SA4	RZ20L01	LOCK PAINT	
A2	RQAD013	WARRANTY CARD	(E, EB, EG)			GREASE	
A2	RQX7433ZA	WARRANTY CARD	(GN)				
A3	RQCB0169	SERVICE CENTER LIST		SA5	RFKOPG671	MOLYCOAT GREASE PG671	
A4	RJAD019-2K	AC POWER SUPPLY CORD	(E, EG, GC) Δ (SF)				
A4	VJAD733	AC POWER SUPPLY CORD	(EB) Δ (SF) [V]				

